

PEWA Messtechnik GmbH

Weidenweg 21 58239 Schwerte

Tel.: 02304-96109-0 Fax: 02304-96109-88 E-Mail: info@pewa.de Homepage : www.pewa .de

BEDIENUNGSANLEITUNG (INSTRUCTION MANUAL)



INHALTSVERZEICHNIS

Titel

Caruction Man

Seite

I.	SICHERHEITSINFORMATIONEN Sicherheitssymbole	2 2
II.	ALLGEMEINE BESCHREIBUNG	2
III.	SPEZIFIKATION	3
IV.	FUNKTIONEN	4
V.	UHR UND EINSTELLUNGEN	7
VI.	KALIBRIERUNG	8
VII.	GERÄTEVORBEREITUNG	9
VIII.	MESSVORBEREITUNGEN	9
IX.	MESSUNG	10
Х.	Softwareeinstellung TestLink SE-322	10
XI.	Verwendung der Mikrofonverlängerung	17

I. SICHERHEITSINFORMATIONEN

Lesen Sie bitte sorgsam die folgenden Informationen, bevor Sie mit den Messungen beginnen.

nction M

Benutzen Sie das Messgerät nur in der beschriebenen Form, anderenfalls erlischt die auf das Gerät gewährleistete Garantie.

Umweltbedingungen

- Relative Feuchtigkeit max. = 90% rH
- Arbeitstemperaturbereich = 0...+ 40 °C.

Wartung & Reinigung

- Reparaturarbeiten am Gerät sollten nur durch den Hersteller durchgeführt werden.
- Halten Sie bitte as Gerät sauber und in trockenem Zustand.

Das Gerät unterliegt den allgemein gültigen Normen und Standards (IEC651 Typ2, ANSI S1.4 Typ2) und ist CE-zertifiziert.

II. ALLGEMEINE BESCHREIBUNG

Das Datenspeicher-Schallpegelmeter SL 322 verfügt über einen internen Datenspeicher für 32000 Werte. Immer, wenn Sie den "REC"-Knopf drücken und nach der Messung wieder den "REC"-Knopf, dann wird ein Datensatz in den Speicher geschrieben. Mittels der USB – Schnittstelle können die Messwerte zum PC Übertragen werden.

III. SPEZIFIKATION

Standards:	IEC651 Type2, ANSI S1.4 Type2		
Frequenzbereich :	31.5Hz ~ 8KHz		
Messbereich :	30 ~ 130dB		
Wichtung/Bewertung :	A/C		
Mikrophon:	1/2 inch Electret Kondensor Mikrophon		
Display1 :	LCD, 4-stellig		
Auflösung:	0.1dB		
Werteerneuerung:	0.5 s		
Display2 :	50 Segment Bargraph		
Resolution:	1dB		
Werteerneuerung:	alle 50 ms		
Zeitliche Bewertung:	FAST (125 ms), SLOW (1 sec.)		
Messbereiche:			
Lo:	30 – 80 dB		
Med:	50 – 100 dB		
Hi:	80 – 130 dB		
Auto:	30 – 130 dB		
Genauigkeit:	±1.5dB (unter Referenzbedingungen @ 94 dB, 1KHz)		
Alarmfunktionen:	"OVER" wird angezeigt, wenn der aktuelle		
	Messwert höher als der gewählte Messbereich ist "UNDER" wird angezeigt, wenn der aktuelle		
	Messwert niedriger als der gewählte Messbereich		
	ist		
MAX/MIN-Wert:	Hold-Funktion für den Kleinst- u. Höchstwert		
AC-Ausgang:	1 Vrms / bezogen auf den Maximalwert des		
5 5	gewählten Messbereiches)		
Ausgangsimpedanz :	ungefähr 100Ω		
DC-Ausgang:	10mV / dB		
Stromversorgung :	9V-Batterie (typisch für 50 Betriebsstunden)		
AC-Adapter:	9 VDC (8-15VDC Max, Netzadapter)		
Anliegende Versor	gung: > 30mADC Stecker: pin \rightarrow Masse		
Arbeitstemperatur:	0+40 °C (32 +104 °C)		

.

Struction Mark

	uction Ma
	e contra
Arbeitsfeuchte:	10 bis 90% rH
Lagertemperatur:	-10 60 °C (14 140 °C)
Lagerfeuchte:	10 bis 75%rH
Dimensionen:	275 (L) × 64 (W) × 30 (H)mm
Gewicht:	285g (inkl. Batterie)
Zubehör:	9V Batterie, Tragetasche, Schraubendreher,
	Bedienungsanweisung. Windschutz,
	3.5V-Stecker, Software, RS-232

IV. Funktionen



(1) Windschutz

Wenn Sie bei Windgeschwindigkeit > 10m/s messen, verwenden Sie bitte den Windschutz auf dem Mikrofon

Ction A

(2) Display



MAX	Maximalanzeige
MIN	Minimalanzeige
OVER	Überbereichsanzeige
UNDER	Unterbereichsanzeige
FAST	Schnelle Antwort
SLOW	Langsame Antwort
dBA	A-Bewertung
dBC	C-Bewertung
88 - 180	Bereichswahl
<u> </u>	Batterie "schwach"
-10-	Unterbereich 20dB

(3) Betrieb

Der (1) schaltet das Gerät und die Hintergrundbeleuchtung an und aus.

Drücken Sie die Taste einmal, um das Gerät ein- o. auszuschaltenhalten Sie die Taste einen Moment gedrückt, um Hintergrundbeleuchtung ein oder auszuschalten.

Halten Sie die Taste ca. 3s lang gedrückt, um das Gerät abzuschalten.

<u>Anmerkung</u>: Beim Einschalten wird der zur Verfügung stehende Speicherplatz angezeigt.



(4) MAX / MIN Halte-Taste

Durch Drücken dieser Taste wird nur der Max-Wert angezeigt. Der aktuelle Wert ist nur noch durch die Bargraph-Anzeige zu sehen. Durch weiteres Drücken der Max/Min-Taste wird nur der Min-Wert angezeigt. Um diesen Modus zu deaktivieren, halten Sie die Taste 2s lang fest.

(5) Datalogger-Taste

Wenn Sie diese Taste einmal drücken, beginnt das Gerät mit der Aufzeichnung. Ein weiteres Drücken stoppt die Datenaufzeichnung.

(6) Frequenz-Bewertungs-Taste

A: A-Bewertung für allgemeine Messungen

C: C-Bewertung zur Messung im niederfrequenten Bereich

(7) Taste für zeitliche Bewertung

FAST, (schnell): für normale Messungen und zur Erfassung von Schallspitzen

SLOW, (langsam): für die Messung des Durchschnitts-Pegels bei stark wechselnden Messwerten

(8) Bereichs-Kontroll-Taste

Immer, wenn Sie dies was Taste drücken, wechselt der Messbereich zwischen "Lo", "Med", "Hi" und "Auto" Level.

(9) Mikrofon

1/2 inch Electret Kondensor Mikrofon

(10) CAL-Potentiometer

Wird zur Kalibrierung des Gerätes benutzt (Abschnitt Kalibrierung).



(11) RS-232 Schnittstelle:

RS-232 - Signalausgang: 9600 Baud N, 8, 1, seriell.

(12) Signalausgabe

AC: 1 Vrms, jeweils anliegend beim Maxwert eines jeden Messbereiches (verwendet wird zur Übertragung ein Standard-Koaxialkabel 3,5 mm)

Bemerkung: Im "Auto" Level-Bereich müssen Sie "Lo" oder "Med" oder "Hi" – Bereichswahl vorgeben.

DC: 10mV/dB

Ausgangsimpedanz 1 K Ω

(verwendet wird zur Übertragung ein Standard-Koaxialkabel 3,5 mm)

- (13) Externer DC 9V-Eingang für Adapter-Spannungsversorgung
- (14) Gewindebohrung zur Montage eines Stativs
- (15) Batteriefachdeckel

V. UHR UND EINSTELLUNGEN

DataLogger:

- Wenn Sie die "REC"-Taste einmal drücken, beginnt die Aufzeichnung. Wenn Sie die Taste wieder drücken, wird die Aufzeichnung gestoppt.
- Wenn Sie die gespeicherten Daten löschen möchten, schalten Sie das Gerät aus, drücken und halten Sie den "REC"-Schalter zusammen mit dem Ein-Schalter für 5 Sekunden. Dann erscheint "CLR" und "SURE" auf dem Display.



ction A

• Uhr Setup :



- 1: Drücken u. halten sie die "A/C" Taste und schalten Sie das Gerät ein.
- 2: Drücken Sie die "MAX MIN"(Uhr)-Taste:



 3: Drücken Sie die "REC" ▲-Taste oder die "LEVEL"
 ▼ – Taste, um den nächsten Menüpunkt auszuwählen. Die Auswahlreihenfolge ist "year : month : day : hour : minute" (Jahr, Monat, Tag, Minute). Dann drücken Sie die "**MAX MIN**"(Uhr) – Taste noch einmal, um den Vorgang zu beenden.

sction A

Aufnahmeeinstellungen:



- 1: Drücken u. halten Sie die "A/C" Taste und schalten das Gerät ein:
- 2: Wählen Sie "FAST/SLOW" (INTV):
- Brücken Sie "REC" ▲ oder "LEVEL" ▼ um die jeweilige Einstellung vorzunehmen. Ebenso für "FAST/SLOW " (INTV) und noch einmal "FAST/SLOW" (INTV), um die Einstellungen zu beenden. Wenn Sie den Vorgang abbrechen möchten, schalten Sie das Gerät einfach ab.

Auto Power Off:

Standardmäßig schaltet sich das Gerät nach30 min ab. Diese Funktion lässt sich abschalten. Drücken und Halten Sie die "FAST/SLOW" – Taste, schalten Sie das Gerät ein und die autom. Abschaltung ist ausgeschaltet.

VI. KALIBRIERUNG



 Stellen Sie das Gerät wie folgt ein: Display = dBA, zeitl. Bewertung = FAST, Messmodus: MAX MIN Mode- Funktion ausstellen, Messbereich: 50 ... 100dB

ction /

- (2) Stecken Sie das Gerät mit der Mikrofonspitze in die Öffnung des Kalibrators.
- (3) Schalten Sie die Kalibrierfunktion ein und justieren Sie das Gerät mittels der Potentiometerschraube auf exakt 94 dB ein (Anzeigewert im Display). Allgemein: Das Gerät ist werksseitig kalibriert – eine Nachkalibrierung ist je nach Einsatzzweck sinnvoll.

VII. GERÄTEVORBEREITUNG

(1) Batterie

Entfernen Sie den Batteriedeckel u. legen Sie die 9V Batterie ein.

(2) Batterietausch

Wenn die zur Messung benötigte Spannung abfällt, erhalten Sie ein Warnzeichen. Es ist die Batterie zu tauschen.

(3) AC Adapter

Wenn Sie einen AC-Strom-Adapter benutzen, stecken Sie diesen bitte an den DC9V- Anschluss an der Seite des Gerätes an.

VIII. MESSVORBEREITUNGEN

Bei Wind sollten Sie den Windschirm aufsetzen.

- (1) Das Gerät sollte kalibriert sein.
- (2) Benutzen Sie das Gerät nur im Bereich der spezifizierten Umweltbedingungen.
- (3) Schützen Sie das Mikrofon vor Feuchtigkeit u. halten Sie das Gerät sauber.
- (4) Achten Sie bitte darauf, dass eine "volle" Batterie eingesetzt ist (Wenn Sie das Gerät längere Zeit nicht benutzen, so entfernen Sie bitte die Batterie)



IX. MESSUNG

- (1) Schalten Sie das Gerät ein und wählen Sie die von Ihnen gewünschten Parameter und Einstellungen aus. Standardmäßig wird die A-Bewertung verwendet, um dem menschlichen Hörempfinden nahe zu kommen.
- (2) Halten Sie das Messgerät in Richtung der Schallquelle
- (3) Wenn Sie die Min-Max-Hold-Funktion angewählt haben, halt das Gerät diese Werte fest. Drücken Sie die MAX-MIN-Taste 2 Sekunden fest, um die "alten" Werte aus dem Display zu löschen.

X. Softwareeinstellung TestLink SE-322

- Das Link-Paket beinhaltet:
 1.) 80mm CD-ROM
 2.) USB-Verbindungskabel
- Systemvoraussetzungen:

Windows 95 oder Windows 98

 Hardwarevoraussetzungen: PC oder Notebook mit Pentium 90MHz oder höher, 32 MB RAM, Min. 5 MB verfügbarer Festplattenspeicher zur Installation.

• Anleitung zur Installation des USB-Treibers USB-120 und für Software USB-300

- Paket enthält:
 - 1.) Installations-CD
 - 2.) USB-RS232-Adapter
 - 3.) Anleitung
- Benötigtes System: Windows 95/98/2000NT 4.0/XP oder höher
- Benötigte Hardware:
 PC oder Laptop mit USB-Anschluss



Installation TestLink:

- 1.) Wir empfehlen alle anderen Anwendungen vor dem Installationsstart zu schließen.
- 2.) Bitte stecken Sie nicht den USB-Stecker vor der Installation in den PC.
- 3.) Bitte legen Sie die Installations-CD in das Laufwerk ein. Das Installationsprogramm startet automatisch. Falls nicht, bitte rufen Sie über die Startleiste den Menüpunkt "Ausführen" auf. Geben Sie den Laufwerksbuchstaben für das CD-Laufwerk ein und rufen das "SETUP" auf. Z.B.: E:\SETUP
- 4.) Während der Installation wird das nachfolgende Fenster gezeigt. Bitte "Next" anklicken.



5.) Wenn das nachfolgende Fenster erscheint, bitte den USB-Stecker anschließen, die Installation erkennt das Instrument.

Plug in the hardware	×
The installer has detected that the plus in 0 w hardware associated w	r hardware associated with this package is not currently plugged-in to the computer. Please All this package after the installation has completed successfully.

6.) Nach erfolgreicher Installation rufen Sie bitte über die Startleiste "Einstellungen" und anschließend "Systemsteuerung" bzw. "System" auf.

8	*••*
8	Epidere Riedzane Automotie Underson Francise
	Unite Kowari
	The Davidor Monoger Lists of the handware device: Include: onyour compade: Lists the Davide Maxings to change for poperties of any device
	Common Manager
	Divers 5 going his younside size has installed diversion cooperative with Worksons Vertices into you, using how Workson with the Window Connection is Window Updates in choses
	Doles Samna Salindares Undere
	Karkines Public
1	different had water contributions
1	Hadware Bollies

7.) Wählen Sie die Option "Hardware" aus und klicken dann auf "Gerätemanager". Wählen Sie in der Liste "Ports" bzw. "ser. Eingänge" (+ Symbol) aus und klicken das + Symbol an. Kontrollieren Sie ob in der Liste "CP2101 USB to UART Bridge Controller" vorhanden ist.



Installation:

- 1. Alle Anwendungen schließen. Schieben Sie die Diskette 1 in das Laufwerk
- Betätigen Sie die "Start"-Schaltfläche u. wählen Sie "Run". Geben Sie ein: A:\SETUP und drücken Sie "OK". Die Dateien werden dann auf Ihre Festplatte kopiert.

Haupt-Menü

File | Open - ... öffnet Dateien von der Diskette
Save – Speichert die Bildschirmdaten auf der Diskette
Print – Druckt die aktuelle Bildschirmoberfläche aus
Printer Setup – Sie können den Drucker auswählen
File | Exit: Beendet das Programm.
View | Control Panel: Beim ... Öffnung dieses Fensters können
Sie die Messung "online" beobachten
View | Real-Time Graph: Hiermit können Sie sich in Echtzeit eine
grafische Darstellung der Messungen ansehen
Real Time Data | Run – Hiermit starten Sie die Darstellung
der Messwerte
Stop – Hiermit stoppen Sie die Echtzeitdarstellung der
Messwerte
DataLogger: Hiermit können Sie gesammelte Daten aufrufen
Output To Graph – Hiermit können Sie die Werte grafisch

, ction M

anzeigen

<u>Graph</u>



Schaltflächen

- Anzeigen oder Verdecken von Statistik1
- BB Anzeigen oder Verdecken von Statistik2
 - 🔍 Cursor



- Kreuz mit dem Kreuz können Sie Markierungen vornehmen
- Das Drücken dieser Schaltfläche verwandelt den Cursor in ein "I"-Zeichen



т

- Farbgrafik
- 🗄 Graustufen-Grafik

Sie können den schwarzen Pfeil zum "zoomen" benutzen. Bei "Doppel-Klicken" auf die Grafik öffnen Sie die Dialog-Funktion. Hier können Sie Grafikeinstellungen nach Ihren Wünschen vornehmen. Durch Drücken der rechten Maus-Taste erhalten Sie ein Schnell-Menü.

DataLogger



Wenn Sie das Gerät mit einem PC verbunden haben drücken Sie (oder Über die Auswahl im Hauptmenü "Datenlogger"), mit dem Schallpegelmeter gespeicherte Daten zum PC zu Übertragen. Sie erhalten kontinuierliche Informationen über den Fortgang des Übertragungsprozesses. (Sollten Sie eine Fehlermeldung erhalten, drücken Sie erneut "Datenlogger") Nachdem die Daten übertragen wurden, wird auf der linken Seite angezeigt, wie viele Datensätze Übertragen wurden (auch Startzeit, Sammelzeit usw.). Beispiel folgend:

Data Sets				
Set	DATE	TIME	Rate	Nums
1	1999/7/25	PM 01:24:52	00:02	10
2	1999/7/25	PM 01:25:38	00:02	5142
3	1999/7/25	PM 09:29:08	00:02	21
4	1999/7/25	PM 09:32:04	00:02	3
5	1999/7/25	PM 09:32:09	00:02	1
6	1999/7/25	PM 09:32:14	00:02	9
7	1999/7/25	PM 10:03:43	00:02	1896
8	1999/7/25	PM 11:06:57	00:02	3
9	1999/7/25	PM 11:49:47	00:02	9086

ction M

Durch Anklicken eines Datensatzes holen Sie ihn sich auf den Bildschirm

Tutorial – Online - Schnellstart

(1.) Aufnahme von Daten in Echtzeit in Wellenform

- 1. Schalten Sie das Gerät ein und verbinden Sie es mit dem PC
- 2. Starten Sie das SE322- Programm
- 3. Nun werden die Messdaten am Gerät parallel auf dem Bildschirm angezeigt



- 4. Drücken Sie 🔟 um die Darstellung in Echtzeit zu starten
- 5. Drücken Sie 🔳 um die Darstellung zu stoppen

(2.) Wie speichert man die Echtzeit-Daten ab?

1. Drücken Sie auf die Grafik, die Sie speichern möchten und wählen Sie dann "File | Save" aus dem Hauptmenü aus oder



2. Sie erhalten dann einige Speichermöglichkeiten zur Auswahl (Dateiname, Format usw.). Die gewonnenen Daten können auch in anderen Programmen, wie Microsoft Excel, geöffnet werden (ebenfalls die Grafiken).

, ction M

Save Saveto().	4 54-102	-	লা গ	
C Whi Gooh Helfogh Helfogh Selene Colt2	0.5kg 0.1kg 0.1kg 0.1kg 0.7kg 0.7kg 0.7kg 0.0			
file Name (II):	<u> </u>			Seve 😩
File Type 🔘	Cophille(* dh/ody Cophille(* dh/ody TAT f.h (* bd/dab.or	For ST 222) Including pended by th	21 21	Canad

- (3.) Wie lädt und speichert man Datensätze, die mit der Datenlogger-Funktion des Messgerätes erfasst und im Gerät abgespeichert sind?
 - 1. Schalten Sie das Gerät ein
 - 2. Verbinden Sie das Gerät mit dem PC
 - 3. Starten Sie das SE322-Programm
 - Wählen Sie die Funktion "Datenlogger" aus dem Menü an oder drücken Sie auf die
 Schaltfläche (die

Daten werden Übertragen)



sction M

Fehlermöglichkeiten

(1.) Anzeige "NO CONNECTION"

Es kann sein, dass die seriellen Schnittstellen durch andere Anwendungen benutzt werden \rightarrow schließen Sie alle Anwendungen und starten Sie den PC neu.

(2.) Datenübertragungsfehler

Dies kann an einer zu kurzen Antwortzeit bestimmter Notebooks oder PC's liegen.

XI. Verwendung der Mikrofonverlängerung

Um Messungen durchzuführen ohne das Messgerät der Witterung auszusetzen kann man optional eine Mikrofonverlängerung käuflich erwerben. Zur Verwendung dieser Verlängerung wird die Rändelmutter direkt unterhalb des Mikrofons gedreht. Dadurch wird das Mikrofon aus seiner Steckverbindung gelöst

<u>Achtung</u>: Niemals direkt das Mikrofon drehen, da durch dieses Drehen das Mikrofon beschädigt wird.

CONTENTS

Struction Man

Title		
I.	SAFETY INFORMATION Environment conditions Maintenance & Clearing Safety symbols	19 19 19 19
П.	GENERAL DESCRIPTION	19
III.	SPECIFICATIONS	20
IV.	NAME AND FUNCTIONS	21
V.	CLOCK & INTV SETUP DataLogger Clock Setup Recording Interval Setup Auto Power Off	24 24 24 25 25
VI.	CALIBRATION PROCEDURES	26
VII.	MEASUREMENT PREPARATION	27
VIII.	OPERATING PRECAUTIONS	27
IX.	MEASUREMENT	27
Х.	Setup TestLink SE-322 (Sound Level Meter) – USB interface software	28

I. SAFETY INFORMATION

Read the following safety information carefully before attempting to operate or service the meter.

, ction A

Use the meter only as specified in this manual; otherwise, the protection provided by the meter may be impaired.

Environment conditions

- Altitude up to 2000 meters
- Relatively humidity 90% max.
- Operation Ambient 0 ~ 40¡C

Maintenance & Clearing

- Repairs or servicing not covered in this manual should only be performed by qualified personnel.
- Periodically wipe the case with a dry cloth. Do not use abrasives or solvents on this instruments.

Safety symbols

CE Comply with EMC

When servicing, use only specified replacement parts.

II. GENERAL DESCRIPTION

Thank you for using our Data Logger Sound Level Meter. To ensure that you can get the most from it, we recommend that you read and follow the manual carefully before use.

This unit conforms to the IEC651 type2, ANSI S1.4 Type2 for Sound Level Meters.

This Data Logger Sound Level Meter internal memory can keep up to 32000 records.(Note 1.)

It uses USB interface to perform bi-directional communication with PC.

Note1:

Every time you press "REC" button to start recording data and press "REC" button again to stop recording, there will be a data set in memory, you can store as many data sets as you want unit memory is full.



III. SPECIFICATIONS

Standard applied:	IEC651 Type2, ANSI S1.4 Type2.		
Frequency range:	31.5Hz ~ 8KHz		
Measuring level range:	30 ~ 130dB		
Frequency weighting:	A / C		
Microphone:	1/2 inch electret condenser microphone		
Display:	LCD		
Digital display:	4 digits		
Resolution:	0.1dB		
Display Update:	0.5 sec.		
Analog display:	50 segment bargraph		
Resolution:	1dB		
Display Update:	50 mS		
Time weighting:	FAST (125 ms), SLOW (1 sec.)		
Level ranges:			
Lo:	30 – 80 dB		
Med:	50 – 100 dB		
Hi:	80 – 130 dB		
Auto:	30 – 130 dB		
Accuracy:	±1.5dB (under reference conditions @ 94dB,		
	1KHz)		
Dynamic range:	100 dB		
Alarm function:	"OVER" is when input is more than upper limit of		
	range.		
	" UNDER " is when input is Less than lower limit		
	of range.		
MAX/MIN hold:	Hold readings the Maximum and Minimum Value.		
AC output:	1 Vrms at FS (full scale).		
Output impedance:	Approx. 100Ω		
FS:	means the upper limit of each level range.		
DC output:	10mV / dB , output impedance approx. 1K Ω		
Power supply:	One 9V battery, 006P or IEC 6F22 or NEDA		
	1604.		
Power life:	About 50hrs (alkaline battery)		

	ction An
	STUCE STE
AC adapter.	
Supply current .	> SUITADC
Socket:	$pin \rightarrow Ground$
	Casing \rightarrow Positive
	External Diameter \rightarrow 3.5mm
	Internal Diameter \rightarrow 1.35mm
Electromagnetic Compa	tibility:
RF field = 3V/m	
Total accuracy = s	pecified accuracy + 0.5dB
Operation temperature:	0 to 40°C(32 to 104°C)
Operation humidity:	10 to 90%RH
Storage temperature:	-10 to 60°C(14 to 140°C)
Storage humidity:	10 to 75%RH
Dimensions:	275 (L) ×64 (W) ×30 (H)mm
	10.8 (L) ×2.5 (W) ×1.2 (H)inch
Weight:	285g (including battery)
Accessories:	9V battery, carrying case, Screwdriver,
	Instruction manual. Windscreen, 3.5 plug,
	software, RS-232 cable.

IV. NAME AND FUNCTIONS



(1) Windscreen

_ _ _

- - --

_ - _

If you operate at wind speed over 10m/sec, please put protective accessories in front of the microphone.

_ _ _

- - --

_ _ _

uction Ma

(2) Display

<u>SYMBOL</u>	<u>FUNCTION</u>			
LCD	4 digits			
MAX	Maximum indication			
MIN	Minimum indication			
OVER	Over range			
UNDER	Under range			
FAST	Fast response			
SLOW	Slow response			
dBA	A-Weighting			
dBC	C-Weighting			
88 - 180	Range Indicate			
ĒŦ	Low-Battery			
-LO	Under range 20dB			
AUTO	Auto Level range selective			
REC	Recording Datalogger			

(3) Power & Backlight button

FULL

The (1) key turns the sound level meter ON or OFF and backlight ON & OFF.

Memory full

Auto Power OFF active

Press it once to turn on the sound level meter.

Press it again for moment to turn ON or OFF backlight.

Press and hold this button 3 second to turn OFF the power.

<u>Note</u>: When the user power it on, the LCD will show how much memory space is available to use.

, ction A

(4) MAX / MIN hold button

Press button to enter the maximum and minimum recording mode. Select the proper Level range before using MAX/MIN to ensure that reading value will not exceed the measurement range. Press once to select MAX value. Press again to select MIN value, and press again to select current value with "MAX MIN " annunciator blinking.

Press $\textcircled{\mbox{\sc model}}$ and hold down button for 2 seconds to exit the MAX MIN mode.

<u>Note:</u> If change sound level range or change A-C weight, the MAX.MIN mode will <u>Clear</u>.

(5) Record Datalogger button

When one press the button, the meter will star recording. The "REC" annunciator are display, press again will stop recording.

(6) Frequency Weighting select button

A: A - Weighting. for general sound level measurements.

C: C - Weighting. for checking the low-frequency content of noise.

(If the C-Weighted level is much higher than the A-weighted level, then there is a large amount of low-frequency noise)

(7) Time weighting select button

FAST : for normal measurements

SLOW : for checking average level of fluctuating noise.

(8) Level range control button

Each time you press we button, the level range will change between "Lo" level, "Med" level, "Hi" level and "Auto" level in the circular.

(9) Microphone

1/2 inch Electret Condenser microphone

(10) CAL potentiometer

Calibration control, For level calibration adjustment.



(11) RS-232 Interface:

The RS-232 signal output is a 9600 bps N, 8, 1 serial interface.

(12) Signal output terminal

AC: 1 Vrms Corresponding to each range step.

Output impedance 100Ω

Output signal by standard 3.5mm coaxial socket signal on pin.

<u>Note</u>: At "Auto" level range, output signal is Auto select on "Lo" or "Med" or "Hi" level range.

DC: Output: 10mV/dB



ction A

Output impedance $1K\Omega$

Output signal by standard 3.5mm coaxial socket signal on middle.

(13) External DC 9V power supply terminal

For connection with AC adapter.

(14) Tripod mounting screw.

(15) Battery Cover

V. DATA LOGGER CLOCK & INTERVAL SETUP

DataLogger:

When one presses the "REC" button, the meter will start recording, and pressing the "REC" button again will stop recording, If you want to clear the memory, power off the meter, then press and hold "REC" button and then press power button and hold at least 5 seconds, then LCD will show "CLR" and "SURE" to clear the memory.



Saturtion Market

Clock Setup :



1: press and hold "A/C" button and then power on the meter:

- 2: press "MAX MIN"(clock) button:
- 3: press "REC" ▲ or "LEVEL" ▼ to increase or decrease number, press "MAX MIN"(clock) to adjust next item. The adjusting order is year → month → day → hour → minute, then press "MAX MIN" (clock) to finish adjusting. If you want abort during a setup process, press power button to cancel.

Recording Interval Setup :



- 1: press and hold "**A/C**" button and then power on the meter:
- 2: press "FAST/SLOW"(INTV) button:



3: press "**REC**" ▲ or "**LEVEL**" ▼ to increase or decrease number, press "**FAST/SLOW** " (INTV) to adjust next item, then press "**FAST/SLOW**" (INTV) to finish. If you want abort during a setup process, press power button to cancel.

• Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation and no USB communication and no recording combination at power on can disable auto power off.

One may press and hold "**FAST/SLOW**" button and then power on the meter and the **O** will not show up to indicate that auto power off is disabled.



- Make the following switch settings.
 Display : dBA
 Time weighting : FAST
 Measurement mode : MAX MIN Mode function disable.
 Level range : 50 to 100dB
- (2) Insert the microphone housing carefully into the insertion hole of the calibrator.
- (3) Turn on the switch of calibrator and adjust the CAL potentiometer of the unit . The level display will indicate the desired level. All products are well calibrated before shipment. Recommended Recalibration cycle: 1 year.

VII . MEASUREMENT PREPARATION

(1) Battery Loading

Remove the battery cover on the back and put in one 9V Battery.

nction M

(2) Battery Replacement

When the battery voltage drops below the operating voltage, this symbol will appear **E** Replace 9 Volt battery.

(3) AC Adapter Connection

When the AC adapter is used , insert the plugs of the adapter into the DC9V connector on the side panel.

VIII. OPERATING PRECAUTIONS

- (1) Wind blowing across the microphone would bring additional extraneous noise. When using the instrument in the presence of wind, it is a must to mount the windscreen to not pick up undesirable signals.
- (2) Calibrate the instrument before operation if the instrument was not in use for a long time or operated in bad environment.
- (3) Do not store or operate the instrument at high temperature and high humidity environment.
- (4) Keep microphone dry and avoid severe vibration.
- (5) Please take out the battery and keep the instrument in low humidity environment. When not in use.

IX. MEASUREMENT

- (1) Open battery cover and install a 9V battery in the battery compartment.
- (2) Turn power on and select the desired response Time and Weighting. If the sound source consists of short bursts or only catching sound peak, set response to FAST. To measure average sound level, use the SLOW setting.

Select A-weighting for general noise sound level and C-weighting for measuring sound level of acoustic material.

(3) Select desired Level.

(4) Hold the instrument comfortably in hand or fix on tripod and point the microphone at the suspected noise source, the sound pressure level will be displayed.

uction M

- (5) When MAX MIN (maximum, minimum hold) mode is chosen. The instrument captures and holds the maximum and minimum noise level for a long period using any of the time weightings and ranges. Press the MAX MIN button 2 seconds to clear the MAX/MIN reading . " MAX/MIN " symbol disappears.
- (6) Turn OFF the instrument and remove battery when not in use.

X. Setup TestLink SE-322 (Sound Level Meter)– USB interface software:

- The TestLink package contains: 1.80mm CD. 2.Custom designed USB cable for TestLink.
- System Required:

Windows 95 or Windows 98 or Windows NT 4.0 above.

• Minimum Hardware Required:

PC or NoteBook with Pentium 90MHz or higher, 32 MB RAM ; At least 5 MB byte hard disk space available to install TestLink. Recommended resolution 800X600.

• USB-120 / USB-300 Driver Installation Guide

- Package contains:
 - (1) Install CD
 - (2) USB to RS232 adaptor
 - (3) Install manual
- System Required: Windows 95/98/2000NT 4.0/XP or above
- Hardware Required:
 PC or Laptop with USB port



• Install TestLink:

- 1.) We recommend close all other application before installing driver.
- 2.) We recommend not plug connector to USB port before installation.
- Insert setup CD disk to CD disk drive, installation will execute automatically. If not, execute "start" → "run", and edit X:\SETUP (X is your disk drive), then click OK button, installation will start.
- 4.) While installing, it will show this window below, just click "next" to continue.



5.) When this window below appears, please plug in the connector to USB port, installation will confirm the device.



6.) After finish installation, execute "start" → "My Computer", then choose "View System Installation" on the left top of the window, the window below will show up:

<u>ل</u>	S.	
		Spinn Property of the second second second
		Spiese Factors Advance Hosters Servers Carcine search Hosters
		The Circle Nonzen bit of the handware of man compare Use for the horizon the same man compare Use for the horizon the same
		()
		Tables: Codes: policipation a rear to you to a chemit hadrues carriguides:
		The interval of the deriver section by the section of the sec

7.) Choose "Hardware" option and click "Device Manager" button, click "+" symbol on the left side of Ports (COM &LPT), if the divice "CP2101 USB to UART Bridge Controller (COMx)" is in the list, the connector is ready to work.

Pier Action View Help	
8 4 6 3	
Protes (COMI (LPT)) Protes (COMI (LPT)) Communications Part (COMI) Protections Part (COMI) Protections Protections Protections	ar (cor45)

Install TestLink:

- 1.We recommend close all other application before installing TestLink
- 2.Insert setup CD disk to CD disk drive.
- 3. Choose the Start button on the Taskbar and select Run.
- 4.Type E:\SETUP and choose OK, then it will copy SE322.exe (executable file) and help file to your hard disk (default is c:\program files\TestLink\SE322).

For detailed other operation instruction, please refer to the online help while executing SE322.

Main Menu

File | Open - Retrieve files from the disk.

<u>Save</u> - Save the active window (when the caption bar is highlighted) data to the disk.

ction M

Print - Print the data of the active window (graph or list).

Printer Setup - Select printer.

File | Exit: Terminates TestLink program.

View | Control Panel: By opening the Panel Window, the user can control meter via the button in this window.

View | Real-Time Graph: Open Real-Time Graph display to graph the present data.

Real Time Data | Run - Start collecting real time data .

Stop - Stop collecting real time data .

DataLogger: By opening the DataLogger Window, the user can load recorded data of meter to PC in this window.

Output To Graph - Graphing tabular data . interface. For

better result, the user may close the panel window .

<u>Graph</u>



<u>Tool Bar</u>



- Display or hide Statistic1.
- 📲 Display or hide Statistic2.
 - Normal cursor.

• When selected, the mouse cursor will become a cross sign when moving to the graph, click on the graph to mark a cross sign on the graph.

ction 4

- When selected, the mouse cursor will become a "I" sign when moving to the graph, click on the graph to annotate.
 - Color graph.
 - 4 Monochrome graph.

You can choose a rectangle area on the graph to zoom in for detail.

There are two vertical line (CURSOR A and CURSOR B)in the graph. There are time and value display on top and right side of each cursor. You can move mouse cursor over cursor A or B and click to drag cursor to move left or right. Right below cursor A and B is a slider. You can also click and drag slider to move cursor A or B. Below the slider is the statistic, it displays start time, sampling rate, data number, maximum and minimum of the graph. The statistic also displays the maximum, minimum and average between cursor A and B and these data will update automatically when cursor A or B is moving.

You can double click the graph to call the option dialog. In option dialog, it is allowed to customize your graph style.

And you can right click the graph(real time graph is not allowed) to call out the popup menu.

You can Zoom this graph by using mouse:

To Zoom:

- 1. Press the left mouse button and drag the cursor to select the new extents.
- 2. Release the mouse button.

To Undo the Zoom - Right click on the graph, there will be a pop-up menu, select Undo Zoom .

Saruction Martin

DataLogger



When you have Sound Level DATA LOGGER meter connected to PC and select "DataLogger" from main menu or click if from tool bar to load recoreded data from the meter and there will be a progress indicator to show the loading progress. if error occurs, just click "DataLogger" again.

After the data was loaded, the left hand side will show how many data sets were loaded and detail information for each data set (start data, start time, recording rate and record numbers).

for examples:

Data Sets					
Set	DATE	TIME	Rate	Nums	
1	1999/7/25	PM 01:24:52	00:02	10	
2	1999/7/25	PM 01:25:38	00:02	5142	
3	1999/7/25	PM 09:29:08	00:02	21	
4	1999/7/25	PM 09:32:04	00:02	3	
5	1999/7/25	PM 09:32:09	00:02	1	
6	1999/7/25	PM 09:32:14	00:02	9	
7	1999/7/25	PM 10:03:43	00:02	1896	
8	1999/7/25	PM 11:06:57	00:02	3	
9	1999/7/25	PM 11:49:47	00:02	9086	

It will transfer first data set to graph and tabular on the right hand side every time after you load recorded data from the Sound Level Meter and you can click at any data set to change the set for graph.

, ction A

On the right hand side is the waveform graph and statistic of the data set you choose. In reference to graph.

Tutorial - Quick Start to Use SE322 TestLink

(1.) Recording real time data in waveform.

- 1. Power on the Sound Level Meter first and connect it to a PC RS-232 serial port wit the cable(SE-300)
- 2. Start SE322 program.
- 3. If the connection is successful the panel will display the same value as the Sound Level Meter. If fail to connect the meter with PC, it will display "No Connection" on the panel window in TestLink Se322.



- 4. When the connection is successful, click 🔟 to start recording real time data and there will be a waveform on the Real Time Graph Window.
- 5. Click 🔳 to start recording .

(2.) How to save the recorded real time data to a file ?

 Click the graph window you want to save and the graph window will become active, then choose File | Save from main menu or click from the tool bar.



2. There will be a save dialog window for you to choose the file name and file type to save. There are three types of file name you can choose, binary file(*.ghf), text file(*.txt) and EXCEL format file(*.csv). The *.ghf file use much fewer disk space to save the data than the other two file format, but it can only be used in TestLink SE322. Text file can be opened by TestLink SE322 and any other word processor program like word, notepad etc. EXCEL format file can be opened by TestLink SE322 and Microsoft EXCEL.

Save Sevetor]). 🔀	a 54322	-	ল গ্ৰ	
Civiti Gooh HelySugh Selver. Selver. Selver. Selver.	CiliSing Ciliente Ciliente Ciliente CiliPhotico			
File Name (E):	Coshfile" dd.ool-	8: 51 722	च	Seve (2) Canad
the spectrum	Coold Clay & Chiloral 1911 Ella (* Educational	personal log is	4	

- (3.) How to load the recorded data from the memory of Sound Level Meter and save it to a file ? (Only for the model with Data Logger)
 - 1. Power on the Sound Level Meter.
 - 2. Press the REC button of the meter to start recording data .
 - 3. After a while, press REC button again to stop recording data.

- 4. Connect the Sound Level Meter to PC
- 5. Start SE322 program.
- 6. Choose Data Logger from main menu or click 🖳 from tool bar.

struction Mg



7. In reference to Data Logger , see DataLogger.



Frequently Asked Question

1. I had connected Sound Level Meter to PC serial port and turned meter power on, but it still show "NO CONNECTION".

Answer: It could be that all serial port are occupied by other application, close all other application. If it still don't work. Restart your computer and run TestLink SE322 again.

2. How can I save the graph to a file which can be used in

EXCEL ?

Answer: When you save a graph to a file , the default file format is "*.ghf" and you can select *.csv to save files. CSV is an EXCEL file format.You can open it in EXCEL.

3. How to uninstall TestLink SE322?

Answer:Uninstall TestLink SE322 by launching the Add/Remove Programs applet out of the Control Panel, highlighting the SE322, and clicking on the Add/Remove... push button, then it will remove the SE322 folder and files from your computer.

4. Why loading data fail?

Answer: This might cause by the slow respond from some of the notebook PC system.

5. How to zoom the graph?

Answer: Press the left mouse button and drag the cursor to select the new extents, then release the mouse button.

6. When I setup the real time sampling with a fast rate (eg. 0.1 sec), Some of the sampling data might be lost.

Answer: This might be caused by slow response time of the PC.