


1587 FC/1587/1577 Insulation Tester

Quick Reference Guide


See Users Manual for "Safety Information" and complete operating information.

- All illustrations show the 1587 FC.

Fluke Connect

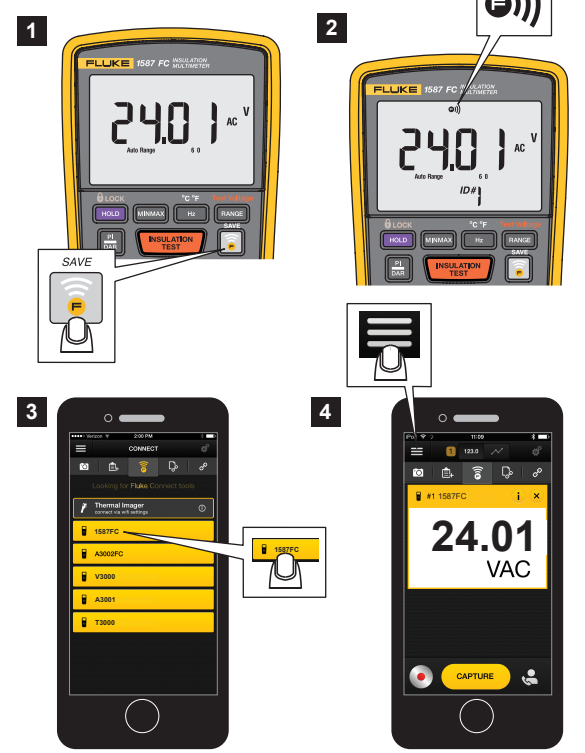


Fuse Test

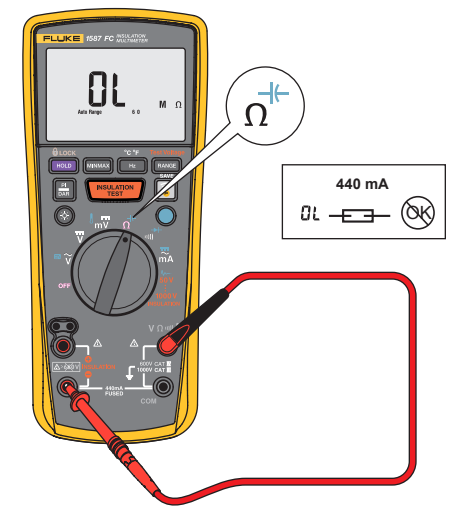


Temperature




Testing Insulation

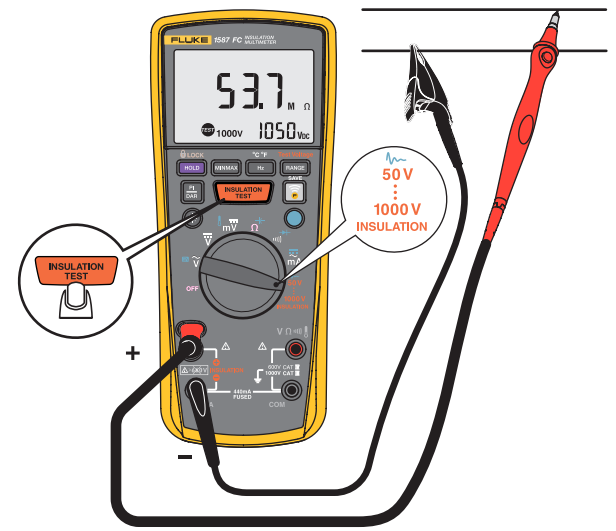


PI / DAR

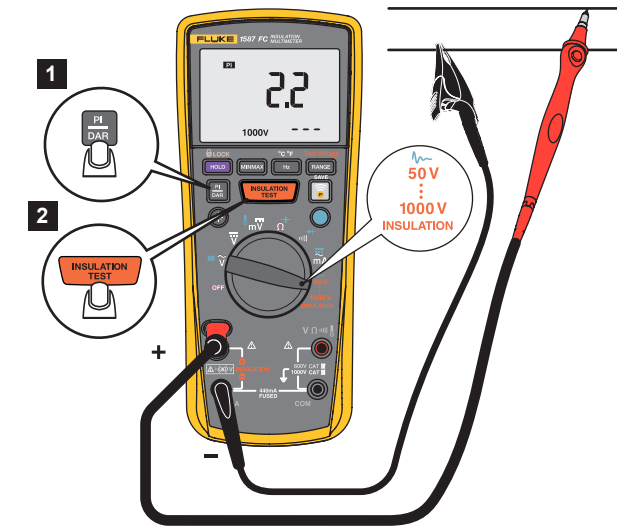



Voltage

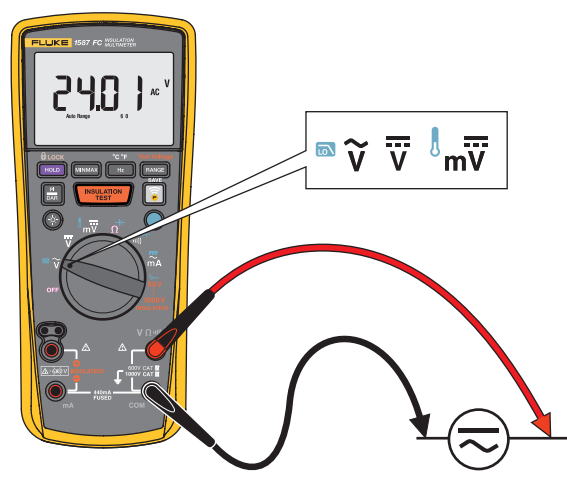



Continuity

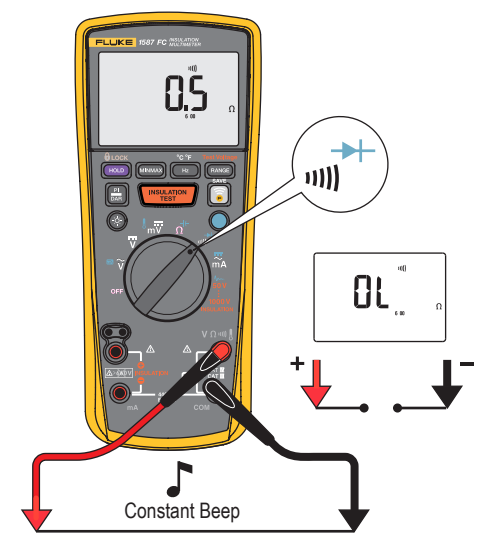


Current

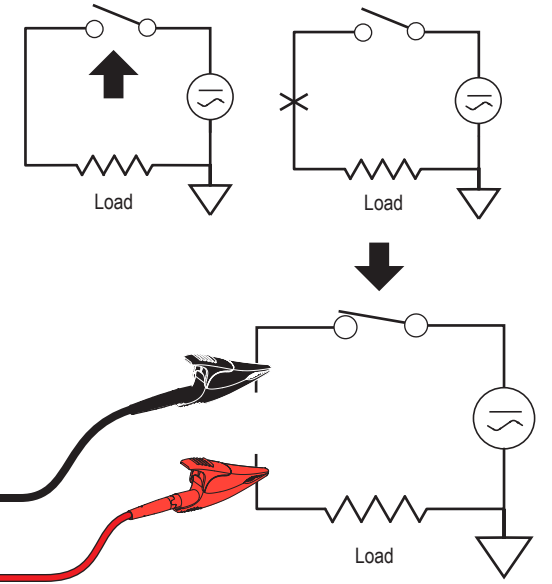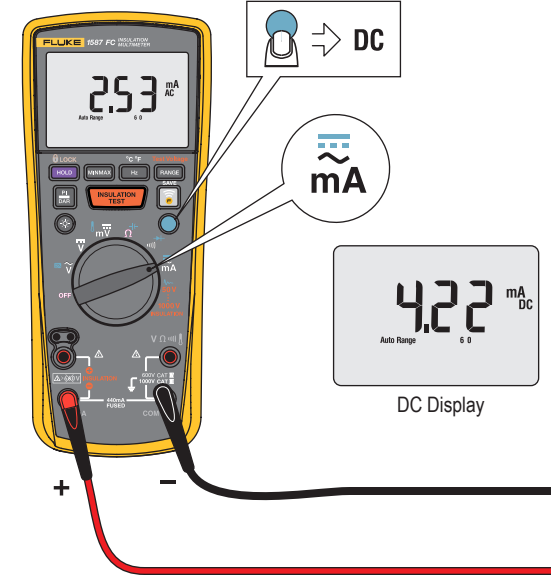


Diode Test $\rightarrow|+$

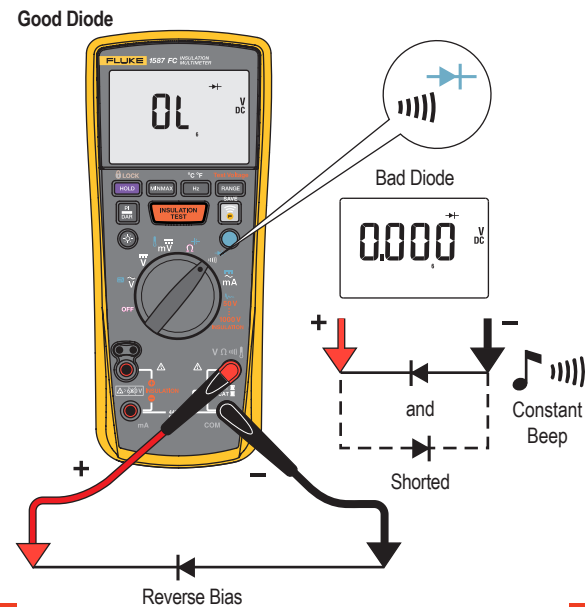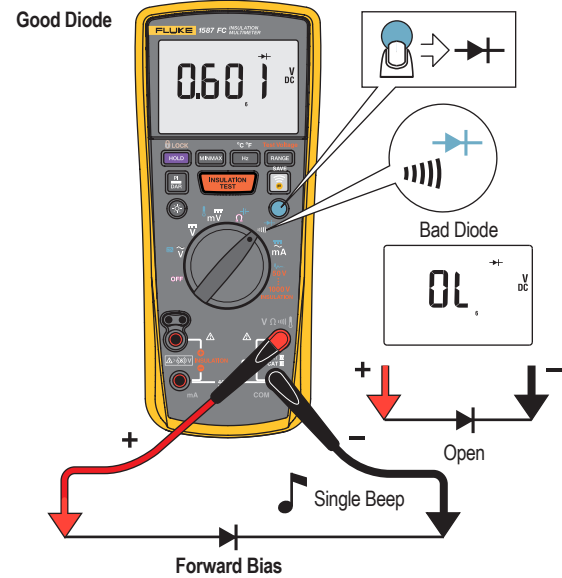


Resistance Ω

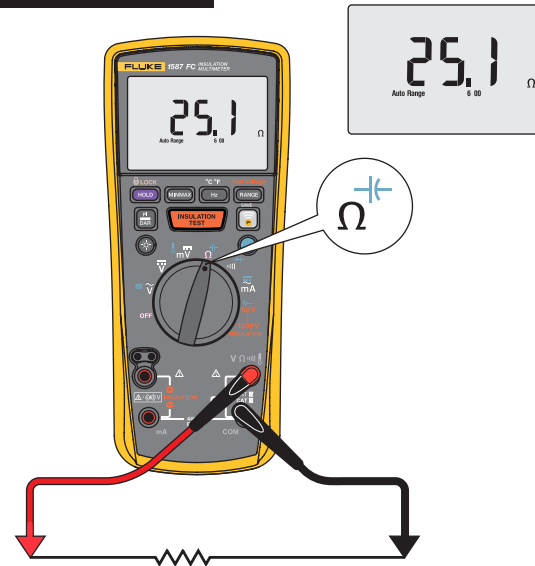


Capacitance $\leftarrow|+$

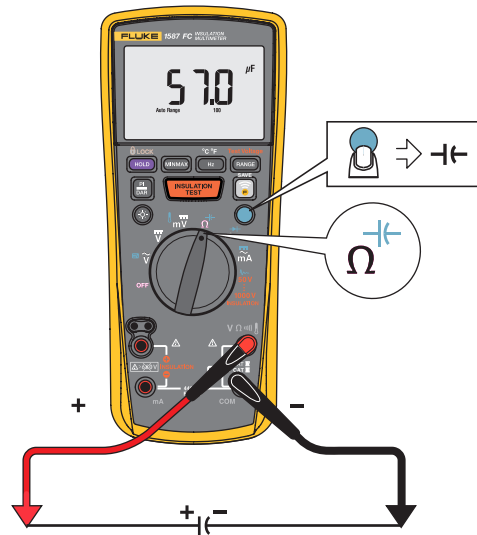


Frequency (Hz)

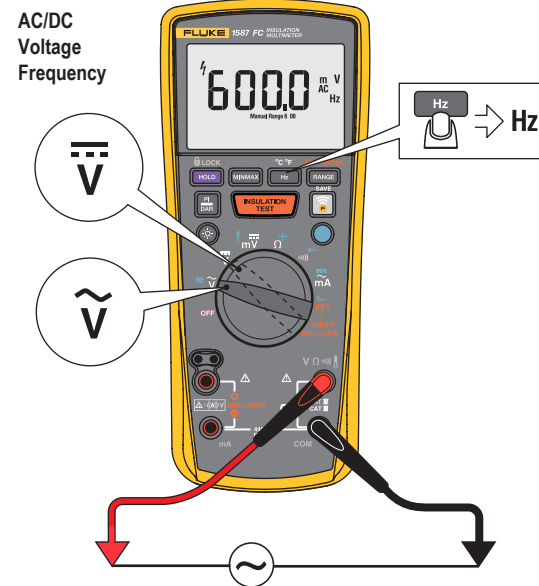


AC/DC Current Frequency

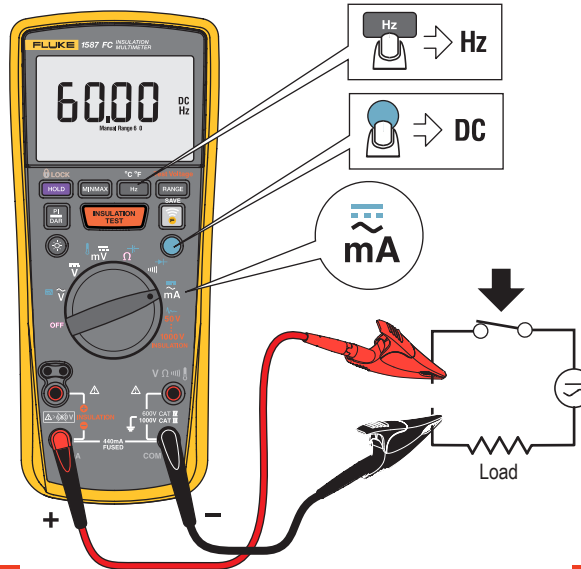

Low Pass (VFD) Filter (Model 1587)

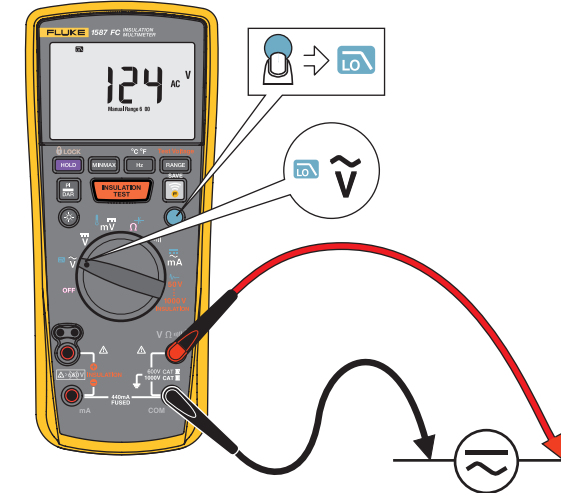

Smoothing (Power Up Option)

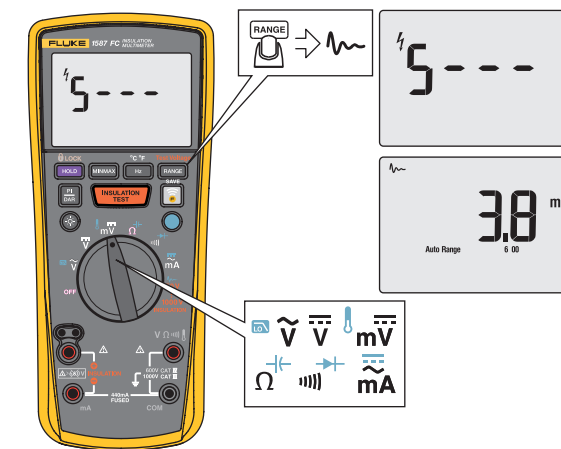

Battery / Fuse Replacement $\square/\square$

