INSTRUCTION MANUAL

HI 96722

Cvanuric Acid ISM

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for the correct use of the instrument. Please read it carefully before using the meter. If you need additional technical information do not hesitate to e-mail us at tech@hannainst.com

Preliminary examination:

Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify

Each HI 96722 Ion Selective Meter is supplied complete with:

- . Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual

 
Note: save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original



$ec{m{t}}$ For more details about spare parts and accessories see "Accessories"

Technical specifications:	
Range	0 to 80 mg/L
Resolution	1 mg/L
Accuracy	± 1 mg/L $\pm 15\%$ of reading @ 25°C
Typical EMC Dev.	±1 mg/L
Light Source	Tungsten lamp
Light Detector	Silicon Photocell with narrow band interfer ence filter @ 525 nm
Method	Adaptation of the turbidimetric method. The reaction between cyanuric acid and the reagent causes a white suspension in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode after 1 hour of non-use in calibration mode with last reading reminder.
Dimensions	192 x 104 x 69 mm (7.6 x 4.1 x 2.7")
Weight	360 g (12.7 oz.).

Functional description:



- 1 GLP/A key press to enter GLP mode. In calibration mode press to edit the date and time
- 2. CAL CHECK key: press to perform the validation of the meter, or press and hold for three seconds to enter calibration mode.
- 3. ZERO/CFM key: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. READ/►/TIMER key: In measurement mode, press to make a measurement, or press and hold for three seconds to start a preprogrammed countdown prior to measurement. In GLP mode press to view the next screen.
- 5. ON/OFF kev: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alianment indicator
- 8 Cuvette holder

DISPLAY ELEMENTS DESCRIPTION:



- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The battery icon indicates the charge state of the battery
- 4. The hourglass appears when an internal check is in progress
- 5. Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four digit main display
- 9. Measuring units
- 10. Four digit secondary display

Errors and warnings:

ON ZERO READING:



Light High. There is too much light to perform a measurement. Please check the preparation of the zero cuvette



Light Low: There is not enough light to perform a measurement. Please check the preparation of the zero cuvette.



No Light: The instrument cannot adjust the light level. Please check that the samples does not contain any debris.

ON SAMPLE READING:



Inverted cuvettes. The sample and the zero cuvette are inverted



Zero: A zero reading was not taken. Follow the instructions of the measurement procedure for zeroing the meter.



Under range: A blinking "0" indicates that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.



Over Range: A flashing value of the maximum concentration indicates an over range condition. The concentration of the sample is beyond the programmed range: dilute the sample and re-run the test.

DURING CALIBRATION PROCEDURE:



Standard Low: The standard reading is less than expected.



Standard High: The standard reading is higher than expected.

OTHER ERRORS AND WARNINGS:



Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.



Cooling lamp: The instrument waits for the lamp to cool down.



Battery low: The battery must be replaced



 
Dead battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, normal operation of the instrument will be interrupted. Change the battery and restart the meter.

 
Measurement procedure:

Measurement ▼



1 • Turn the meter on by pressing ON/OFF









ۥ>

-00-

. DO:44

  4. Place the cuvette into the holder and ensure that the notch on the cap is positioned securely into the groove.





7. Remove the cuvette

8. Fill a beaker up to the 25 mL mark with the sample, add the content of one packet of HI 93722-0 reagent and stir aently to mix.

9. Fill a second cuvette with 10 mL of the reacted sample, up to the mark, and replace the cap.

10 • Place the second cuvette into the holder and ensure that the notch on the cap is positioned securely into the groove.

11 • Press and hold READ/>/TIMER for three seconds. The display will show the countdown prior to measurement. The beeper is playing a beep at the end of countdown period.



PEWA Messtechnik GmbH

Weidenweg 21 Tel.: 02304-96109-0

Fax: 02304-96109-88 E-Mail: info@pewa.de Homepage: www.pewa.de

Alternatively, wait for 45 seconds and just nress RFAD/>/TIMFR

In both cases, the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.

Validation and Calibration procedures

Warning: do not validate or calibrate the instrument with standard

solutions other than the Hanna CAL CHECK™ Standards otherwise

For accurate validation and calibration results, please perform tests at

12 • The instrument directly displays concentration in ma/L of cvanuric acid on the Liquid Crystal Display.

erroneous results will be obtained.

instruments.

VALIDATION

room temperature (18 to 25°C: 64.5 to 77.0°F).

1 • Turn the meter on by pressing ON/OFF.

2. When the beeper sounds briefly and the

LCD displays dashes, the meter is ready.

HI 96722-11 Cuvette A into the holder

is positioned securely into the groove.

and detector icons will appear on the display.

"-0.0-". The meter is now zeroed and

7• Place the CAL CHECK™ Standard HI 96722-11 Cuvette B into the holder

and ensure that the notch on the cap is

"CAL CHECK" will appear on the display.

depending on the measurement phase.

will show the validation standard value.

The reading should be within specifications

as reported on the CAL CHECK™ Standard

9. At the end of the measurement the display

cuvette and detector icons together with

positioned securely into the groove.

8. Press CAL CHECK key and the lamp,

depending on the measurement phase.

5. After a few seconds the display will show

ready for validation.

6. Remove the cuvette.

4. Press ZERO/CFM and the lamp, cuvette

and ensure that the notch on the cap 4-5

3• Place the CAL CHECK™ Standard

i Use the Hanna CAL CHECK™ cuvettes (see

"Accessories") to validate or calibrate



50.

Validation **▼**

-00-

ۥ>

CALIBRATION

Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF keys

Calibration **▼**

2000

60>

-0.0

1. Turn the meter on by pressing ON/OFF.

2. When the beener sounds briefly and the LCD displays dashes, the meter is ready.

3. Press and hold CAL CHECK for three seconds to enter calibration mode. The display will show "CAL" during calibration procedure. The blinking "ZERO" asks for instrument

4 • Place the CAL CHECK™ Standard HI 96722-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the groove.

5. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display, depending on the measurement phase.

6. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard.

7. Remove the cuvette.

8. Place the CAL CHECK™ Standard HI 96722-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the groove.

9. Press READ/►/TIMER and the lamp. cuvette and detector icons will appear on the display, depending on the measurement 10-11 nhase

10 • The instrument will show for three seconds the CAL CHECK™ standard value

Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96722-11 Cuvettes. A and B are free from fingerprints or dirt and that they are inserted cor-

11. Then the date of last calibration (e.a.: "01.08.2009") appears on the display. or "01.01.2009" if the factory calibration was selected before. In both cases the year number is blinking, ready for date input

0" 10"8

ZERO OF READ TIMER

ZERO OF READING

2009

2009

Stor

12 • Press GLP/▲ to edit the desired year (2009-2099). If the key is kept pressed. the year number is automatically increased.

13 • When the correct year has been set, press ZERO/CFM or READ/►/TIMER to confirm. Now the display will show the month blinkina.

14 • Press GLP/▲ to edit the desired month (01-12). If the key is kept pressed, the month number is automatically increased.

15 • When the correct month has been set, 14-15 press 7FRO/CFM or RFAD/>/TIMFR to confirm. Now the display will show the dav blinkina.

16 • Press GLP/▲ to edit the desired day (01-31). If the key is kept pressed, the day number is automatically increased.

Note: It is possible to change the editing from day to year and to month by pressing READ/►/TIMER

17 • Press ZERO/CFM to save the calibration

18 • The instrument displays "Stor" for one second and the calibration is saved.

19 • The instrument will return automatically to measurement mode by displaying dashes on the LCD.

In GLP mode, the last calibration date can be verified and the factory

Last Calibration Date **▼**

GLP

0 108

2009

1 • Press GLP/▲ to enter GLP mode. The calibration month and day will appear on the main display and the year on the secondary display.

2. If no calibration was performed, the factory calibration message, "F.CAL" will appear on the main display and the instrument returns to measurement mode after three seconds.

calibration can be restored.

LAST CALIBRATION DATE

1 • Press GLP/▲ to enter GLP mode

2. Press READ/►/TIMER to enter in the factory calibration restore screen. The instrument asks for confirmation of user calibration delete

3. Press 7FRO/CFM to restore the foctory calibration or press GLP/A again to abort factory calibration restore.

4. The instrument briefly indicates "donE" upon restoration of factory calibration prior to returning to measurement mode.

ERL

Restore **▼**



Batterv management

To save the battery, the instrument shuts down after 10 minutes of nonuse in measurement mode and after 1 hour of non-use in calibration

If a valid measurement was displayed before auto-shut off, the value is displayed when the instrument is switched on. The blinking "ZERO" means that a new zero has to be performed.

One fresh battery lasts for arround 750 measurements, depending on the light level

The remaining battery capacity is evaluated at the instrument startup and after each measurement.

The instrument displays a battery indicator with three levels as follows:

• 3 lines for 100 % capacity

• 2 lines for 66 % capacity

• 1 line for 33 % capacity

Battery icon blinking if the capacity is under 10 %.

If the battery is empty and accurate measurements can't be taken any more, the instrument shows "dEAd bAtt" and turns off.

To restart the instrument, the battery must be replaced with a fresh one. To replace the instrument's battery, follow the steps:

. Turn the instrument off by pressing ON/OFF.

. Turn the instrument upside down and remove the battery cover by turning it counterclockwise.

Factory Accessories: Calibration

REAGENT SETS

HI 93722-01 Reggents for 100 tests HI 93722-03 Reggents for 300 tests

OTHER ACCESSORIES

HI 96722-11 CAL CHECK™ Standard Cuvettes (1 set)

HI 721310 9V battery (10 pcs) HI 731318 Tissue for wiping cuvettes (4 pcs) HI 731331 Glass cuvettes (4 pcs) HI 731335 Caps for cuvettes (4 pcs)

HI 93703-50 Cuvettes cleaning solution (230 mL).

Warranty

HI 96722 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained according to the instructions

This warranty is limited to repair or replacement free of charge.

Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required, contact your dealer. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shipment costs prepaid. When shipping any instrument, make sure it is properly packaged for complete protection.

To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

dations for Users

Before using these products, make sure that they are entirely suitable for your specific application and for the environment in which they are used.

Operation of these instruments may cause unacceptable interferences to other electronic equipments, this requiring the operator to take all necessary steps to correct interferences.

Any unrintion introduced by the user to the supplied equipment may degrade the instrument's FMI

To avoid damages or burns, do not put the instrument in microwave oven. For yours and the instrumen safety do not use or store the instrument in hazardous environment

Hanna Instruments reserves the right to modify the design, construction and appearance of its products without advance notice.

For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area. visit our web site



2



· Insert back the battery cover and turn it clockwise to close.

· Extract the battery from its location and replace it with a fresh one.

GLP

FEAL

factory calibration.

20.

FACTORY CALIBRATION RESTORE It is possible to delete the calibration and restore