INSTRUCTION MANUAL

HI 96748

Manaanese Low Ranae ISM

Dear Customer.

Thank you for choosing a Hanna product. This manual will provide you with the necessary information for the correct use of the instrument. Please read it carefully before using the meter. If you need additional technical information, do not hesitate to e-mail us at tech@hannainst.com.

 
Preliminary examination:

- Please examine this product carefully. Make sure that the instrument is not damaged. If any damage occured during shipment, please notify vour Dealer.
- Each HI 96748 Ion Selective Meter is supplied complete with:
- Two Sample Cuvettes and Caps
- 9V Battery
- Instruction Manual
- Note: Save all packing material until you are sure that the instrument works correctly. Any defective item must be returned in its original packing.

$\emph{\emph{i}}$ For more details about spare parts and accessories see "Arressories"

Technical specifications:	
Range	0 to 300 µg/L
Resolution	1 μg/L
Accuracy	$\pm 10~\mu {\rm g/L} \pm 3\%$ of reading @ 25°C
Typical EMC Dev.	±1 µg/L
Light Source	Tungsten Lamp
Light Detector	Silicon Photocell with narrow band interfe rence filter @ 525 nm
Method	Adaptation of the 1-(2-pyridylazo)-2-naphtol PAN method. The reaction between manganese and reagents causes an orange tint in the sample.
Environment	0 to 50°C (32 to 122°F); max 95% RH non-condensing
Battery Type	1 x 9 volt
Auto-Shut off	After 10' of non-use in measurement mode; after 1 hour of non-use in calibration mode; with last reading reminder.
Dimensions	192 x 104 x 69 mm (7.6 x 4.1 x 2.7 ")
Weight	360 g (12.7 oz.).

Functional description:



- 1. GLP/ key: press to enter GLP mode. In calibration mode press to edit the date and time.
- 2. CAL CHECK key: press to perform the validation of the meter or press and hold for three seconds to enter calibration mode.
- 3. ZERO/CFM key: press to zero the meter prior to measurement, to confirm edited values or to confirm factory calibration restore.
- 4. READ/►/TIMER key: In measurement mode, press to make a measurement, or press and hold for three seconds to start a pre-programmed countdown prior to measurement. In GIP mode press to view the next screen.
- 5. ON/OFF key: to turn the meter on and off.
- 6. Liquid Crystal Display (LCD)
- 7. Cuvette alignment indicator
- 8. Cuvette holder

DISPLAY ELEMENTS DESCRIPTION



- 1. The measuring scheme (lamp, cuvette, detector), appears during different phases of zero or reading measurement
- 2. Error messages and warnings
- 3. The battery icon indicates the charae state of the battery
- 4. The hourglass appears when an internal check is in progress
- 5. Status messages
- 6. The chronometer appears when the reaction timer is running
- 7. The month, day and date icons appear when a date is displayed
- 8. Four diait main display
- 9. Measuring units
- 10. Four digit secondary display

Errors and warnings:

ON ZERO READING:



Light Low: There is not enough light to perform a measurement. Please check the preparation of the zero cuvette

the zero cuvette

Light High: There is too much light to perform

a measurement. Please check the preparation of

No Light: The instrument cannot adjust the light level. Please check that the sample does not contain any debris.

ON SAMPLE READING:

Inverted cuvettes: The sample and the zero Err cuvette are inverted.

- Zero: A zero readina was not taken. Follow the 26-0 instructions of the measurement procedure for zeroing the meter.
 - Under range: A blinking "0.000" indicates -0that the sample absorbs less light than the zero reference. Check the procedure and make sure you use the same cuvette for reference (zero) and measurement.
- Over Range: A flashing value of the maximum =<u>300</u>£ concentration indicates an over range condition. The concentration of the sample is beyond the $/ | \rangle$ programmed range: dilute the sample and re-run the test.

DURING CALIBRATION PROCEDURE:

711



Standard High: The standard reading is higher Err than expected.

OTHER ERRORS AND WARNINGS:

Err

Cap error: Appears when external light enters in the analysis cell. Assure that the cuvette cap is present.

Cooling lamp: The instrument waits for the lamp to cool down.

Battery low: The battery must be replaced soon.

Dead battery: This indicates that the battery is dead and must be replaced. Once this indication is displayed, normal operation of the instrument will be interrupted. Change the battery and restart the meter.

Measurement procedure:

dERd

БЯЕЕ





lamp, cuvette and detector icons will appear on the display, depending on the measurement phase.



MB-electronic

Weidenweg 21 58239 Schwerte

Tel.: 02304-96109-0 Fax: 02304-96109-88 E-Mail: info@pewa.de Homepage : www.pewa .de 10 • At the end of measurement, the instrument directly displays concentration in µa/L of managenese on the LCD 250. Note: A temperature above 30 °C may cause turbidity. In this case, before zeroing and taking readings, add 2-3 drops of Dispersing agent (HI 93703-51) to each cuvette and swirl until complete dissolution of turbidity. INTERFERENCES:

Interference may be caused by: Aluminum above 20 ma/L Cadmium above 10 mg/L Calcium above 200 mg/L as CaCO Cobalt above 20 ma/L Copper above 50 ma/l Iron above 10 ma/L Lead above 0.5 ma/L Magnesium above 100 mg/L as CaCO. Nickel above 40 ma/L 7inc above 15 ma/l

Validation and Calibration procedures

Warning: do not validate or calibrate the instrument with standard solutions other than the Hanna CAL CHECK™ Standards otherwise erroneous results will be obtained For accurate validation and calibration results, please perform tests at room temperature (18 to 25°C; 64.5 to 77.0°F).

i Use the Hanna CAL CHECK[™] cuvettes (see "Accessories") to validate or calibrate instruments.

Validation 🔻

1 fil

Co)

-

7

8

-

- 0.0 -

1 Mil

VALIDATION

- 1. Turn the meter on by pressing ON/OFF. 3 2. When the beeper sounds briefly and the ICD displays dashes the meter is ready
- 3. Place the CAL CHECK™ Standard HI 96748-11 Cuvette A into the holder 4-5 and ensure that the notch on the cap is positioned securely into the groove.
- 4. Press ZERO/CFM and the lamp, cuvette and detector icons will appear on the display. depending on the measurement phase.
- 5. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for validation
- 6. Remove the cuvette.
- 7• Place the CAL CHECK™ Standard HI 96748-11 Cuvette B into the holder and ensure that the notch on the cap is positioned securely into the aroove.
- 8. Press CAL CHECK key and the lamp. cuvette and detector icons together with "CAL CHECK" will appear on the display, depending on the measurement phase.

9• At the end of the measurement the display will show the validation standard value. The reading should be within specifications as reported on the CAL CHECK™ Standard

> Certificate. If the value is found out of specifications, please check that the cuvettes are free of finaerprints, oil or dirt and repeat validation. If results are still found out of specifications then recalibrate the instrument

CALIBRATION

- Note: It is possible to interrupt the calibration procedure at any time by pressing CAL CHECK or ON/OFF kevs.
- Calibration 🔻 1. Turn the meter on by pressing ON/OFF.
- 2. When the beeper sounds briefly and the 3 LCD displays dashes, the meter is ready.
- 3. Press and hold CAL CHECK for three seconds to enter *calibration mode*. The display will show "CAL" during calibration procedure. The
- blinking "ZERO" asks for instrument zeroing. 4• Place the CAL CHECK™ Standard 4 HI 96748-11 Cuvette A into the cuvette holder and ensure that the notch on the cap is positioned securely into the arrowe
- 5. Press ZERO/CFM and the lamp, cuvette 5-6 and detector icons will appear on the display, depending on the measurement phase.
- 6. After a few seconds the display will show "-0.0-". The meter is now zeroed and ready for calibration. The blinking "READ" asks for reading calibration standard. -0.0-
- 7. Remove the cuvette. 8• Place the CAL CHECK[™] Standard HI 96748-11 Cuvette B into the holder
- and ensure that the notch on the cap is positioned securely into the groove.

9. Press READ/►/TIMER and the lamp, 9-10 cuvette and detector icons will appear on the display, depending on the measurement phase.

10 • The instrument will show for three seconds the CAL CHECK[™] standard value.

Note: If the display shows "STD HIGH", the standard value was too high. If the display shows "STD LOW", the standard value was too low. Verify that both CAL CHECK™ Standard HI 96748-11 Cuvettes, A and B are free from finaerprints or dirt and that they are inserted cor11 • Then the date of last calibration (e.g.: "01.08.2009") appears on the display, or "01.01.2009" if the factory calibration was selected before. In both cases the year number is blinking, ready for date input.

150.

CAL

3000

1.6

G

1 **M**

150,

12 • Press GLP/A to edit the desired year (2009-2099). If the key is kept pressed. the year number is automatically increased.

A 1

2009

GLP 14-15

0'9'D'Á

édos

GLP

Calibration

GLP

2009

0° 1.0°8

F.C.ÄL

Date 🔻

18

- 13 When the correct year has been set, press ZERO/CEM or READ/ /TIMER to confirm. Now the display will show the month hlinking
- 14 Press GLP/ to edit the desired month (01-12). If the key is kept pressed, the month number is automatically increased.
- 15 When the correct month has been set, press ZERO/CFM or READ/>/TIMER to confirm. Now the display will show the dav blinkina.
- 16 Press GLP/▲ to edit the desired day (01-31). If the key is kept pressed, the day number is automatically increased.
- Note: It is possible to change the editing from day to year and to month by pressing READ/>/TIMER.
- 17 Press ZERO/CFM to save the calibration date.
- 18 The instrument displays "Stor" for one second and the calibration is saved 19 • The instrument will return automatically to measurement mode by displaying dashes


GLP

In GLP mode, the last calibration date can be verified and the factory calibration can be restored. Last

LAST CALIBRATION DATE

on the ICD.

- I Press GLP/▲ to enter GLP mode. The calibration month and day will appear on the main display and the year on the secondary display.
- 2. If no calibration was performed, the factory calibration message. "F.CAL" will appear
- on the main display and the instrument **2** returns to measurement mode after three seronds

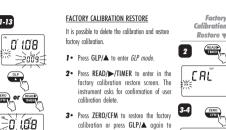

abort factory calibration restore. 4. The instrument briefly indicates "donE" upon restoration of factory calibration prior returning to measurement made

Battery management

To save the battery, the instrument shuts down after 10 minutes of non-use in measurement mode and after 1 hour of non-use in calibration mode

If a valid measurement was displayed before auto-shut off, the value is displayed when the instrument is switched on. The blinking "ZERO" means that a new zero has to be performed. One fresh battery lasts for arround 750 measurements, depending on the

- light level The remaining battery capacity is evaluated at the instrument startup
- and after each measurement.
- 1 line for 33 % capacity
- Battery icon blinking if the capacity is under 10 %.

If the battery is empty and accurate measurements can't be taken any more, the instrument shows "dEAd bAtt" and turns off. To restart the instrument, the battery must be replaced with a fresh one.

- To replace the instrument's battery, follow the steps:
- Turn the instrument off by pressing ON/OFF.
- · Turn the instrument upside down and remove the battery cover by turning it counterclockwise.



- · Extract the battery from its location and replace it with a fresh one.
- · Insert back the battery cover and turn it clockwise to close.

Accessories:

Factory

Restore w

READ TIMER

ZERO CFM

donE

250.

REAGENT SETS HI 93748-01 Reagents for 50 tests HI 93748-03 Reagents for 150 tests OTHER ACCESSORIES HI 96748-11 CAL CHECK™ Standard Cuvettes (1 set) HI 721310 9V battery (10 pcs) HI 731318 Cloth for wiping cuvettes (4 pcs) HI 731331 Glass cuvettes (4 pcs) HI 731335 Cops for cuvettes (4 pcs) HI 93703-50 Cuvette cleaning solution (230 ml).

Warrantv

HI 96748 is warranted for two years against defects in workmanship and materials when used for its intended purpose and maintained accordina to the instructions.

This warranty is limited to repair or replacement free of charge. Damages due to accident, misuse, tampering or lack of prescribed maintenance are not covered.

If service is required contact your dealer. If under warranty, report the model number, date of purchase, serial number and the nature of the failure. If the repair is not covered by the warranty, you will be notified of the charges incurred.

If the instrument is to be returned to Hanna Instruments, first obtain a Returned Goods Authorization Number from the Customer Service Department and then send it with shinment costs preparid. When shinping any instrument, make sure it is properly packaged for complete protection. To validate your warranty, fill out and return the enclosed warranty card within 14 days from the date of purchase.

dations for Users

Refere using these penducts, make sure that they are entirely suitable for your specific application and for e environment in which they are used

Operation of these instruments may cause unacceatable interferences to other electronic equipments, this requiring the operator to take all necessary steps to correct interference

Any variation introduced by the user to the supplied equipment may degrade the instrument's EMC

To avoid damages or burns, do not put the instrument in microwave oven. For yours and the instrument safety do not use or store the instrument in hazardous environment

Hanna Instruments reserves the right to modify the desian, construction and appearance of its products without advance notice.

For additional information, contact your dealer or the nearest

Hanna Customer Service Center. To find the Hanna Office in your area. visit our web site











