

PeakTech®



PEWA
Messtechnik GmbH

Weidenweg 21
58239 Schwerte

Tel.: 02304-96109-0
Fax: 02304-96109-88
E-Mail: info@pewa.de
Homepage : www.pewa.de



PeakTech® 1205

Bedienungsanleitung / Operation manual

**20 MHz Digital Speicher Oszilloskop/DMM /
20 MHz Digital Storage Oscilloscope/DMM**



Spitzentechnologie, die überzeugt

Verpackungsinhalt

	Beschreibung	Standard	Optional
1.	PeakTech® 1205	•	
2.	AC-DC Adapter	•	
3.	Tastköpfe x 2 (grau)	•	
4.	Prüfleitungen x 2 (schwarz und rot)	•	
5.	Verbindungskabel für USB-Massenspeicher (USB-Stick)	•	
6.	Erweiterungsmodul zur Messung von kleinen Kapazitäten	•	
7.	Tastkopf-Zubehör	•	
8.	USB Schnittstellenkabel (RS-232 C)	•	
9.	Bedienungsanleitung	•	
10.	CD-ROM (Software)	•	
11.	Koffer	•	



Abbildung 1

1. Sicherheitshinweise zum Betrieb des Gerätes

Dieses Gerät erfüllt die EU-Bestimmungen 89/336/EWG (elektromagnetische Kompatibilität) und 73/23/EWG (Niederspannung) entsprechend der Festlegung im Nachtrag 93/68/EWG (CE-Zeichen).

Überspannungskategorie III 1000V; Verschmutzungsgrad 2.

CAT I: Signalebene, Telekommunikation, elektronische Geräte mit geringen transienten Überspannungen

CAT II: Für Hausgeräte, Netzsteckdosen, portable Instrumente etc.

CAT III: Versorgung durch ein unterirdisches Kabel; Festinstallierte Schalter, Sicherungsautomaten, Steckdosen oder Schütze

CAT IV: Geräte und Einrichtungen, welche z.B. über Freileitungen versorgt werden und damit einer stärkeren Blitzbeeinflussung ausgesetzt sind. Hierunter fallen z.B. Hauptschalter am Stromeingang, Überspannungsableiter, Stromverbrauchszähler und Rundsteuerempfänger

Zur Betriebssicherheit des Gerätes und zur Vermeidung von schweren Verletzungen durch Strom- oder Spannungsüberschläge bzw. Kurzschlüsse sind nachfolgend aufgeführte Sicherheitshinweise zum Betrieb des Gerätes unbedingt zu beachten.

Schäden, die durch Nichtbeachtung dieser Hinweise entstehen, sind von Ansprüchen jeglicher Art ausgeschlossen.

- * Dieses Gerät darf nicht in hochenergetischen Schaltungen verwendet werden, es ist geeignet für Messungen in Anlagen der Überspannungskategorie II, entsprechend IEC 664 (max.1000V DC/750V AC, 10A)
- * Vor Anschluss des Gerätes an eine Steckdose überprüfen, dass die Spannungseinstellung am Gerät mit der vorhandenen Netzspannung übereinstimmt
- * Gerät nur an Steckdosen mit geerdetem Schutzleiter anschließen
- * Gerät nicht auf feuchten oder nassen Untergrund stellen.
- * Ventilationsschlitze im Gehäuse unbedingt freihalten (bei Abdeckung Gefahr eines Wärmestaus im Inneren des Gerätes)
- * Keine metallenen Gegenstände durch die Ventilationsschlitze stecken.
- * Keine Flüssigkeiten auf dem Gerät abstellen (Kurzschlussgefahr beim Umkippen des Gerätes)
- * Gerät nicht in der Nähe starker magnetischer Felder (Motoren, Transformatoren usw.) betreiben
- * maximal zulässige Eingangsspannung von 1000V DC oder 750V AC nicht überschreiten.
- * maximal zulässige Eingangswerte **unter keinen Umständen** überschreiten (schwere Verletzungsgefahr und/oder Zerstörung des Gerätes)
- * Die angegebenen maximalen Eingangsspannungen dürfen nicht überschritten werden. Falls nicht zweifelsfrei ausgeschlossen werden kann, dass diese Spannungsspitzen durch den Einfluss von transienten Störungen oder aus anderen Gründen überschritten werden muss die Messspannung entsprechend (10:1) vorgedämpft werden.
- * Nehmen Sie das Gerät nie in Betrieb, wenn es nicht völlig geschlossen ist.
- * Defekte Sicherungen nur mit einer dem Originalwert entsprechenden Sicherung ersetzen. Sicherung oder Sicherungshalter **niemals** kurzschließen.
- * Vor dem Umschalten auf eine andere Messfunktion Prüflleitungen oder Tastkopf von der Messschaltung abkoppeln.

- * Keine Spannungsquellen über die mA, A – und COM-Eingänge anlegen. Bei Nichtbeachtung droht Verletzungsgefahr und/oder die Gefahr der Beschädigung des Multimeters.
- * Der 10A-Bereich ist durch eine Sicherung abgesichert. Strommessungen nur an Geräten mit entsprechender Absicherung durch Sicherungsautomaten oder Sicherungen (10A oder 2000VA) vornehmen.
- * Bei der Widerstandsmessungen keine Spannungen anlegen!
- * Keine Strommessungen im Spannungsbereich (V/ Ω) vornehmen.
- * Gerät, Prüfleitungen und sonstiges Zubehör vor Inbetriebnahme auf eventuelle Schäden bzw. blanke oder geknickte Kabel und Drähte überprüfen. Im Zweifelsfalle keine Messungen vornehmen.
- * Messarbeiten nur in trockener Kleidung und vorzugsweise in Gummischuhen bzw. auf einer Isoliermatte durchführen.
- * Messspitzen der Prüfleitungen nicht berühren.
- * Warnhinweise am Gerät unbedingt beachten.
- * Gerät darf nicht unbeaufsichtigt betrieben werden
- * Bei unbekannten Messgrößen vor der Messung auf den höchsten Messbereich umschalten.
- * Gerät keinen extremen Temperaturen, direkter Sonneneinstrahlung, extremer Luftfeuchtigkeit oder Nässe aussetzen.
- * Starke Erschütterung vermeiden.
- * Heiße Lötpistolen aus der unmittelbaren Nähe des Gerätes fernhalten.
- * Vor Aufnahme des Messbetriebes sollte das Gerät auf die Umgebungstemperatur stabilisiert sein (wichtig beim Transport von kalten in warme Räume und umgekehrt)
- * Überschreiten Sie bei keiner Messung den eingestellten Messbereich. Sie vermeiden so Beschädigungen des Gerätes.
- * Messungen von Spannungen über 35V DC oder 25V AC nur in Übereinstimmung mit den relevanten Sicherheitsbestimmungen vornehmen. Bei höheren Spannungen können besonders gefährliche Stromschläge auftreten.
- * Ersetzen Sie die Batterie, sobald das Batteriesymbol „BAT“ aufleuchtet. Mangelnde Batterieleistung kann unpräzise Messergebnisse hervorrufen. Stromschläge und körperliche Schäden können die Folge sein.
- * Sollten Sie das Gerät für einen längeren Zeitraum nicht benutzen, entnehmen Sie die Batterie aus dem Batteriefach.
- * Säubern Sie das Gehäuse regelmäßig mit einem feuchten Stofftuch und einem milden Reinigungsmittel. Benutzen Sie keine ätzenden Scheuermittel.
- * Dieses Gerät ist ausschließlich für Innenanwendungen geeignet.
- * Vermeiden Sie jegliche Nähe zu explosiven und entflammaren Stoffen.
- * Öffnen des Gerätes und Wartungs- und Reparaturarbeiten dürfen nur von qualifizierten Service-Technikern durchgeführt werden.
- * Gerät nicht mit der Vorderseite auf die Werkbank oder Arbeitsfläche legen, um Beschädigung der Bedienelemente zu vermeiden.
- * Keine technischen Veränderungen am Gerät vornehmen.
- * **- Messgeräte gehören nicht in Kinderhände –**

Reinigung des Gerätes:

Gerät nur mit einem feuchten, fusselfreien Tuch reinigen. Nur handelsübliche Spülmittel verwenden.

Beim Reinigen unbedingt darauf achten, dass keine Flüssigkeit in das Innere des Gerätes gelangt. Dies könnte zu einem Kurzschluss und zur Zerstörung des Gerätes führen.

Bitte lesen Sie diese Betriebsanleitung sorgfältig, um das Gerät bestmöglich bedienen zu können.

2. Sicherheitssymbole und -begriffe

2.1. Sicherheitssymbole

Sie können die folgenden Symbole in dieser Betriebsanleitung oder auf dem Messgerät finden.

WARNUNG!

„Warnung“ weist auf Zustände und Bedienschritte hin, die für den Bediener eine Gefahr darstellen.

VORSICHT!

„Vorsicht“ weist auf Zustände und Bedienschritte hin, die Schäden am Produkt oder anderen Gegenständen verursachen können.

Gefahr: Hoch-
spannung



siehe Betriebs-
anleitung



Schutzleiterklemme



Gerätemasse



Masseklemme
(Erde)



2.1.1. Sicherheitsbegriffe

Auf dem Gerät können Sie die folgenden Begriffe finden:

Gefahr: Der Begriff „Gefahr“ erscheint in dieser Betriebsanleitung an Stellen, die Sie auf eine unmittelbare persönliche Gefährdung hinweisen.

Warnung: Der Begriff „Warnung“ erscheint in dieser Betriebsanleitung an Stellen, die Sie auf eine zwar nicht unmittelbar gegebene persönliche Gefährdung hinweisen, die Sie aber zur Vorsicht mahnen.

Hinweis: Der Begriff „Hinweis“ erscheint in dieser Betriebsanleitung an Stellen, die Sie auf mögliche Beschädigung des Produktes oder anderer Gegenstände hinweisen.

3. Durchführen der allgemeinen Kontrolle

3.1. Durchführen der allgemeinen Kontrolle

Wenn Sie ein neues *PeakTech*[®]-Oszilloskop in Betrieb nehmen, sollten Sie zunächst eine allgemeine Kontrolle des Messgerätes wie im Folgenden beschrieben durchführen.

3.2. Überprüfung auf Transportschäden

Sind Umkarton oder Styroporpolster ernsthaft beschädigt, so bewahren Sie diese sorgfältig auf, bis Sie das gesamte Messinstrument und dessen Zubehör mechanisch und elektrisch geprüft haben.

3.3. Überprüfung des Zubehörs

Eine Liste des Zubehörs finden Sie bei der Abbildung der Digital-Oszilloskop-Teile in dieser Betriebsanleitung. Prüfen Sie die Vollständigkeit des Zubehörs im Vergleich mit dem Anhang. Bei nicht vollständigem oder beschädigtem Zubehör wenden Sie sich bitte an Ihren Händler.

3.4. Überprüfung des gesamten Messinstruments

Wenn das Messinstrument äußerlich beschädigt ist oder im normalen Betrieb oder bei einem Leistungstest versagt, wenden Sie sich bitte an Ihren Händler. Wenn das Messgerät einen Transportschaden aufweist, bewahren Sie bitte die Verpackung sorgfältig auf und wenden Sie sich an den zuständigen Spediteur sowie an Ihren Händler, um das Messgerät austauschen oder reparieren zu lassen.

4. Eingangsanschlüsse

4.1. Eingangsanschlüsse



Abbildung 2

1. Der Netz-Adapter wird zum stationären Betrieb über 230 V-Netzversorgung und zum Aufladen des Akkus geliefert.
2. Prüfleitungen für Multimeter
3. 4 mm Sicherheitseingangsbuchsen für Multimeter
4. Oszilloskop-Tastköpfe
5. BNC-Eingänge (Oszilloskop): der obere ist für Kanal 1 (CH1), während der untere für Kanal 2 (CH2) ist.

4.2. Frontplatte und die Cursortasten



Abbildung 3

1. Anschlussbuchse für AC-Adapter
2. RS-232-Anschluß
3. USB-Anschluss
4. Anschluss für USB-Massenspeicher (z. B. USB-Stick)
5. Ein/Aus-Taste
6. F1~F5: Auswahltasten für Menü in unterem Display
7. AUTO SET: Wählt automatisch die horizontale und vertikale Einstellung, sowie Triggerpegel entsprechend dem Eingangssignal (nur Oszilloskop-Betrieb)
8. COPY: Speichert das Gerät die aktuelle Wellenform auf einen angeschlossenen USB-Massenspeicher (USB-Stick)
9. Pfeil oben (rot): Einstellung Time/DIV für CH1
10. VOLTS POSITION (rot): Umschaltung von Volts/DIV auf Time/DIV
11. Pfeil unten (rot): Einstellung Time/DIV für CH1
12. Pfeil oben (blau): Einstellung Time/DIV für CH2
13. VOLTS POSITION (blau): Umschaltung von Volts/DIV auf Time/DIV

14. Pfeil unten (blau): Einstellung Time/DIV für CH2
15. RUN/STOP: zum Stoppen und Wiederanlaufen des Messbetriebes
16. LIGHT: Ein/Aus-Taste Hintergrundbeleuchtung
17. DMM/OSC: Funktionsumschalter von Oszilloskop - auf Multimeterfunktion
18. MENU Pfeil oben: Auswählen von Menüpunkten
19. MENU: Zeigt das Auswahlmenü an bzw. blendet es wieder aus
20. MENU Pfeil unten: Auswählen von Menüpunkten
21. OPTION: (Oszilloskop-Betrieb) Diese Funktion ist kombiniert mit 4 Pfeiltasten, mit denen die Hauptzeitbasis, Trigger, sowie Horizontal - und Vertikalpositionen eingestellt werden können.
22. Pfeil oben (gelb): Oszilloskopeinstellungen
23. Pfeil unten (gelb): Oszilloskopeinstellungen
24. Pfeil rechts (gelb): Oszilloskopeinstellungen
25. Pfeil links (gelb): Oszilloskopeinstellungen
26. A: Auswahl der Strommessfunktion des Multimeters
27. V: Auswahl der Spannungsmessfunktion des Multimeters
28. R: Auswahl der Widerstands -, der Durchgangsmessfunktion und der Diodenprüffunktion des Multimeters
29. SET: Umschalttaste für Multimeterfunktion von AC auf DC, bzw. Widerstand, Diode, Durchgangstest, sowie Kapazität

5. Gebrauch des Oszilloskopes

5.1. Einschalten des Oszilloskopes

Schließen Sie das Oszilloskop mit dem Netzteil wie in Abbildung 1 gezeigt an das Netz an. (Unter Umständen läuft das Oszilloskop noch mit dem eingebauten Li-Ion-Akku, ohne dass das Netzteil benötigt wird.)

Schalten Sie das Oszilloskop durch Drücken der Ein-/Aus-Taste POW ein.

Ein Begrüßungsbildschirm und die Meldung „press any key to continue.....“ [„drücken Sie eine Taste, um fortzufahren“] erscheint nach erfolgreich durchgeführtem Selbsttest.

Drücken Sie eine beliebige Taste, um in die Messfunktion zu gelangen.

Das Oszilloskop startet mit den zuletzt gemachten Einstellungen.

5.2. Oszilloskop-Anzeige

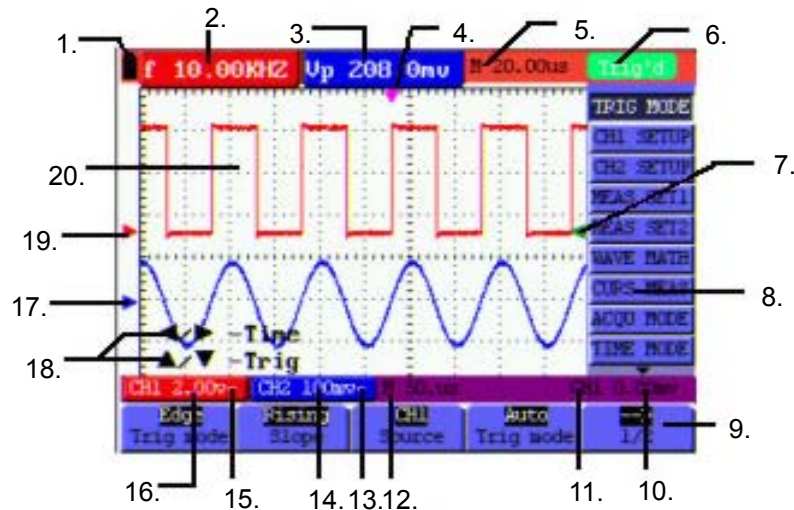


Abbildung 4: Oszilloskop Betriebsanzeige

1. Symbole für den Batterieladezustand , , und .
2. Auto-Messfenster 1 mit folgenden Elementen: „f“ = Frequenz, „T“ = Zyklus, „V“ = Mittelwert, „Vp“ = Spitzen-Spitzenwert und „Vk“ = Effektivwert.
3. Auto-Messfenster 2.
4. Der Zeiger gibt die horizontale Triggerposition an.
5. Diese Anzeige zeigt die Zeitdifferenz zwischen der horizontalen Triggerposition und der Mittellinie des Bildschirms. Ist der Zeiger in der Bildschirmmitte, so wird Null angezeigt.
6. Der Triggerstatus gibt die folgenden Informationen.
Auto: Das Oszilloskop arbeitet im Automatikmodus und zeigt die Kurve im ungetriggerten Zustand.
Trig'd: Das Oszilloskop hat ein Triggersignal entdeckt und sammelt die danach erzeugte Information.
Ready: Alle Daten vor dem Trigger-Ereignis sind aufgenommen worden, und das Oszilloskop ist bereit gewesen, Triggersignale zu empfangen.
Scan: Das Oszilloskop kann die Kurvendaten kontinuierlich im Scan-Modus aufnehmen und darstellen.
Stop: Das Oszilloskop hat die Aufnahme von Kurvendaten beendet.
7. Rote und blaue Indexanzeige triggert Vertikalposition bei Wechseltrigger und der Triggerindex wird grün, wenn er den Flanken- oder Videotrigger erreicht.
8. Ein verstecktes Menü: Drücken Sie die Taste MENU, um das Menü ein- oder auszublenden.
9. Menü-Einstelloptionen: es gibt verschiedene Einstelloptionen für die verschiedenen Menüs.
10. Anzeige der Triggerspannung.
11. Anzeige der Triggersignalquelle.
12. Anzeige des Wertes der primären Zeitbasis.
13. Dieses Symbol stellt die Koppelmodi von Kanal 2 (CH2) dar. Das Symbol „~“ zeigt Wechselspannung, das Symbol „—“ Gleichspannung an.
14. Dieser Wert gibt den vertikalen Maßstab für die Vertikalspannung von Kanal 2 an.
15. Dieses Symbol stellt die Koppelmodi von Kanal 1 an, wobei das Symbol „~“ Wechselspannung, das Symbol „—“ Gleichspannung anzeigt.

16. Dieser Wert gibt den vertikalen Maßstab für die Vertikalspannung von Kanal 1 an.
17. Der blaue Zeiger gibt die Grundlinie der Kurve in Kanal 2, d.h. dessen Nullposition, an. Fehlt dieser Zeiger, so ist der Kanal nicht geöffnet worden.
18. Bedienaufforderung OPTION: es gibt verschiedene Bedienaufforderungen für die jeweiligen OPTION Bedienschritte.
19. Der rote Zeiger gibt die Grundlinie der Kurve in Kanal 1, d.h. dessen Nullposition, an. Fehlt dieser Zeiger, so ist der Kanal nicht geöffnet worden.
20. Anzeigebereich der Kurve. Die rote Kurve stellt Kanal 1, die blaue Kurve Kanal 2 dar.

5.3. Menübeschreibung

Das Beispiel in der folgenden Abbildung zeigt, wie im Menü eine Funktion ausgewählt wird.

1. Drücken Sie die Taste MENU, um das Funktionsmenü am rechten sowie die entsprechenden Einstelloptionen am unteren Bildschirmrand anzuzeigen. Drücken Sie MENU erneut, um das Funktionsmenü wieder auszublenden.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼, um verschiedene Funktionsmenüs zu wählen.
3. Wählen Sie eine der Tasten F1 bis F5, um die Einstellung der Funktion zu ändern.

Siehe die folgende Abbildung:

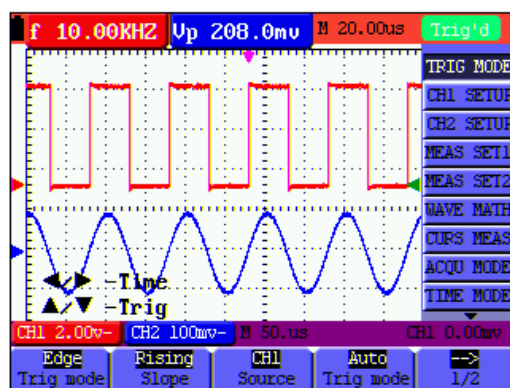


Abbildung 5: die Menüleiste

5.4. Manuelle Einstellung des Vertikal- und Horizontal-Systems, sowie der Triggerposition

Mehrfach-Einstelltaste OPTION zur Einstellung der vertikalen Triggerposition, der Haupt-Zeitbasis und der horizontalen Position (horizontale Triggerposition) bei Flankentrigger und Videotrigger oder das Triggern der Vertikalposition für horizontale Zeitbasis und Triggern der Vertikalposition und der Horizontalposition bei Wechseltrigger. Das folgende Beispiel zeigt, wie Sie die Taste OPTION für eine Einstellung verwenden.

Im Trigger-Modus Flankentrigger und Video-Trigger:

1. Drücken Sie die Taste „OPTION“ - im Display erscheint:

◀/▶ – Time Base

▲/▼ – Trig

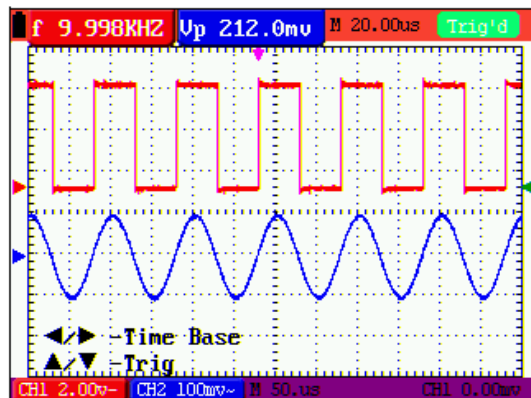


Abbildung 6

2. Drücken Sie ◀ (gelb) oder ▶ (gelb) zum Einstellen der Hauptzeitbasis und drücken Sie ▲ (gelb) oder ▼ (gelb) zum Einstellen der Triggerhorizontalposition.
3. Drücken Sie „OPTION“ erneut – im Display erscheint:

◀/▶ – Time

▲/▼ – Trig

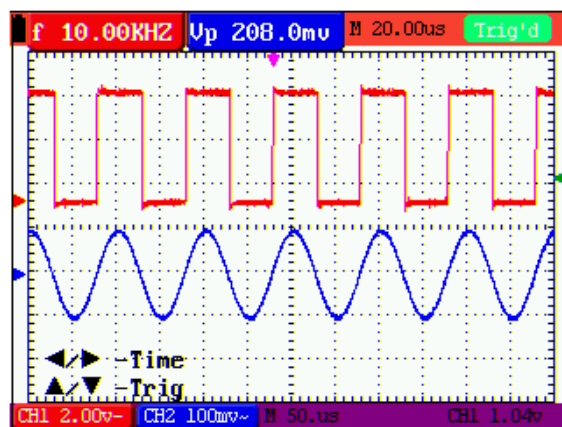


Abbildung 7

4. Drücken Sie ◀ (gelb) oder ▶ (gelb) zur Einstellung der horizontalen Position der Zeitbasis. Drücken Sie ▲ (gelb) oder ▼ (gelb) zur Einschaltung der Trigger-Position.
5. Drücken Sie „OPTION“ erneut zur Rückkehr in den normalen Messbetrieb
Im Trigger-Modus Trigger-Alternate

6. Press „OPTION“, im Display erscheint:

◀/▶ – Time

▲/▼ – Trig 1

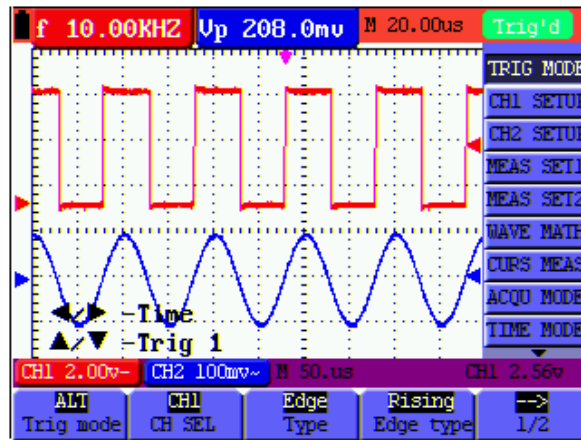


Abbildung 8

7. Drücken Sie ◀ (gelb) oder ▶ (gelb) zum Einstellen der horizontalen Position der Zeitbasis und drücken Sie ▲ (gelb) oder ▼ (gelb) zum Einstellen der Triggerhorizontalposition im Kanal 1.

8. Drücken Sie „OPTION“ erneut zur Rückkehr in den normalen Messbetrieb

◀/▶ – Time Base

▲/▼ – Trig 2

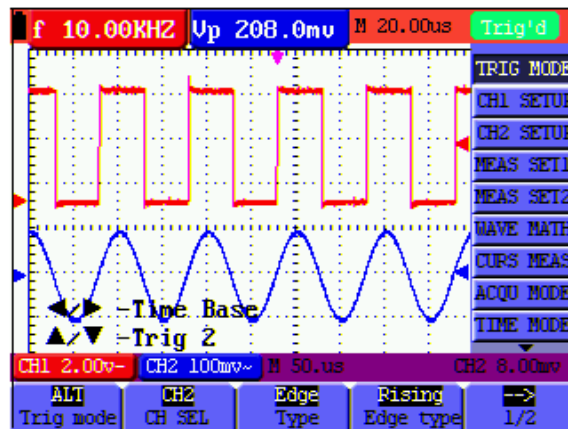


Abbildung 9

9. Drücken Sie ◀ (gelb) oder ▶ (gelb) zum Einstellen der Hauptzeitbasis und drücken Sie ▲ (gelb) oder ▼ (gelb) zum Einstellen der Triggerhorizontalposition im Kanal 2.

10. Drücken Sie „OPTION“ erneut zur Rückkehr in den normalen Messbetrieb

Begriffserläuterung:

- * **Vertikaler Skalierungsfaktor:** steht für die Spannungsamplitude, dargestellt durch ein vertikales Gitter im Anzeigebereich, durch deren Einstellung das Signal verstärkt oder abgeschwächt werden kann, wodurch die Signalamplitude auf den erwarteten Messbereich eingeregelt werden kann.
- * **Vertikale Nullposition:** steht für die Grundlinie, durch dessen Einstellung die Anzeigeposition der Kurve auf dem Bildschirm angepasst werden kann.
- * **Haupt-Zeitbasis:** stellt die durch ein horizontales Gitter im Anzeigebereich angezeigten Zeitwerte dar.
- * **Horizontale Triggerposition:** steht für die Zeitabweichung zwischen dem tatsächlichen Triggerpunkt und der Mittellinie des Bildschirms, dargestellt als 0 im Bildschirmmittelpunkt.
- * **Triggerpegelposition:** steht für die Spannungsabweichung zwischen dem tatsächlichen Triggerpegel und der Nullposition des triggenden Signalquellenkanals.

5.5. Wiederaufruf der Hersteller-Einstellungen

Um das Oszilloskop wieder auf die vom Hersteller gespeicherten Einstellungen zurückzusetzen, wie beschrieben verfahren:

1. Drücken Sie „MENU“, um das Menü am rechten Bildschirmrand aufzurufen.
2. Drücken Sie „MENU Pfeil oben oder MENU Pfeil unten“ zur Auswahl der Funktionseinstellungen. Es werden 3 Optionen am unteren Bildschirmrand angezeigt.
3. Drücken Sie „F1“, um „Recall Factory“ für den Wiederaufruf der Hersteller-Einstellungen auszuwählen.
4. Drücken Sie „F2“ zur Auswahl der „Auto calibration“. Variiert die Umgebungstemperatur über 5°C, so sollte eine „Auto calibration“ durchgeführt werden.

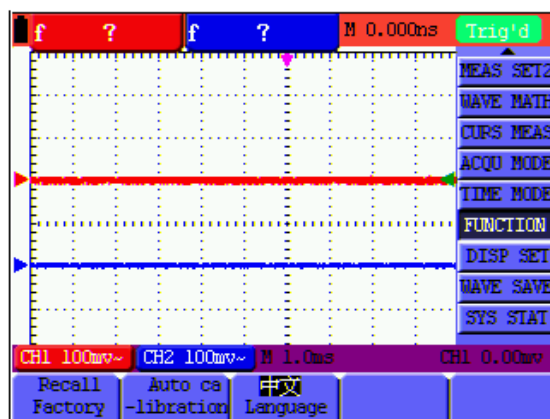


Abbildung 10: Reset des Oszilloskopes

5.6. Anschlussmöglichkeiten der Eingänge

(Beachten Sie Abbildung 2)

Das Oszilloskop verfügt über 7 Signal-Eingänge: zwei Sicherheits-BNC-Eingangsbuchsen (CH1 und CH2) für Messungen mit dem Oszilloskop, sowie über vier 4 mm-Sicherheitseingänge für Messungen mit dem Multimeter.

Isolierte Eingänge erlauben unabhängige Messungen zwischen Oszilloskop und Multimeter.

5.7. Anzeigen eines unbekannten Signals mit Auto Set

Mit der Auto-Set-Funktion kann das Oszilloskop unbekannte Signale automatisch anzeigen und messen. Diese Funktion optimiert Position, Bereich, Zeitbasis und Trigger und ermöglicht so eine stabile Darstellung nahezu jeder Kurve. Diese Funktion ist besonders praktisch, wenn Sie schnell mehrere Signale prüfen möchten.

Schalten Sie die Auto-Set-Funktion wie folgt ein:

1. Verbinden Sie den Tastkopf mit den zu prüfenden Signalen.
2. Drücken Sie Taste AUTO SET, um das Oszilloskop in den automatischen Messbetrieb zu schalten. Die zu messenden Signale erscheinen auf dem Bildschirm.

5.8. Automatische Nullstellung der horizontalen Triggerposition und der Triggerpegelposition

Gehen Sie wie folgt vor, um die horizontale Triggerposition und die Triggerpegelposition automatisch wieder auf den Nullpunkt zu bringen, nachdem die beiden Werte durch Maximierung aus der Bildschirmmitte bewegt wurden.

1. Drücken Sie die Taste V, um die horizontale Triggerposition automatisch auf den Nullpunkt zu setzen.
2. Drücken Sie die Taste R, um die Triggerpegelposition automatisch auf den Nullpunkt zu setzen.

5.9. Automatische Messungen

Das Oszilloskop bietet 5 automatische Messbereiche an. Sie können zwei numerische Werte anzeigen lassen: measurement 1 und measurement 2. Sie können diese Messwerte unabhängig voneinander auswählen und die Messungen entweder an der Kurve von Kanaleingang 1 oder 2 vornehmen.

So wählen Sie eine Frequenz für Kanal 1 aus:

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.

2. Drücken Sie die Taste MENU ▲ oder MENU ▼, um measurement 1 zu wählen. Fünf Menüeinträge erscheinen am unteren Bildschirmrand.
3. Drücken Sie die Taste F1 und wählen Sie Freq CH1 aus dem Menüeintrag Mean. Das Fenster measurement 1 wird rot und zeigt die Frequenz für den Kanaleingang 1 an.

So wählen Sie die Spitze-Spitze-Messung für Kanaleingang 2 aus:

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼ und wählen Sie measurement 2, dessen 5 Menüpunkte am unteren Bildschirmrand erscheinen.
3. Drücken Sie die Taste F4, um PK-PK CH2 aus dem Menüpunkt Peak-Peak auszuwählen. Das Fenster measurement 2 wird blau und zeigt den Spitze-Spitzewert für Kanaleingang 2 an.

Siehe folgende Abbildung:

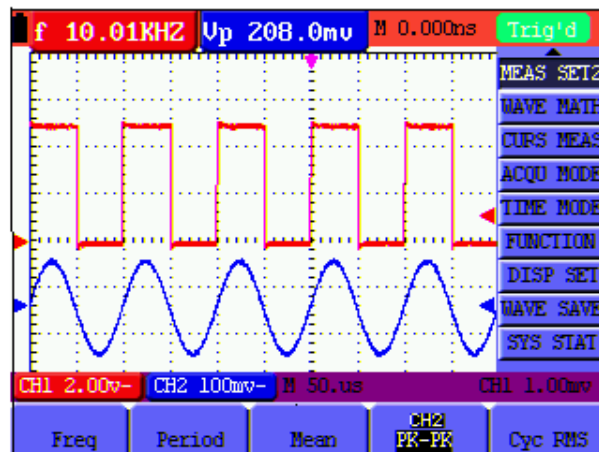


Abbildung 11: automatische Oszilloskop-Messungen

5.10. Einfrieren der Messungen auf dem Bildschirm

Sie können den Bildschirm mit allen Messwerten und Wellenformen einfrieren.

1. Drücken Sie „RUN/STOP“ zum Einfrieren des Bildschirms. „STOP“ erscheint in der oberen rechten Ecke des Bildschirms.
2. Drücken Sie „RUN/STOP“ erneut, um in den normalen Messbetrieb zurückzukehren.

Siehe folgende Abbildung:

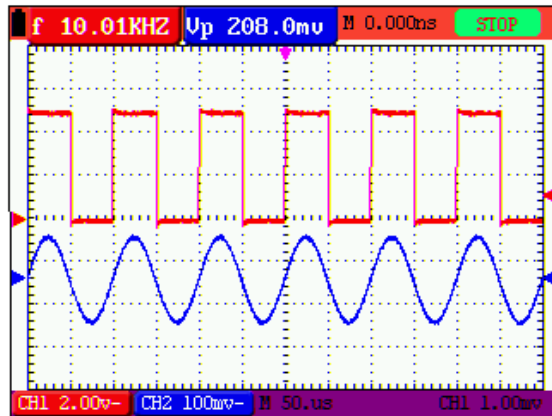


Abbildung 12: Einfrieren der Anzeige

5.11. Anzeige unsauberer Signale

Mit dem Mittelwert-Erfassungsmodus können Sie die dargestellte Kurve durch Mittelwertbildung aus mehreren Datenblöcken glätten. Sie können die Anzahl der zu verwendenden Blöcke (4, 16, 64 und 128) wählen.

Hinweis:

Für eine bestmögliche Funktion des Mittelwertmodus muss die Kurve sich wiederholen. Je höher die Anzahl der zu verwendenden Blöcke ist, desto langsamer wird die Kurve aktualisiert.

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼ und wählen Sie ACQU, dessen 4 Menüpunkte am unteren Bildschirmrand erscheinen.
3. Drücken Sie die Taste F3, um Average Factors auszuwählen, und drücken Sie dann F4, um den Eintrag Averaging 16 zu wählen. Damit wird das Ergebnis von 16 Signalblöcken gemittelt und das Mittelwtergebnis wie in den folgenden Abbildungen angezeigt.

Siehe folgende Abbildung:

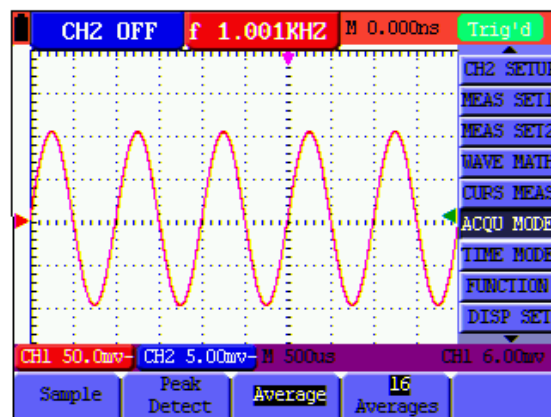


Abbildung 13: Durchschnittsfaktor im Messbetrieb

5.12. Anzeige von veränderlichen Signalen

Zur Anzeige von veränderlichen Signalen dient die Funktion Persistence.

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼, um DISP SET zu wählen. Vier Menüeinträge erscheinen am unteren Bildschirmrand.
3. Drücken Sie die Taste F2, um Persist 1 sec, 2 sec, und 5 sec, infinite oder close zu wählen. In diesem Fall gehen Sie zu Infinite, und die angezeigte Dynamik wird auf dem Bildschirm kontinuierlich beibehalten. Wenn der Eintrag close gewählt wird, schließt sich die Funktion Persistence.

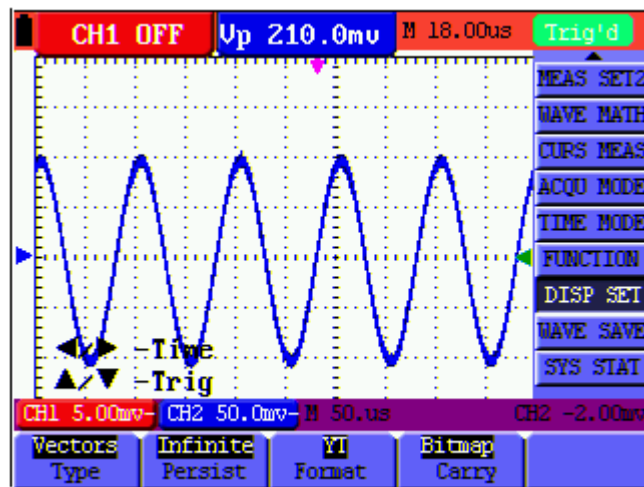


Abbildung 14: dauerhafte Überwachung eines dynamischen Signals

5.13. Anzeigen von Impulsen mit der Funktion Peak Detection

Mit dieser Funktion können Sie Ereignisse von mindestens 50 ns Dauer (Impulse oder andere asynchrone Kurven) anzeigen.

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼, um ACQU MODE zu wählen. Vier Menüeinträge erscheinen am unteren Bildschirmrand.

- Drücken Sie die Taste F2, um zu Glitch Detect zu gelangen. In diesem Fall können Sie den Impuls testen. Sie sehen jetzt einen Bildschirm wie in Abbildung 15 unten.

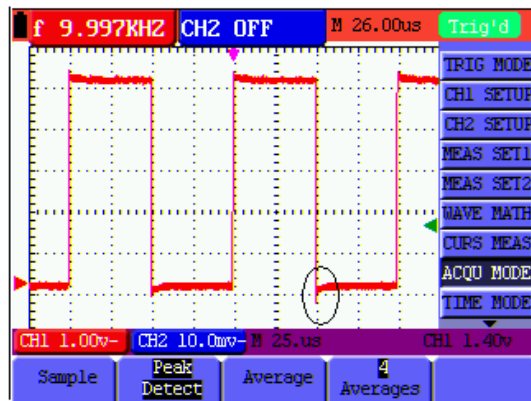


Abbildung 15: Spitzen-Messung

Begriffserläuterung

- * **Sammelmodus:** Das Oszilloskop transformiert die in den drei Modi Abtasten, Spitzenwerterkennung und Mittelwertbildung gesammelten Analogdaten in ein digitales Format.
- * **Abtasten:** Das Oszilloskop tastet das Signal in regelmäßigen Abständen ab, um die Kurve in diesem Modus zu rekonstruieren. In den meisten Fällen wird das Analogsignal zwar korrekt dargestellt, aber schnelle Änderungen zwischen zwei Abtastzyklen gehen verloren, so dass schmale Impulse in dem Signal vermutlich nicht erscheinen.
- * **Spitzenwerterkennung:** Das Oszilloskop tastet in jedem Abtastintervall die Minimal- und Maximalwerte von Signalen ab und zeigt die Kurve mit dem abgetasteten Daten in diesem Modus. Es kann somit also eventuell im Abtastmodus nicht aufgezeichnete steile Impulse erfassen, aber die Störungen sind sichtbar.
- * **Mittelwertbildung:** das Oszilloskop sammelt mehrere Kurven, bildet davon den Mittelwert und zeigt die gemittelte Kurve in diesem Modus an; auf diese Weise werden unregelmäßige Störungen reduziert.
- * **Zeitdauer:** Wenn eine neue Kurve angezeigt wird, verschwindet die zuvor auf dem Bildschirm angezeigte Kurve nicht augenblicklich, um nur für einen bestimmten Zeitraum angezeigt zu werden. Das heißt, durch Einstellen der Zeitdauer kann die Kurve kontinuierlicher angezeigt werden, wodurch sich eine Anzeige ähnlich wie bei einem analogen Oszilloskop ergibt.
- * **Laufender Abtastmodus:** das Oszilloskop aktualisiert die Kurve-Abtastpunkte, indem es die Anzeige von links nach rechts über den Bildschirm laufen lässt; dies gilt nur für Einstellungen der primären Zeitbasis von mehr als 50 ms.

5.14. Auswahl der Wechselstromkopplung

Nach einem Reset ist das Oszilloskop gleichstromgekoppelt, so dass Wechselströme und Gleichströme auf dem Bildschirm erscheinen. Benutzen Sie die Wechselstromkopplung, wenn Sie ein schwaches Wechselstromsignal auf einem Gleichstromsignal sichtbar machen wollen. So wählen Sie die Wechselstromkopplung:

- Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
- Drücken Sie die Taste MENU ▲ oder MENU ▼, um CH1 Setting zu wählen. Vier Menüeinträge erscheinen am unteren Bildschirmrand.

- Drücken Sie die Taste F1 und gehen Sie zu AC. Unten links im Bildschirm erscheint das Symbol AC Coupling.

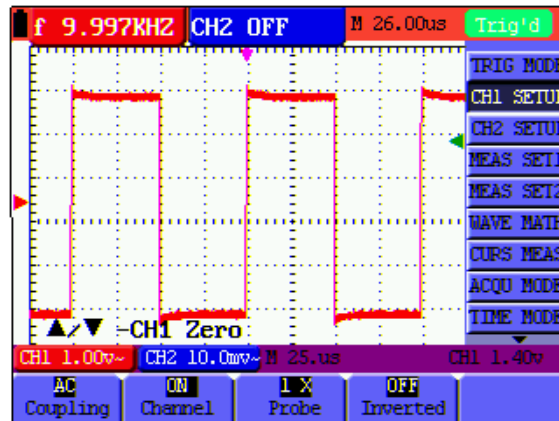


Abbildung 16: AC-Coupling

5.15. Umkehr der Polarität der angezeigten Wellenform

Zur Umkehr des Wellenformsignals an CH1, wie beschrieben verfahren:

- Drücken Sie „MENU“, um das Funktionsmenü anzeigen zu lassen.
- Drücken Sie „MENU Pfeil oben“ oder „MENU Pfeil unten“ um die CH1-Einstellungen auszuwählen. Vier Punkte werden in der unteren Leiste des Bildschirms angezeigt.
- Drücken Sie „F4“, um „Inverted“ zu aktivieren. Das gemessene Signal auf dem Bildschirm wird invertiert.

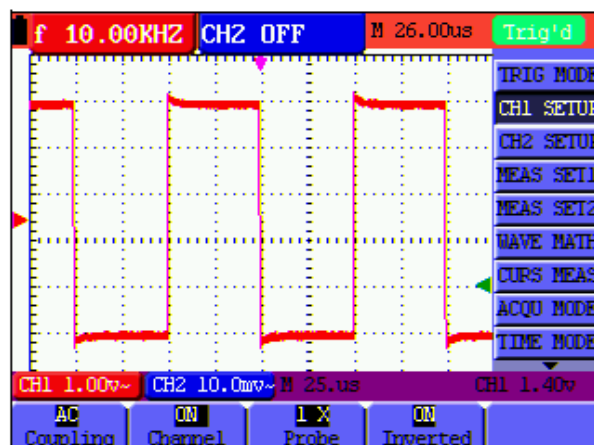


Abbildung 17: Inverted

5.16. Verwendung der Kurven-Rechenfunktion

Wenn Sie die in Kanal 1 und 2 eingehenden Kurven addieren ($CH1 + CH2$), subtrahieren ($CH1 - CH2$, $CH2 - CH1$), multiplizieren ($CH1 * CH2$) oder dividieren ($CH1 / CH2$), zeigt das Oszilloskop die mathematische errechnete Kurve M sowie die in Kanal 1 und 2 eingehenden Kurven auf dem Bildschirm an.

Die mathematischen Funktionen führen die Berechnungen für jeden Punkt der Kurven von Kanal 1 und Kanal 2 durch.

So verwenden Sie eine Rechenfunktion:

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.
2. Drücken Sie die Taste MENU ▲ oder MENU ▼, um Waveform Calculation zu wählen. Fünf Menüeinträge erscheinen am unteren Bildschirmrand.
3. Drücken Sie die Taste F3, um CH1+CH2 zu wählen und die gewählte Kurve M (grün) auf dem Bildschirm anzuzeigen. Drücken Sie F3 erneut, um Waveform Calculation zu schließen.
4. Drücken Sie OPTION und unten links im Bildschirm als
◀/▶ - CHMath Volts/Div
▲/▼ CHM Zero
5. Drücken Sie dann ▲ (gelb) oder ▼ (gelb), um die vertikale Anzeigeposition von Kurve M einzustellen. Drücken Sie ◀ (gelb) oder ▶ (gelb), um die Zeitfaktoren für die Anzeige der Kurve M einzustellen.

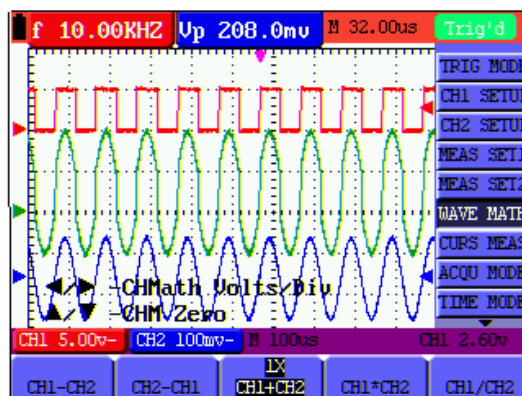


Abbildung 18: Kurven-Rechenfunktion

5.17. Verwendung eines USB Massenspeichergeräts zur Speicherung von Kurvendaten

Verbinden Sie das USB Massenspeichergerät mit der USB-Buchse und drücken Sie die Taste Copy, um die aktuelle Kurve auf dem externen Gerät zu speichern. Die Dateien werden nacheinander WAVE1.BIN, WAVE2.BIN, WAVE3.BIN benannt. Wenn der Vorgang beendet ist, erscheint auf dem Bildschirm die Meldung „Data have been written!“ [Daten wurden geschrieben]. Schließen Sie dann das USB Massenspeichergerät an den Computer an und öffnen Sie die Daten mit der OWON-Software.

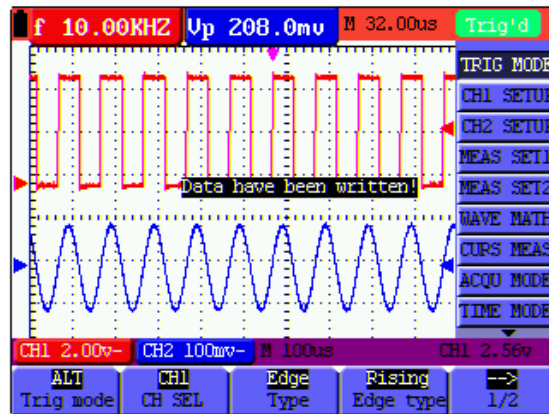


Abbildung 19

6. Betrieb mit dem Multimeter

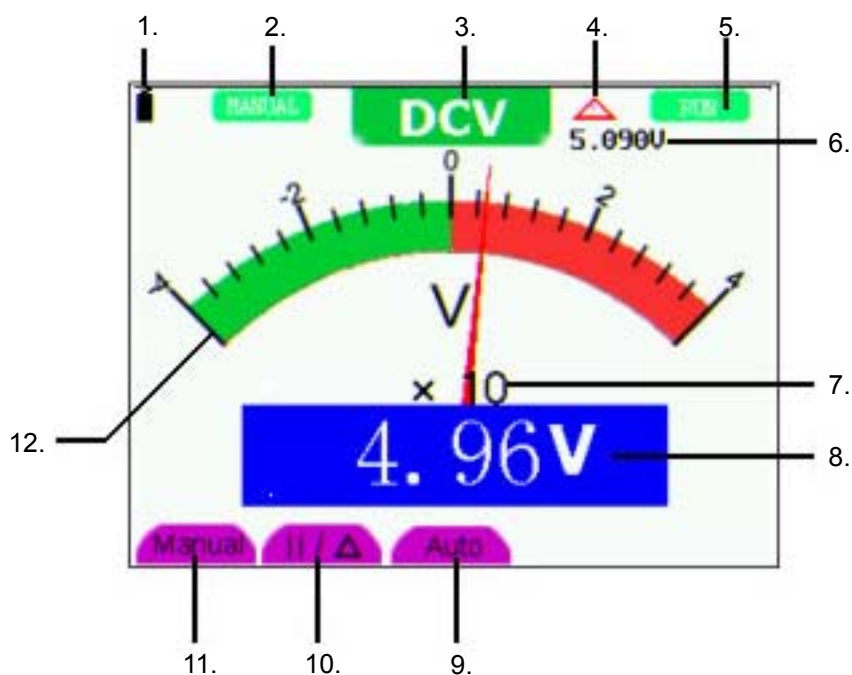


Abbildung 20: Betriebsanzeige DMM

1. Batteriezustandsanzeige
2. Symbol zur Anzeige nach Aktivierung der manuellen Bereichswahl
3. Messfunktionssymbole (DCV, ACV, DCA, ACA, R, Diode, ·))))), C)
4. Symbol für Relativwertmessfunktion
5. RUN/STOP-Umschaltung
6. Anzeige des Referenzwertes für Relativwertmessfunktion
7. Anzeige des Multiplikators für die Analoganzeige
8. digitale Messwertanzeige
9. automatische Kontrollfunktion des Messbereiches
10. Kontrollfunktion für Absolut/Relativwertmessfunktion
11. Aktivierung der manuellen Bereichswahl
12. Skala der analogen Anzeige

6.1. Aktivierung des Multimeter-Modus

Drücken Sie „DMM/OSC“, um vom Oszilloskop-Modus in den Multimeter-Modus umzuschalten.

6.1.1. Widerstandsmessungen

Hinweis:

Kondensatoren vor Messung entladen! Keine Messungen an Spannungsquellen vornehmen.

Zur Widerstandsmessung wie beschrieben verfahren:

1. Drücken Sie die Taste „R“, um in die Widerstandsmessungsfunktion umzuschalten. „R“ erscheint in der Anzeige.
2. Stecken Sie die schwarze Prüflleitung in die „COM“-Eingangsbuchse und die rote Prüflleitung in die „V/W“-Eingangsbuchse.
3. Verbinden Sie die Prüflspitzen mit dem zu messenden Widerstand und lesen Sie den Widerstandswert von der Anzeige ab.

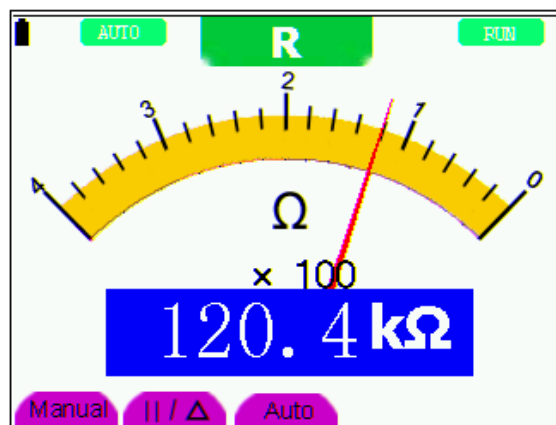



Abbildung 21: Widerstandsmessfunktion

6.1.2. Diodenprüffunktion

Hinweis:

Kondensatoren vor Messung entladen! Keine Messungen an Spannungsquellen vornehmen.

Um Messungen an Dioden durchzuführen, wie beschrieben verfahren:

1. Drücken Sie die Taste „R“. Es erscheint „R“ in der Anzeige.
2. Drücken Sie die Taste „SET“, um auf die Diodenprüffunktion umzuschalten.  erscheint in der Anzeige.

3. Stecken Sie die schwarze Prüflleitung in die „COM“-Eingangsbuchse und die rote Prüflleitung in die „V/W“-Eingangsbuchse.
4. Verbinden Sie die Prüflleitungen mit der zu messenden Diode und lesen Sie den Messwert von der Anzeige ab.




Abbildung 22: Diodenprüffunktion

6.1.3. Durchgangsprüffunktion

Hinweis:

Kondensatoren vor Messung entladen! Keine Messungen an Spannungsquellen vornehmen.

Um die Durchgangsprüffunktion mit dem Summer durchzuführen, wie beschrieben verfahren:

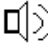1. Drücken Sie die Taste „R“, es erscheint „R“ in der Anzeige.
2. Drücken Sie 2x die Taste „SET“, um in die Durchgangsprüffunktion zu gelangen. 
3. Stecken Sie die schwarze Prüflleitung in die „COM“-Eingangsbuchse und die rote Prüflleitung in die „V/W“-Eingangsbuchse.
4. Verbinden Sie die Prüflleitungen mit den zu messenden Testpunkten. Ist der Widerstandwert $< 50 \Omega$ gibt das Gerät ein akustisches Signal zur Anzeige der Durchgängigkeit.

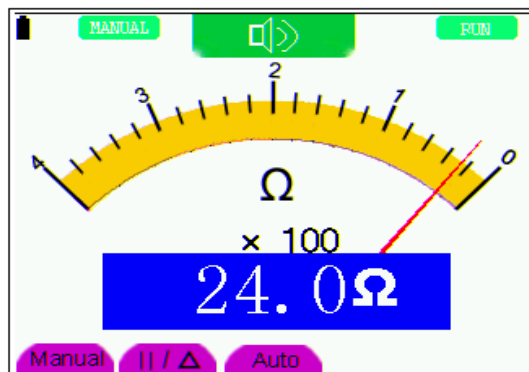


Abbildung 23: Durchgangsprüffunktion

6.1.4. Kapazitätsmessungen

Hinweis:

Kondensatoren vor Messung entladen! Keine Messungen an Spannungsquellen vornehmen.

Zur Messung von Kapazität, wie beschrieben verfahren:

1. Drücken Sie die Taste „R“, es erscheint „R“ in der Anzeige.
2. Drücken Sie 3x die Taste „SET“ bis „C“ in der Anzeige erscheint.
3. Stecken Sie die schwarze Prüfleitung in die „COM“-Eingangsbuchse und die rote Prüfleitung in die „V/W“-Eingangsbuchse.
4. Verbinden Sie die Prüfleitung mit dem zu Messenden Kondensator und lesen Sie den Messwert von der Anzeige ab.

Hinweis:

Bei Messungen von Kapazitäten von $<5\text{nF}$, verwenden Sie den mitgelieferten Messadapter für kleine Kapazitäten und aktivieren Sie vor der Messung die Relativwertfunktion, um die bestmögliche Genauigkeit zu erhalten.

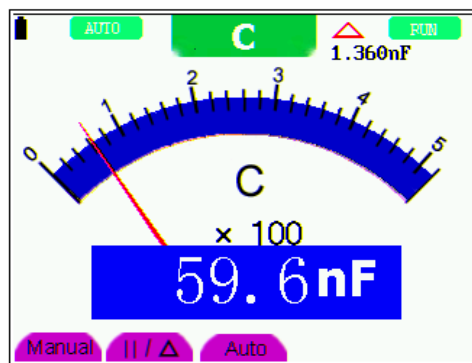


Abbildung 24: Kapazitätsmessung

6.1.5. Gleichspannungsmessung

Zur Messung von Gleichspannungen, wie beschrieben verfahren:

1. Drücken Sie die Taste „V“, es erscheint „DCV“ in der Anzeige
2. Stecken Sie die schwarze Prüfleitung in die „COM“-Eingangsbuchse und die rote Prüfleitung in die „V/W“-Eingangsbuchse.
3. Verbinden Sie die Prüfleitungen parallel mit der zu messenden Spannungsquelle und lesen Sie den Messwert von der Anzeige ab.

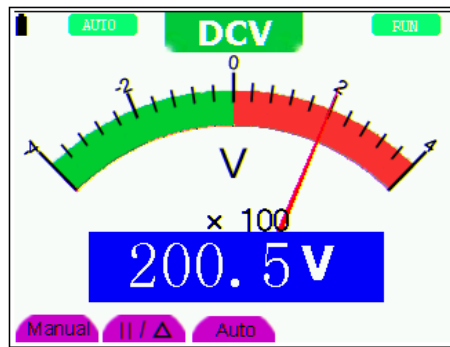


Abbildung 25: Gleichspannungsmessung (DCV)

6.1.6. Gleichspannungsmessung

Zur Messung von Gleichspannungen, wie beschrieben verfahren:

1. Drücken Sie die Taste „V“, es erscheint „DCV“ in der Anzeige
2. Drücken Sie die Taste „SET“, es erscheint „ACV“ in der Anzeige
3. Stecken Sie die schwarze Prüflleitung in die „COM“-Eingangsbuchse und die rote Prüflleitung in die „V/W“-Eingangsbuchse.
4. Verbinden Sie die Prüflleitungen parallel mit der zu messenden Spannungsquelle und lesen Sie den Messwert von der anzeige ab.

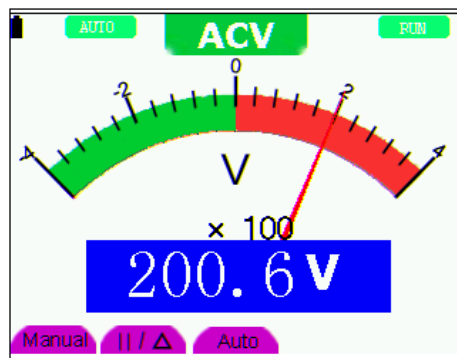


Abbildung 26: Wechselspannungsmessung (ACV)

6.1.7. Gleich- und Wechselstrommessung

Achtung!

Keine Strommessungen in Schaltungen mit einem Potential über 400 V vornehmen. Extreme Verletzungsgefahr und/oder die Gefahr der Beschädigung des Messgerätes.

Der 10-A-Eingang ist mit einer entsprechenden Sicherung abgesichert. Bei Anschluss einer Spannungsquelle an diesen Eingang besteht Verletzungsgefahr und die Gefahr der Zerstörung des Gerätes.

Warnung!

- * Keine Spannung direkt über die Anschlüsse legen. Das Gerät darf nur in Reihe mit der zu messenden Schaltung angeschlossen sein.
- * Der 10 A-Eingang ist mit einer entsprechenden Sicherung abgesichert. Bei Anschluss einer Spannungsquelle an diesen Eingang besteht Verletzungsgefahr und die Gefahr der Zerstörung des Gerätes.

Zur Durchführung von Strommessungen, zu messende Schaltung unterbrechen und Prüflleitungen an zwei Anschlusspunkte anlegen. Niemals die Prüflleitungen parallel über eine Spannungsquelle anlegen. Dies kann zu einem Ansprechen der Sicherung und Zerstörung der zu prüfenden Schaltung führen.

Zur Gleichstrommessung wie beschrieben verfahren:

1. Drücken Sie die Taste „A“, es erscheint „DCA“ in der Anzeige
2. Zum Umschalten zwischen Gleichstrom (DCA) und Wechselstrom (ACA) die Taste „SET“ drücken.
3. In der rechten unteren Ecke der Anzeige sind die Symbole „mA“ und „10A“ zu sehen. Mit den Tasten „F4“ bzw. „F5“ kann zwischen dem mA-Messbereich (40/400mA) und dem 10A-Messbereich umgeschaltet werden.
4. Stecken Sie die schwarze Prüflleitung in die „COM“-Eingangsbuchse und die rote Prüflleitung in die „mA“-Eingangsbuchse bei Strommessungen <400mA bzw. in die „10A“-Eingangsbuchse bei Strommessungen von >400mA bis 10A.
5. Zu messende Schaltung unterbrechen und Prüflleitungen in Reihe mit der zu messenden Schaltung anschließen.
6. Messwert in der Anzeige ablesen.
7. Nach erfolgter Messung, Schaltung spannungslos schalten und Prüflleitungen wieder entfernen.

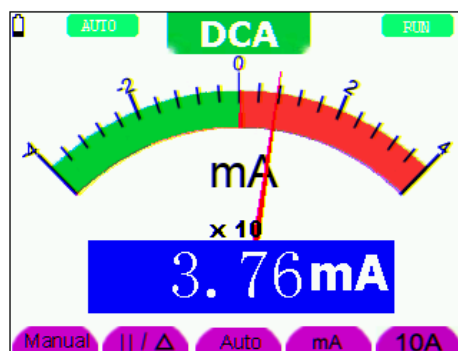


Abbildung 27: Gleichstrommessung <400 mA (DCA)



Abbildung 28: Gleichstrommessung <10 A (DCA)

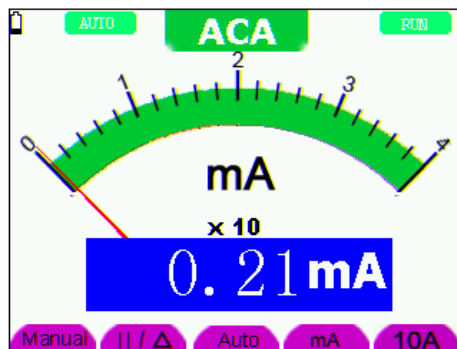


Abbildung 29: Wechselstrommessung <400 mA (ACA)

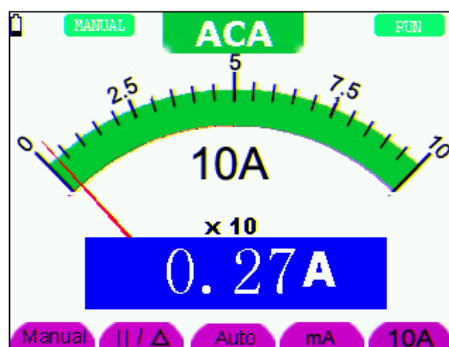


Abbildung 30: Wechselstrommessung <10 A (ACA)

6.2. Einfrieren der Messergebnisse

Sie können die angezeigten Messwerte jederzeit einfrieren.

1. Drücken Sie die Taste RUN /STOP, um den Bildschirm einzufrieren. Rechts oben auf dem Bildschirm erscheint dann STOP.

2. Drücken Sie die Taste RUN /STOP erneut, um die Messung wieder aufzunehmen.

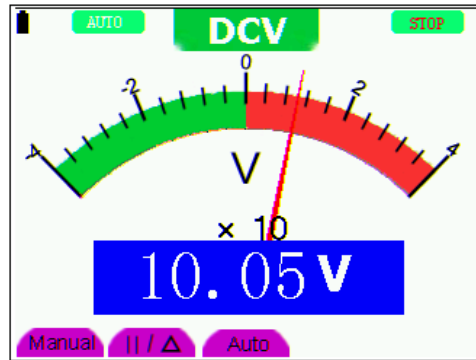


Abbildung 31: Einfrieren der Messergebnisse

6.3. Durchführen einer relativen Messung

Ein aktueller Messwert relativ zum definierten Referenzwert wird bei einer relativen Messung angezeigt.

Das folgende Beispiel zeigt, wie Sie eine relative Messung durchführen. Zunächst müssen Sie einen Referenzwert aufnehmen.

1. Drücken Sie die Taste **R**; **R** erscheint oben im Bildschirm.
2. Drücken Sie die Taste **AUTO SET**, bis **C** oben im Bildschirm erscheint.
3. Stecken Sie das Kapazitäts-Erweiterungsmodul in die Kapazitäts-Messbuchse.
4. Wenn sich die Anzeige stabilisiert hat, drücken Sie die Taste **F2**; **▲** erscheint dann oben im Bildschirm. Der gespeicherte Referenzwert wird unter **▲** angezeigt.
5. Schließen Sie die zu messende Kapazität an; der Hauptmesswert auf dem Bildschirm ist der aktuelle Kapazitätswert.

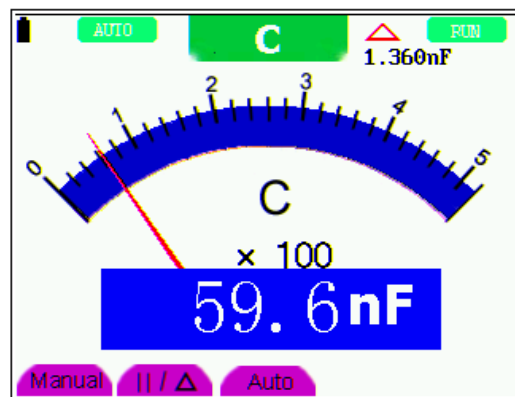


Abbildung 32: Relative Messung

6.4. Auswählen der automatischen/manuellen Bereichswahl

Die Standardeinstellung ist die automatische Bereichswahl. So stellen Sie die manuelle Bereichswahl ein:

1. Drücken Sie die Taste **F1**; **MANUAL** erscheint dann oben links im Bildschirm, und das Gerät befindet sich im manuellen Bereichswahlmodus.
2. Im manuellen Modus können Sie den durch Drücken der Taste **F1** den Messbereich um jeweils eine Stufe vergrößern. Drücken Sie nach Erreichen des größten Messbereichs die Taste **F1** erneut, um zum kleinsten Messbereich zu gelangen. **Das Messergebnis ergibt sich aus der Multiplikation des Messwerts des Zeigers mit der Leistung und der Einheit des Hauptmesswerts auf dem Bildschirm.**
3. Drücken Sie die Taste **F3**; **AUTO** erscheint dann oben links im Bildschirm, und das Gerät kehrt in den automatischen Bereichswahlmodus zurück.

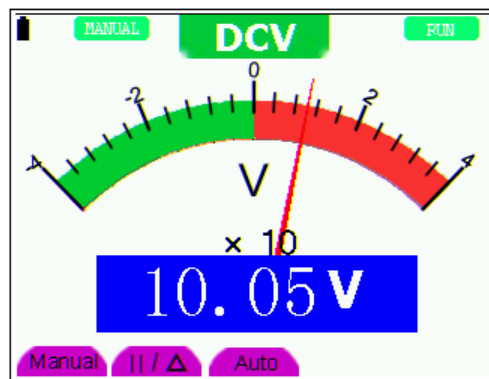


Abbildung 33: automatischen/manuellen Bereichswahl

Achtung!

Kapazitätsmessfunktion arbeitet nur mit automatischer Bereichseinstellung. Eine manuelle Auswahl ist nicht möglich.

7. Erweiterte Oszilloskopfunktion

Dieses Kapitel beschreibt die Oszilloskopfunktion des Messgeräts.

7.1. Vertikaleinstellung für Kanal 1 und 2

Jeder Kanal besitzt sein eigenes Menü für die Vertikaleinstellung, und alle Einstellungen können kanalspezifisch gemacht werden.

So machen Sie Vertikaleinstellungen für Kanal 1 und 2:

1. Drücken Sie die Taste MENU, und das Funktionsmenü erscheint an rechten Bildschirmrand.

- Drücken Sie die Taste MENU ▲ oder MENU ▼, um zu CH1 Setting zu gelangen. Es erscheinen vier Optionen am unteren Bildrand.
- Drücken Sie die Tasten F1 bis F4, um die verschiedenen Einstellungen zu machen.

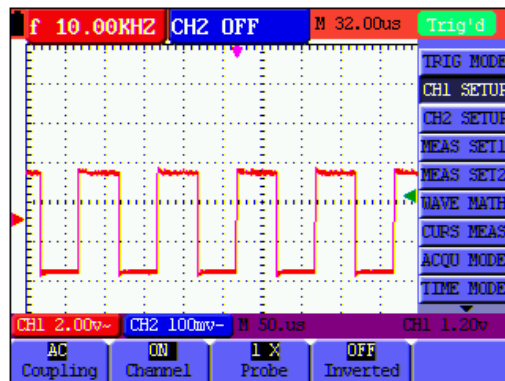


Abbildung 34: Vertikal-Einstellungen

Die folgende Tabelle beschreibt das Menu Vertical Channel:

Funktionsmenü	Einstellung	Beschreibung
Coupling	AC	Triggert nur den AC-Anteil der Kurve
	DC	Triggert die gesamte Kurve (AC+DC)
Channel	OFF	Schließt den Kanal.
	ON	Öffnet den Kanal.
Probe	1X	Wählen Sie einen Faktor, der dem Dämpfungsfaktor des Tastkopfes entspricht, um eine korrekte vertikale Skalanzeige zu erhalten.
	10X	
	100X	
	1000X	
Invert	OFF	Die Kurve wird normal dargestellt.
	ON	Öffnen Sie die Funktion Invert .

7.1.1. Einstellen der Kanalkopplung

Beispiel: Kanal 1:

- * Drücken Sie zuerst F1 Coupling und dann AC, um eine Wechselstromkopplung einzustellen. Die in dem zu testenden Signal enthaltene DC-Komponente wird blockiert.
- * Drücken Sie zuerst F1 Coupling und dann DC, um eine Gleichstromkopplung einzustellen. Sowohl die DC- als auch die AC-Komponenten des zu testenden Signals sind erlaubt.
- * Die Kurve wird wie in den Abbildungen 35 und 36 dargestellt.

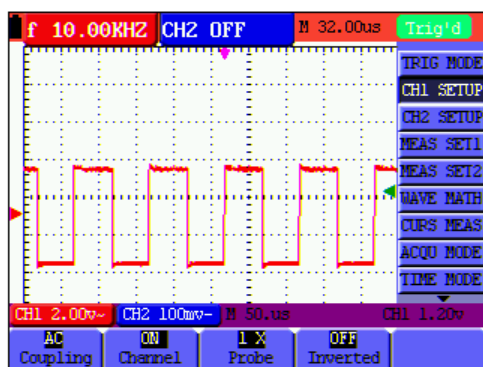


Abbildung 35: AC Kopplung

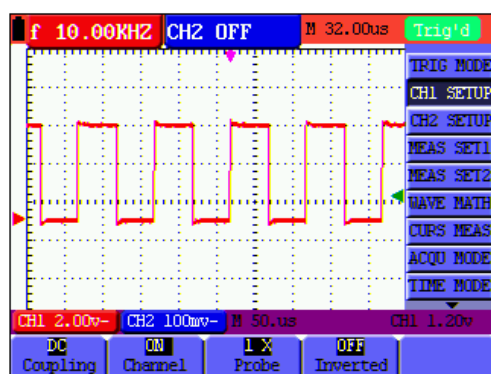


Abbildung 36: DC Kopplung

7.1.2. Kanal öffnen und schließen

Beispiel: Kanal 1:

- * Drücken Sie zunächst die Taste F2 Channel und dann OFF, um Kanal 1 zu schließen.
- * Drücken Sie zunächst die Taste F2 Channel und dann ON, um Kanal 1 zu öffnen.

7.1.3. Einstellen der Tastkopfdämpfung

Zur Vermeidung zu hoher Eingangsspannungen empfehlen wir, die Tastkopfdämpfung auf 10X zu stellen. Wenn Sie die Tastkopfdämpfung auf 10X eingestellt haben, müssen Sie den Anzeigepegel um 10X vergrößern, damit die angezeigte Amplitude der echten Amplitude entspricht.

Drücken Sie F3 Probe, um den Tastkopfdämpfungspegel einzustellen.

Tastkopfdämpfungspegel und entsprechende Menüeinstellung

Tastkopf-Dämpfungspegel	entsprechende Menü-Einstellung
1:1	1X
10:1	10X
100:1	100X
1000:1	1000X

7.1.4. Einstellung der invertierten Wellenform

Invertierte Wellenform: Das angezeigte Signal wird um 180° ungekehrt.

- * Drücken Sie die Taste „F4“, um die Invertierung durchzuführen.
- * Durch erneutes Drücken von „F4“ wird die Invertierung wieder aufgehoben.

7.2. Einstellungen im Menü Math Funktion

WAVE MATH zeigt das Ergebnis von Additions-, Subtraktions-, Multiplikations- und Divisionsberechnungen mit Kurven von Kanal 1 und 2 an. das Ergebnis der arithmetischen Berechnung kann mit einem Gitter oder dem Cursor gemessen werden. Sie können die Amplitude der berechneten Kurve mit CHM VOL, angezeigt in der Skalierungsfaktorform, einstellen. Der Amplitudenbereich ist 0.001 bis 10 mit Schritten in der Form 1-2-5, d.h. er kann als 0.001X, 0.002X, 0.005X...10X angegeben werden. Die Position der berechneten Kurve kann mit der Taste CHM ZERO nach oben oder unten verändert werden.

Einstellung	Beschreibung
CH1-CH2	subtrahiert CH2 von CH1
CH2-CH1	subtrahiert CH1 von CH2
CH1+CH2	addiert CH2 zu CH1
CH1*CH2	multipliziert CH mit CH1
CH1/CH2	dividiert CH1 durch CH2

Zur CH1+CH2 Berechnung der Wellenform, wie beschrieben verfahren:

1. Drücken Sie die Taste „MENU“, es erscheint das Funktionsmenü auf der rechten Seite.
2. Drücken Sie die Tasten ▲ oder ▼ um die Funktion „MATH“ auszuwählen. Es erscheinen 5 Optionen am unteren Bildschirmrand.
3. Drücken Sie die Taste „F3“ für CH1+CH2 und die bestehende Wellenform „M“ erscheint auf dem Bildschirm. Drücken Sie erneut „F3“ um die Wellenform „M“ zu schließen.
4. Drücken Sie die Taste „OPTION“, auf dem Bildschirm erscheint:

◀/▶ — CHMath Volts/Div

▲/▼ — CHM Zero

Press ◀(yellow) or ▶(yellow) to adjust the range of M waveform

Press ▲(yellow) or ▼(yellow) to adjust the position of M waveform

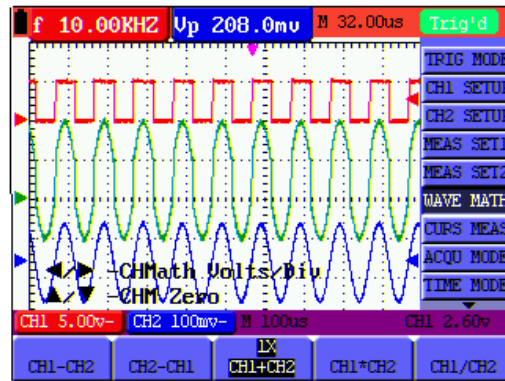


Abbildung 37: Wellenform während mathematischer Messung

7.3. Einstellen des Triggersystems

Der Trigger definiert den Zeitpunkt der Datenerfassung und Darstellung der Kurve. Bei richtiger Einstellung kann der Trigger eine instabile Anzeige in eine sinnvolle Kurve verwandeln.

Zu Beginn der Datenerfassung sammelt das Oszilloskop genügend Daten, um die Kurve links von Triggerpunkt zu zeichnen. Während es auf einen Triggerzustand wartet, sammelt das Oszilloskop weiter kontinuierlich Daten. Nachdem ein Trigger erkannt wurde, sammelt das Oszilloskop weiter kontinuierlich genügend Daten, um die Kurve rechts von Triggerpunkt zu zeichnen.

Für die Trigger-Modus-Einstellung, wie beschrieben verfahren:

1. Drücken Sie die Taste „MENU“, es erscheint das Funktionsmenü auf der rechten Seite.
2. Drücken Sie die Tasten „MENU Pfeil oben“ oder „MENU Pfeil unten“ um die Funktion „TRIG MODE“ auszuwählen. Es erscheinen 5 Optionen am unteren Bildschirmrand.
3. Wählen Sie die Tasten „F1“ bis „F5“ um verschiedene Einstellungen vorzunehmen
4. Drücken Sie die Taste „OPTION“, auf dem Bildschirm erscheint im Flanken-Trigger- oder Video-Trigger-Modus:

◀/▶ - Time

◀/▶ - Time base

▲/▼ - Trig

▲/▼ - Trig

Im Alternate-Trigger-Modus erscheint:

◀/▶ - Time

◀/▶ - Time base

▲/▼ - Trig1

▲/▼ - Trig2

5. Drücken Sie die Tasten ▲ (gelb) oder ▼ (gelb), um die vertikale Position des Triggers einzustellen.
Drücken Sie ◀ (gelb) oder ▶ (gelb), um die horizontale Position der Zeitbasis einzustellen.

7.4. Triggersteuerung

Es gibt drei Triggermodi: Flankentrigger, Videotrigger und Wechseltrigger. Jeder Triggermodus wird in einem eigenen Funktionsmenü eingestellt.

- * **Flankentrigger:** Der Flankentrigger triggert auf der Flanke des eingehenden Signals. Verwenden Sie den Flankentrigger für alle Signale außer für Videosignale.
- * **Videotrigger:** Verwenden Sie bei Standardvideosignalen Teilbild- oder Zeilentrigger.
- * **Wechseltrigger:** Wenn die Signalfrequenzen in Kanal 1 und 2 unterschiedlich sind, kann damit auch annähernd die Stabilität in beiden Kanälen garantiert werden.

Im Folgenden werden die Menüs für Flankentrigger, Videotrigger und Wechseltrigger beschrieben.

7.4.1. Flankentrigger

Flankentrigger ist ein Modus, in dem der Trigger ausgelöst wird, wenn die Triggerschwelle der Eingangssignalfanke überschritten wird. Wenn Edge triggering gewählt ist, erfolgt der Triggerimpuls auf der steigenden oder fallenden Flanke des Eingangssignals Abbildung 38.

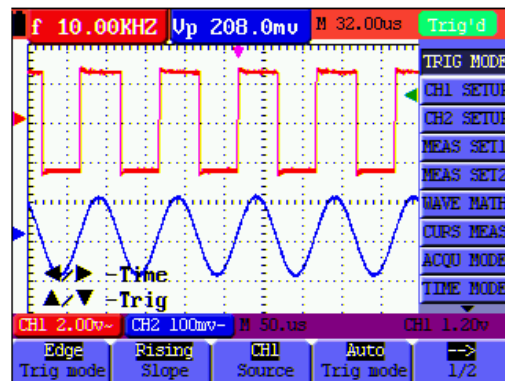


Abbildung 38: Flanken-Trigger

Menü der Flanken-Triggenung

Funktionsmenü	Einstellungen	Beschreibung
Slope	Rising Falling	Triggenung der aufsteigenden Flanke des Signals Triggenung der absteigenden Flanke des Signals
Source	CH1 CH2	CH1 wird als Triggerquelle genutzt CH2 wird als Triggerquelle genutzt
Trig mode	Auto Normal Single	Eingangssignale werden konstant auf dem Bildschirm angezeigt, ungeachtet der Trigger-Einstellungen Eingangssignale werden auf dem Bildschirm nur angezeigt, wenn die Trigger-Einstellungen zutreffen Sie können durch Drücken der Taste „RUN/STOP“ jeder Zeit manuell triggen. Ist die Wellenform erfasst, stoppt das Oszilloskop die Triggerung und wartet auf einen neuen Triggerbefehl
Coupling	AC DC HF Rjc LF Rjc	Trigget nur den AC-Anteil der Wellenform Trigger die gesamt Wellenform (DC+AC) Filtert die Hochfrequenzanteile aus der Wellenform, während der Triggerung Filtert die Niederfrequenzanteile aus der Wellenform, während der Triggerung
SENS		Einstellen der Trigger-Empfindlichkeit

Begriffserläuterung

Empfindlichkeit: Triggerschaltkreis mit Verzögerungsstrecke zur Vermeidung von Einflüssen durch Störsignale und zum Erhalt einer stabilen Triggerung. Die Verzögerungsstrecke ist zwischen 0.2div und 1.0div einstellbar. Das heißt, wenn Sie 1.0 div einstellen, reagiert der Triggerschaltkreis nicht bei Signalen mit einem Spitze-Spitze-Wert $\leq 1.0\text{div}$ und eliminiert so die Einflüsse von Störungen.

7.4.2. Videotrigger

Der Videotriggertyp dient zur Erfassung der Videosignalfomate NTSC, PAL oder SECAM. Verwenden Sie für alle anderen Signaltypen den Flankentrigger.

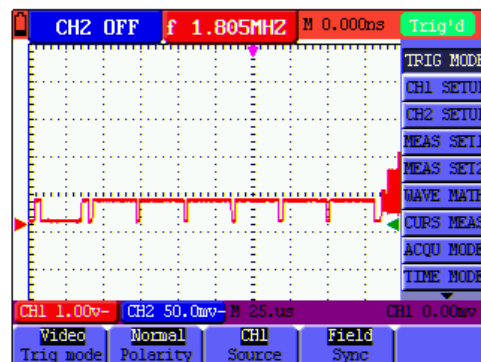


Abbildung 39:

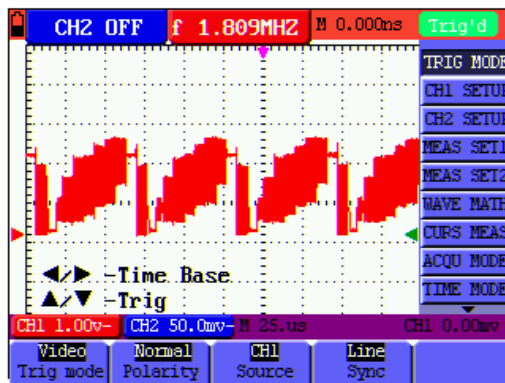


Abbildung 40

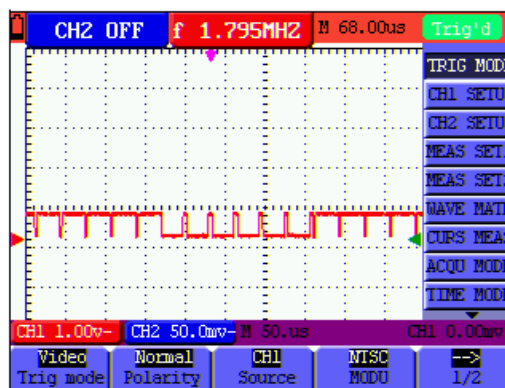


Abbildung 41

Video-Trigger

Funktionsmenü	Einstellungen	Beschreibung
Polarity	Normal Inverted	Geeignet für Video-Signale, deren Schwarzanteil niedrig ist Geeignet für Video-Signale, deren Schwarzanteil hoch ist
Source	CH1 CH2	CH1 wird als Triggerquelle ausgewählt CH2 wird als Triggerquelle ausgewählt
Sync (Synchronization)	Line Field Odd field	Setzt den Trigger synchron mit der Video-Zeile Setzt den Trigger synchron mit dem Video-Feld Setzt den Trigger synchron mit der ungeraden Video-Zeile
MODU (Modulation)	Even field NTSC PAL/SECAM	Setzt den Trigger synchron mit der geraden Video-Zeile Setzt die Synchronisation und melden den gewählten Video-Standard Setzt die Synchronisation und melden den gewählten Video-Standard
Line	Increase Decrease	Drücken Sie „F2“, der Zeilenwert wird angehoben Drücken Sie „F2“, der Zeilenwert wird reduziert
Line NO.		Zeigt den Zeilenwert an

7.4.3. Wechseltrigger

Bei Wechseltrigger kommt das Triggersignal in erster Linie von zwei vertikalen Kanälen; damit können zwei unabhängige Signale betrachtet werden. In diesem Menü können Sie für die beiden vertikalen Kanäle unterschiedliche Triggertypen definieren (Flankentrigger und Videotrigger).

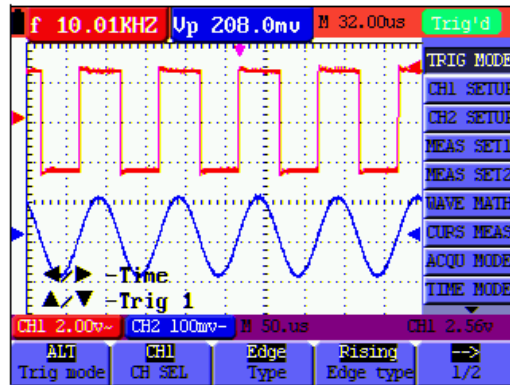


Abbildung 42: Alternate Trigger

Wechseltrigger (Alternate-Trigger)

Funktionsmenü	Einstellungen	Beschreibung
CH SEL	CH1	Stellt den Triggertyp und andere Informationen für Kanal 1 bereit
	CH2	Stellt den Triggertyp und andere Informationen für Kanal 2 bereit
Type	Edge Video	Stellt den vertikalen Triggerkanal auf Flankentrigger ein Stellt den vertikalen Triggerkanal auf Videotrigger ein
Edge Type	Rising Falling	Triggerng der aufsteigenden Flanke des Signals Triggerng der absteigenden Flanke des Signals
Coupling	AC	Triggert nur den AC-Anteil der Wellenform
	DC	Trigger die gesamt Wellenform (DC+AC)
	HF Rjc	Filtert die Hochfrequenzanteile aus der Wellenform, während der Triggerng
	LF Rjc	Filtert die Niederfrequenzanteile aus der Wellenform, während der Triggerng
SENS		Einstellen der Trigger-Empfindlichkeit

Funktionsmenü	Einstellungen	Beschreibung
CH SEL	CH1	Stellt den Triggertyp und andere Informationen für Kanal 1 bereit
	CH2	Stellt den Triggertyp und andere Informationen für Kanal 2 bereit
Type	Edge Video	Stellt den vertikalen Triggerkanal auf Flankentrigger ein Stellt den vertikalen Triggerkanal auf Videotrigger ein
Video type	Normal Inverted	Geeignet für Video-Signale, deren Schwarzanteil niedrig ist Geeignet für Video-Signale, deren Schwarzanteil hoch ist
Sync (Synchronization)	Line Field Odd field Even field	Setzt den Trigger synchron mit der Video-Zeile Setzt den Trigger synchron mit dem Video-Feld Setzt den Trigger synchron mit der ungeraden Video-Zeile Setzt den Trigger synchron mit der geraden Video-Zeile
MODU (Modulation)	NTSC PAL/SECAM	Setzt die Synchronisation und melden den gewählten Video-Standard Setzt die Synchronisation und melden den gewählten Video-Standard
Line	Increase Decrease	Drücken Sie „F3“, der Zeilenwert wird angehoben Drücken Sie „F3“, der Zeilenwert wird reduziert
Line NO.		Zeigt den Zeilenwert an

Begriffserläuterung

- * **Triggermodi:** Dieses Oszilloskop verfügt über drei Triggermodi: Auto (kontinuierliche Signalerfassung), Normal (Signalerfassung, wenn Triggerbedingungen erfüllt sind) und Single (manuelle Signaltriggerung).
- * **Automatischer Triggermodus:** Das Oszilloskop kann die Kurve erfassen, ohne dass eine Triggerbedingung erkannt wird. In diesem Modus erfolgt eine Zwangstriggerung, wenn während einer bestimmten Wartezeit keine Triggerbedingung eintritt. Wenn eine ungültige Triggerbedingung angewandt wird, kann das Oszilloskop die Kurve nicht in Phase halten.
- * **Normaler Triggermodus:** In diesem Modus kann das Oszilloskop die Kurve nicht erfassen, bevor es getriggert wird. Ohne Trigger zeigt das Oszilloskop die Originalkurve an, ohne dass neue Kurven erfasst werden.
- * **Einzelmodus:** In diesem Modus erkennt das Oszilloskop einen Trigger und erfasst die Kurve immer dann, wenn der Bediener die Taste RUN/STOP drückt.

7.5. Auswahl des Erfassungsmodus

Das Menü Acquiring Mode wird in der unten stehenden Liste beschrieben.

Funktionsmenü	Einstellungen	Beschreibung
Sample		Die Daten für die Kurve werden in gleichmäßigen Intervallen erfasst. Der Sample-Modus rekonstruiert die Kurve genau, kann aber auf schnelle Änderungen und schnelle Impulse nicht reagieren.
Peak Detect		Es werden die Maximum- und Minimumdaten in dem Erfassungsintervall aufgenommen. Der Peak Detect-Modus erfasst schnelle Änderungen und Impulse, aber die Kurve wird unsauber.
Average		Aus mehreren Samples wird ein Mittelwert gebildet. Der Mittelwertmodus verringert den Störpegel, allerdings muss die Kurve repetitiv sein.
Averages	4, 16, 64 oder 128	Wählen Sie eine Zahl.

7.6. Anzeigeeinstellungen

Das Menü Display Setting wird in der folgenden Tabelle beschrieben.

Funktionsmenü	Einstellungen	Beschreibung
Typ	Vectors	Der Vektoranzeigemodus zeigt die Kurve als glatte Linie an, indem alle Datenpunkte verbunden werden.
	Dots	Der Punktanzeigemodus zeigt die Kurve als Sammlung unabhängiger Datenpunkte an.
Persist	Close 1s 2s 5s Infinite	Die Nachleucht-Einstellung bestimmt, wie lange die alte Kurve auf dem Bildschirm verbleibt; dies ist hilfreich bei der Beobachtung von Kurvenänderungen.
Format	YT XY	Anzeige des relativen Verhältnisses zwischen vertikaler Spannung und horizontaler Zeit. Anzeige von Kanal 1 auf der horizontalen und von Kanal 2 auf der vertikalen Achse.
Carry	Bitmap Vector	Die übertragenen Daten sind Bitmaps. Die übertragenen Daten sind Vektoren.

7.6.1. Anzeigeart

Die Anzeigeart beinhaltet Vektor- und Dot-Anzeigen, wie in den folgenden Abbildungen 43 und 44 zu sehen.

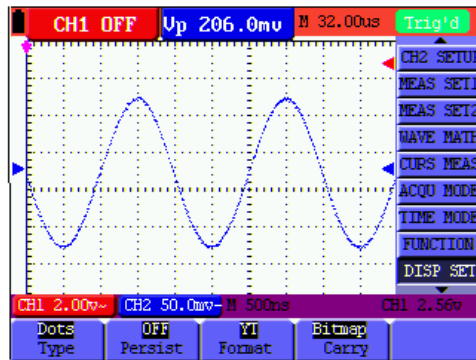


Abbildung 43: Dot Style

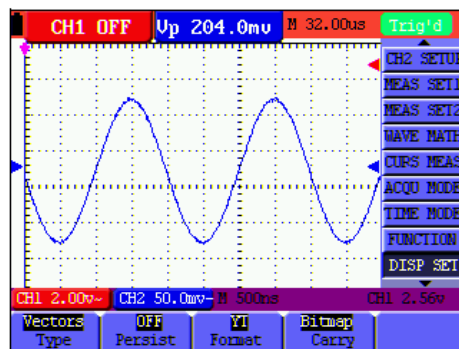


Abbildung 44: Vector Style

7.6.2. Nachleuchtzeit

Wenn die Funktion Persistence gewählt ist, verblassen die Farbe der dargestellten Originaldaten langsam, während die Farbe der neuen Daten in voller Sättigung erscheinen. Bei unbegrenzter Nachleuchtzeit bewahrt das Oszilloskop alle alten Spuren der dargestellten Kurve.

7.6.3. XY Mode

Dieser Modus ist nur für Kanal 1 und 2 anwendbar. Das X-Y-Format gibt den Eingang von Kanal 1 auf der X-Achse und den von Kanal 2 auf der Y-Achse aus. Dieser Anzeigemodus ist hilfreich bei der Betrachtung des Phasenverhältnisses zwischen Kanal 1 und Kanal 2, wenn das Oszilloskop sich im Abtastmodus befindet, in dem kein Trigger zur Verfügung steht; die Daten erscheinen als helle Punkte.

Die Funktionen „CH1 VOL“ und „CH1 ZERO“, sowie „CH2 VOL“ und „CH2 ZERO“ sind zum Einstellen der vertikalen Skala und der Positionierung.

Hinweis: Die folgenden Funktionen arbeiten nicht im XY-Modus

- * Reference or digital value waveform
- * Cursor
- * Auto Setting
- * Time base control
- * Trigger control

7.7. Einstellungen für die Kurven-Speicherung

Das Oszilloskop kann 4 Kurven speichern, die zusammen mit der aktuellen Kurve auf dem Bildschirm angezeigt werden können. Die aus dem Speicher geladene Kurve kann nicht eingestellt werden.

Das Menü zum Speichern/Laden der Kurve wird in der folgenden Tabelle beschrieben.

Funktionsmenü	Einstellungen	Beschreibung
Quelle	CH1 CH2 MATH	Stellen Sie sicher, dass die zu speichernde Kurve auf dem Bildschirm angezeigt wird. Wählen Sie die angezeigte, zu sichernde Kurve.
WAVE	A, B, C und D	Wählen Sie die Adresse, unter der Sie die Kurve speichern oder laden wollen.
Save		Speichern Sie die Kurve einer gewählten Signalquelle an der gewählten Adresse.
Show	ON OFF	Stoppen oder starten Sie die Anzeige der an Adresse A, B, C oder D gespeicherten Kurven.

Zum Speicherung der Wellenform in Adresse A, wie beschrieben verfahren:

1. Drücken Sie die Taste „MENU“, es erscheint die Funktionsleiste am rechten Bildschirmrand.
2. Drücken Sie die Taste ▲ oder ▼, um die Funktion „WAVE SAVE“ auszuwählen. Es erscheinen vier weitere Funktionen am unteren Bildschirmrand.
3. Drücken Sie „F1“ um Signalquelle CH1 auszuwählen (CH1, CH2, Math Off)
4. Drücken Sie „F2“ zur Auswahl der gewünschten Adresse (A – D)
5. Drücken Sie „F3“ um die aktuelle Wellenform in die gewünschte Adresse zu speichern

Um die gespeicherte Wellenform im Bildschirm anzuzeigen, wie beschrieben verfahren:

6. Drücken Sie die Taste „F4“, um die gespeicherte Wellenform in der aktuell ausgewählten Adresse anzeigen zu lassen. Die Wellenform wird dann in grüner Farbe im Bildschirm angezeigt.

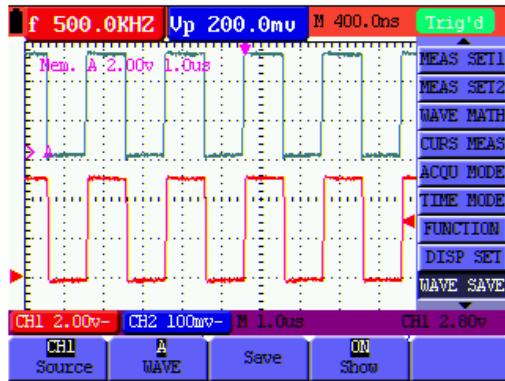


Abbildung 45: Speichern der Wellenform

7.8. Einstellungsmenü der Funktionen

Die Funktionseinstellungs-Menü wird in der folgenden Tabelle beschrieben:

Funktions-Menü	Einstellungen	Beschreibung
Recall Factory		Wiederherstellen der Werkseinstellungen
Auto Calibration		Durchführen der automatischen Kalibrier-Prozedur
Language	Chinese English	Auswählen der Sprache

Auto-calibration

Die Funktion Auto-calibration konfiguriert automatisch alle für die Empfindlichkeit und Genauigkeit notwendigen internen Parameter. Führen Sie die Funktion Auto-calibration in den folgenden Fällen aus:

Wenn während des Betriebs die Temperatur um mehr als 5° C variiert. Wenn Sie das Oszilloskop in einer neuen Labor- oder Feldumgebung betreiben.

1. Drücken Sie die Taste „MENU“ und wählen Sie das „FUNCTION“-Menü aus durch Drücken der „Up/Down“-Tasten
2. Drücken Sie „F2 (Auto calibration)“. Auf dem Bildschirm erscheint eine Meldung mit der Abfrage, ob alle Prüfleitungen oder Tastköpfe vom Gerät entfernt wurden.
3. Nachdem alle Prüfleitungen und Tastköpfe vom Gerät entfernt wurden, drücken Sie erneut „F2“. Die „Auto calibration“-Funktion wird gestartet und auf dem Bildschirm wird der Fortschritt angezeigt.
4. Zum Abbrechen der „Auto calibration“-Funktion. Drücken Sie eine beliebige Taste während der Kalibrierung.

7.9. Automatische Messungen vornehmen

Das Oszilloskop kann 5 verschiedene automatische Messungen durchführen: Frequenz, Periode, Mittelspannung, Spitzenspannung und Zyklusspannung (echter Effektivwert). Es können zwei Arten von Messungen gleichzeitig auf dem Bildschirm angezeigt werden. Die folgende Tabelle beschreibt das Funktionsmenü für automatische Messungen:

Funktionsmenü	Einstellungen	Beschreibung
Freq (Frequenz)	CH1 CH2	Messung der Frequenz von Kanal 1. Messung der Frequenz von Kanal 2.
Period (Periode)	CH1 CH2	Messung der Periode von Kanal 1. Messung der Periode von Kanal 2.
Mean (Mittelspannung)	CH1 CH2	Messung des Mittelwerts von Kanal 1. Messung des Mittelwerts von Kanal 2.
Peak-Peak (Spitze)	CH1 CH2	Messung des Spitzenwerts von Kanal 1. Messung des Spitzenwerts von Kanal 2.
Cyc RMS (Zyklus-Effektivwert)	CH1 CH2	Messung des Effektivwerts (RMS) von Kanal 1. Messung des Effektivwerts (RMS) von Kanal 2.

Messung der Frequenz von Kanal 1 (CH1) mit **Messung 1 (Measurement 1)** und der Frequenz von Kanal 2 (CH2) mit **Messung 2 (Measurement 2)**:

1. **MENU**-Taste drücken. Das Funktionsmenü erscheint rechts auf dem Bildschirm.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** die Funktion **Measurement 1** (Messung 1) auswählen. Am unteren Bildschirmrand werden fünf Optionen angezeigt.
3. **F1**-Taste drücken, um die Frequenzmessung als **CH1** (Kanal 1) auszuwählen. Das auf dem Bildschirm angezeigte Messfenster wechselt zu rot und zeigt die Frequenz von Kanal 1 an.
4. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** die Funktion **Measurement 2** (Messung 2) auswählen. Am unteren Bildschirmrand werden fünf Optionen angezeigt.
5. **F4**-Taste drücken, um die Spitzenwertmessung als **CH2** (Kanal 2) auszuwählen. Das auf dem Bildschirm angezeigte Messfenster wechselt zu blau und zeigt den Spitzenwert von Kanal 2 an.

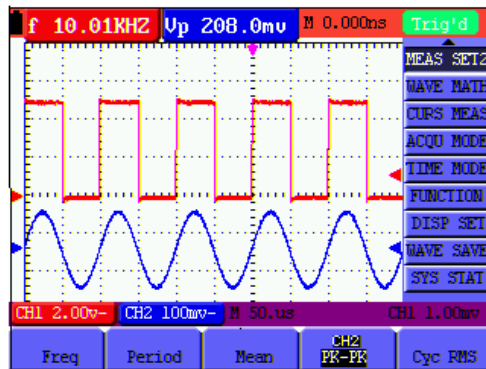


Abbildung 46: Automatische Messungen

7.10. Einstellen der Cursor-Messungen

Sie können mit dem Oszilloskop manuelle Cursormessungen der Zeit und Spannung vornehmen. Die Signalquellen umfassen Kanal 1 (CH1) und Kanal 2 (CH2).

Die folgende Tabelle beschreibt die Menüs für die Cursor-Messung:

Funktionsmenüs	Einstellungen	Beschreibung
Type (Typ)	OFF (Aus)	Beenden der Cursor-Messung.
	Voltage (Spannung)	Anzeigen von Cursor und Menü der Spannungsmessung.
	Time (Zeit)	Anzeigen von Cursor und Menü der Zeitmessung.
Source (Quelle)	CH1, CH2 (Kanal 1, Kanal 2)	Auswählen des Signalkanals, bei dem die Cursor-Messung durchgeführt wird.

Spannungsmessung bei Kanal 1 (CH1):

1. **MENU**-Taste drücken. Das Funktionsmenü erscheint rechts auf dem Bildschirm.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** die Funktion **Cursor Measurement** (Cursor-Messung) auswählen. Am unteren Bildschirmrand werden zwei Optionen angezeigt.
3. **F1**-Taste drücken zur Auswahl der Spannungsmessung. Zwei horizontale, gestrichelte Linien V1 und V2 erscheinen auf dem Bildschirm.
4. **F2**-Taste drücken, um den gemessenen Kanal 1 (**CH1**) auszuwählen.
5. **OPTION** drücken und anzeigen als
 ◀/▶ - Cursor 2
 ▲/▼ - Cursor 1

▲(gelb) oder ▼(gelb) drücken, um V1 nach oben oder nach unten zu bewegen. Der Bildschirm zeigt die Spannungswert-Übereinstimmung von V1 und Kanal 1 Null (Zero) an. Erneut ▲(gelb) oder ▼(gelb) drücken, um V2 nach oben oder nach unten zu bewegen. Der Bildschirm zeigt die Spannungswert-Übereinstimmung von V2 und Kanal 1 Null (Zero) an. Der LCD-Bildschirm gibt auch den Absolutwert von V1-V2 wieder.

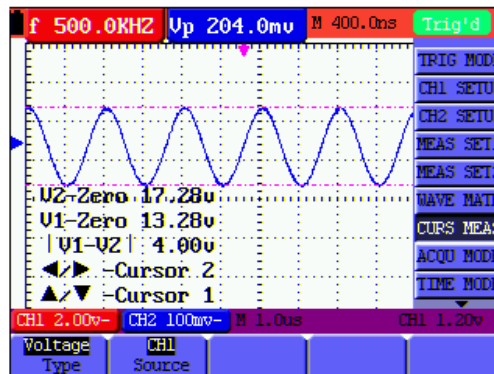


Abbildung 47: Nutzen Sie den Cursor zur Messung der Spannung

Zeitmessung bei Kanal 1:

1. **MENU**-Taste drücken. Das Funktionsmenü erscheint rechts auf dem Bildschirm.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** die Funktion **Cursor Measurement** (Cursor-Messung) auswählen. Am unteren Bildschirmrand werden zwei Optionen angezeigt.
3. **F1**-Taste drücken zur Auswahl der **Zeitmessung**. Zwei gestrichelte, vertikale Linien T1 und T2 erscheinen auf dem Bildschirm.
4. **F2**-Taste drücken, um zum gemessenen Kanal 1 (**CH1**) zu wechseln.
5. **OPTION** drücken und anzeigen als
$\blacktriangleleft/\blacktriangleright$ - Cursor 2
$\blacktriangle/\blacktriangledown$ - Cursor 1

▲(gelb) oder ▼(gelb) drücken, um T1 nach links oder nach rechts zu bewegen. Das LCD-Display zeigt die Zeitwert-Übereinstimmung von T1 und der Zeigerposition im Bildschirm an. Erneut ▲(gelb) oder ▼(gelb) drücken, um T2 nach links oder nach rechts zu bewegen. Das LCD-Display zeigt die Zeitwert-Übereinstimmung von T2 und der Zeigerposition im Bildschirm an.

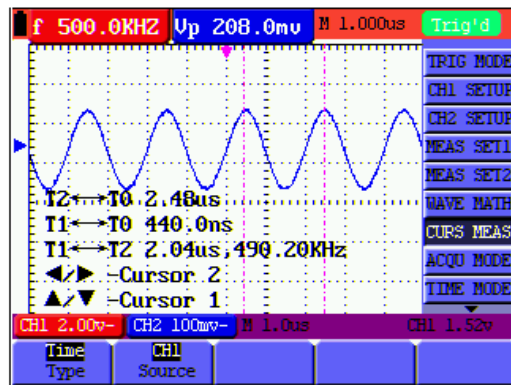


Abbildung 48: Nutzen Sie den Cursor zur Messung der Zeit

7.11. Systemstatus-Menü

Mit dem Systemstatus-Menü werden Informationen über das aktuelle horizontale System, das vertikale System, das Trigger-System und andere angezeigt. Verwenden des Systemstatus-Menüs:

1. **MENU**-Taste drücken. Das Funktionsmenü erscheint rechts auf dem Bildschirm.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** die Funktion **System Status** auswählen. Am unteren Bildschirmrand werden vier Optionen angezeigt.
3. Wenn die Tasten **F1** bis **F4** nacheinander gedrückt werden, zeigt der Bildschirm die entsprechenden Statusinformationen an.

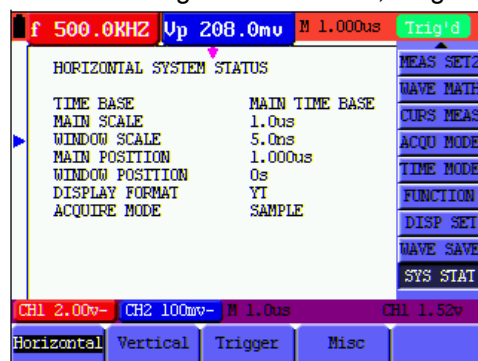


Abbildung 49: System-Status


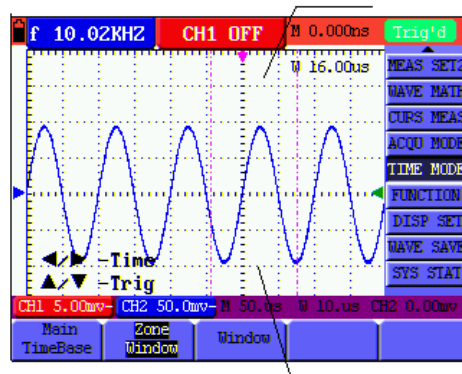


Abbildung 50: Fenstereinstellungen

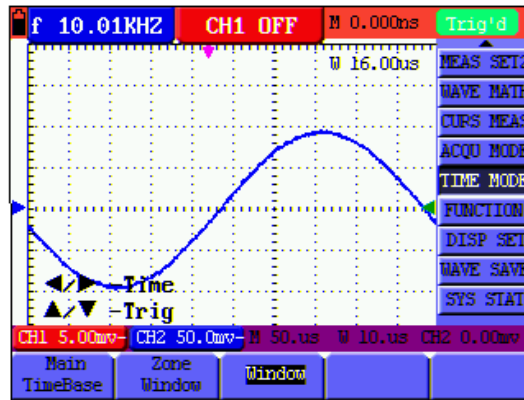

Abbildungen 51: Fenstervergrößerung

7.12. Einstellen des Zeitbasis-Modus

Die folgende Tabelle beschreibt das Menü für den Zeitbasis-Modus:

Funktionsmenü	Einstellung	Erklärung
Main TimeBase (Haupt-Zeitbasis)		Die horizontale Hauptzeitbasis wird zur Anzeige des Signals verwendet.
Set Window (Einstellungsfenster)		Mit Hilfe von zwei Cursors wird ein Fensterbereich definiert.
Zone Window (Zonenfenster)		Erweiterung des definierten Fensters zur Vollbild-Anzeige.

Verwenden der Fenstererweiterung:

1. **MENU**-Taste drücken. Das Funktionsmenü wird auf der rechten Bildschirmseite angezeigt.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** den **Zeitbasis**-Modus auswählen. Am unteren Bildschirmrand werden drei Optionen angezeigt.
3. **F2**-Taste drücken zur Auswahl der Fenstereinstellung.
4. Die **OPTION**-Taste drücken. **TIME BASE** (Zeitbasis) wird angezeigt. Mit Hilfe der Tasten **◀**(gelb) und **▶**(gelb) den von den beiden Cursors definierten Zeitbasis-Fensterbereich anpassen. Die Fenstergröße variiert dabei.
5. Die **OPTION**-Taste drücken und die Option **TIME** (Zeit) wählen. Mit Hilfe der Tasten **◀**(gelb) und **▶**(gelb) die von den beiden Cursors definierte Fensterposition anpassen. Bei der Fensterposition handelt es sich um den Zeitunterschied zwischen dem Fenstermittelpunkt und dem horizontalen Zeiger der Hauptzeitbasis.
6. **F3**-Taste drücken, um die Fenstererweiterung auszuwählen. Der definierte Fensterbereich erweitert sich zur Vollbild-Anzeige.

7.13. Datenübertragung

Verwenden der Datenübertragung:

1. **MENU**-Taste drücken. Das Funktionsmenü wird auf der rechten Bildschirmseite angezeigt.
2. Mit Hilfe der Tasten **MENU ▲** oder **MENU ▼** den **Anzeigeeinstellungs**-Modus auswählen. Am unteren Bildschirmrand werden vier Optionen angezeigt.
3. **F4**-Taste drücken und die Option **Bitmap** oder **Vectors** für die Datenübertragung wählen.
4. Das Oszilloskop mit einer Datenleitung an den PC anschließen.
5. Die zuvor komplett installierte OWON-Software öffnen.
6. Die Parameter laut Benutzerhandbuch einstellen und die Datenübertragung starten.

8. Anhang

8.1. Oszilloskop

Nur wenn anderweitig angegeben, gelten alle technischen Angaben für den Tastkopf in Dämpfungsschalterstellung 10X und das digitale Oszilloskop. Zur Einhaltung dieser Spezifikationen muss das Oszilloskop die folgenden Bedingungen erfüllen.

- * Das Messgerät sollte ununterbrochen mehr als 30 Minuten bei angegebener Betriebstemperatur laufen.
- * Wenn die Betriebstemperatur bis zu oder höher als 5° C beträgt, müssen Sie das Menü System Function öffnen und „Auto-calibration“ wählen, damit sich das Gerät neu kalibriert.

Mit Ausnahme der mit Typical gekennzeichneten Angaben können alle Angaben entsprechen.

Sampling

Sample-Modi	Normal Spitzenwertermittlung Durchschnittswert
Messrate	100MS/s

Eingang

Eingangskopplung	DC, AC
Eingangswiderstand	1MW +/-2% / 20pF +/-5pF
Dämpfungseinstellungen	1x, 10x, 100x, 1000x
Max. Eingangsspannung	400V spitze
Kanalverzögerungszeit (typisch)	150ps

Horizontal

Messrate (Bereich)	10S/s ~ 100MS/s
Wellenform interpolation	(sin x) / x
Speicherlänge	6k Punkte auf jedem Kanal
Zeitbasis	5ns/DIV ~ 5s/DIV
Messrate und Übertragungsrate - Genauigkeit	+/-100ppm (bei einem Intervall von >1ms)

Vertikal

Analog-Digital-Wandler (A/D)	8bits
Empfindlichkeit	5mV/DIV ~ 5V/DIV
Niederfrequenz-Reaktion	>5Hz
Anstiegszeit	<17,5ns
DC-Genauigkeit	+/-3%

Trigger

Trigger-Empfindlichkeit	DC-Kopplung	CH1 und CH2: DC~20MHz
	AC-Kopplung	Genau wie DC-Kopplung bei $\geq 50\text{Hz}$
Triggerpegel		+/- 6 Einheiten von Bildschirmmitte
Genauigkeit Triggerpegel	' +/- 0,3 Einheiten	
Triggerersetzbarkeit	655 Einheiten Vortriggerung 4Einheiten Nachtriggerung	
Triggerpegel auf 50%	Einstellung mit einer Eingangsfrequenz von > 50Hz	
Triggerempfindlichkeit	2 Einheiten (Spitze-Spitze)	
Systemsignal (line/field-Frequenz)	NTSC, PAL, SECAM	

Messungen

Cursor	Spannungsdifferenz („Dreieck“ Delta V) und Zeitdifferenz („Dreieck“ Delta T) zwischen den Cursors
Automatische Messfunktionen	Spitze-Spitze, Mittelwert, quadratischer Mittelwert, Frequenz, Periode

Tastkopf

	1x Position	10x Position
Bandbreite	Bis zu 4MHz (DC)	Bis 20MHz (DC)
Dämpfung	1:1	10:1
Kompensationsbereich	10pF ~ 35pF	10pF ~ 35pF
Eingangswiderstand	1MW +/-2%	10MW +/-2%
Eingangsimpedanz	85pF ~ 115pF	14,5pF ~ 17,5pF
Eingangsspannung	150V DC	300V DC

8.1.2. Multimeter

Gleichspannung (DCV)

Eingangswiderstand: 10MW

maximale Eingangsspannung: 1000V (DC oder Acss)

Bereich	Genauigkeit	Auflösung
400 mV	+/- 1,5% +/- 2 Stellen	100 µV
4 V	+/- 1 % +/- 1 Stelle	1 mV
40 V		10 mV
400 V		100 mV

Wechselspannung (ACV)

maximale Eingangsspannung: 750V (AC)

Frequenzbereich: 40Hz ... 400Hz

Bereich	Genauigkeit	Auflösung
4 V	+/- 1% +/- 3 Stellen	1 mV
40 V		10 mV
400 V		100 mV

Gleichstrom (DCA)

Bereich	Genauigkeit	Auflösung
40 mA	+/- 1,5% +/- 1 Stelle	10 µA
400 mA	+/- 1,5% +/- 1 Stelle	100 µA
20 A	+/- 3,0 % +/- 3 Stellen	10 mA

Wechselstrom (ACA)

Bereich	Genauigkeit	Auflösung
40 mA	+/- 1,5% +/- 3 Stellen	10 μ A
400 mA	+/- 2,0% +/- 1 Stelle	100 μ A
20 A	+/- 5,0% +/- 3 Stellen	10 mA

Widerstand

Bereich	Genauigkeit	Auflösung
400 Ω	+/- 1,0% +/- 3 Stellen	0,1 Ω
4 K Ω	+/- 1,0% +/- 1 Stelle	1 Ω
40 K Ω		10 Ω
400 K Ω		100 Ω
4 M Ω		1 K Ω
40 M Ω	+/- 1,5% +/- 3 Stellen	10 K Ω

Kapazität

Bereich	Genauigkeit	Auflösung
51,2 nF	+/- 3% +/- 3 Stellen	10 pF
512,0 nF		100 pF
5,12 μ F		1 nF
51,2 μ F		10 nF
100 μ F		100 nF

Diode

Messbereich: 0-1,5 V

Durchgangstest

Das Gerät gibt ein akustisches Signal, wenn der Widerstand < 30 Ω

8.1.3. allgemeine Spezifikationen

Basis-Parameter

Abmessungen (B x H x T)	180 x 115 x 40 mm
Gewicht	645 g
Leistungsaufnahme	< 6 W
Anzeige	3,8" Farb-LC-anzeige
Anzeige Auflösung	320 (Horizontal) x 240 (Vertikal) Pixels
Anzeigefarben	4096 Farben

AC-Netzadapter





Spannungsversorgung	100 – 240 V AC; 50/60 Hz
Ausgangsspannung	8,5 V DC
Ausgangsstrom	1500 mA

Betriebstemperatur

Batteriebetrieb	0 bis 50°C (32 bis 122 °F); < 80% RH
AC-Adapter-Betrieb	0 bis 40°C (32 bis 104 °F); < 80% RH
Lagertemperatur	-20 bis +60°C (-4 bis 140°F); < 80 % RH

8.2. Laden des Oszilloskops

Der Li-Ion-Akku ist bei der Erstinbetriebnahme möglicherweise nicht geladen. Um die Spannungsversorgung sicherzustellen, muss der Akku mindestens 4 Stunden geladen werden (bei ausgeschaltetem Messgerät). Ein vollständig geladener Akku ermöglicht 4 Stunden Dauerbetrieb.

Wenn das Messgerät mit dem Akku betrieben wird, erscheint am oberen Bildschirmrand eine Kapazitätsanzeige. Die möglichen Symbole sind , , und , wobei  anzeigt, dass der Akku nur noch für 5 Minuten Kapazität hat. Schließen Sie das Netzteil wie in Abbildung 1 gezeigt an das Gerät an, um gleichzeitig den Akku zu laden und das Messgerät mit Spannung zu versorgen. Die Ladezeit verkürzt sich, wenn das Messgerät ausgeschaltet ist.

Alle Rechte, auch die der Übersetzung, des Nachdruckes und der Vervielfältigung dieser Anleitung oder Teilen daraus, vorbehalten.

Reproduktionen jeder Art (Fotokopie, Mikrofilm oder ein anderes Verfahren) nur mit schriftlicher Genehmigung des Herausgebers gestattet.

Letzter Stand bei Drucklegung. Technische Änderungen des Gerätes, welche dem Fortschritt dienen, vorbehalten.

Hiermit bestätigen wir, dass alle Geräte, die in unseren Unterlagen genannten Spezifikationen erfüllen und werkseitig kalibriert geliefert werden. Eine Wiederholung der Kalibrierung nach Ablauf von einem Jahr wird empfohlen.

Package Contents (see the picture below)

	Description	Standard	Optional
1.	PeakTech® 1205	•	
2.	AC-DC adapter	•	
3.	Oscilloscope Probe x 2 (grey)	•	
4.	Multimeter test lead x 2 (black and red)	•	
5.	USB Mass Storage connect cable	•	
6.	Extension module for small capacitance measurement	•	
7.	Probe adjustment tools	•	
8.	USB communication cable or RS-232C communication cable	•	
9.	User Manual	•	
10.	CD-ROM (software)	•	
11.	Hard carrying case	•	



Figure 1: Digital Oscilloscope Parts

1. Safety Precautions

This product complies with the requirements of the following European Community Directives: 89/336/EC (Electromagnetic Compatibility) and 73/23/EC (Low Voltage) as amended by 93/68/EC (CE-Marking).

Overvoltage category III 1000V; pollution degree 2.

CAT I:	For signal level, telecommunication, electronic with small transient over voltage
CAT II:	For local level, appliances, main wall outlets, portable equipment
CAT III:	Distribution level, fixed installation, with smaller transient overvoltages than CAT IV.
CAT IV:	Units and installations, which are supplied overhead lines, which are stand in a risk of persuade of a lightning, i.e. main-switches on current input, overvoltage-diverter, current use counter.

To ensure safe operation of the equipment and eliminate the danger of serious injury due to short-circuits (arcing), the following safety precautions must be observed.

Damages resulting from failure to observe these safety precautions are exempt from any legal claims whatever.

- * Do not use this instrument for high-energy industrial installation measurement. This instrument is intended for use in installation over voltage category II according to IEC 664. For measuring circuit not exceeding 1000V DC / 750V AC, 10A.
- * The instrument must be set up so that the power plug can be removed from the socket easily.
- * Prior to connection of the equipment to the mains outlet, check that the available mains voltage corresponds to the voltage setting of the equipment.
- * Connect the mains plug of the equipment only to a mains outlet with earth connection.
- * Do not place the equipment on damp or wet surfaces.
- * Do not cover the ventilation slots of the cabinet to ensure that the air is able to circulate freely inside.
- * Do not insert metal objects into the equipment by way of the ventilation slots.
- * Do not place water filled containers on the equipment (danger of short-circuit in case of knock over of the container).
- * Do not exceed the maximum permissible input ratings (danger of serious injury and/or destruction of the equipment).
- * The meter is designed to withstand the stated max voltages. If it is not possible to exclude without that impulses, transients, disturbance or for other reasons, these voltages are exceeded a suitable presale (10:1) must be used.
- * Replace a defective fuse only with a fuse of the original rating. Never short-circuit fuse or fuse holding.
- * Disconnect test leads or probe from the measuring circuit before switching modes or functions.
- * Do not conduct voltage measurements with the test leads connected to the mA/A- and COM-terminal of the equipment.
- * The 20A-range is protected. To avoid damage or injury, use the meter only in circuits limited by fuse or circuit breaker to 20A or 4000VA.
- * To avoid electric shock, disconnect power to the unit under test and discharge all capacitors before taking any resistance measurements.
- * Do not conduct current measurements with the leads connected to the V/ Ω -terminals of the equipment.

- * Check test leads and probes for faulty insulation or bare wires before connection to the equipment.
- * To avoid electric shock, do not operate this product in wet or damp conditions. Conduct measuring works only in dry clothing and rubber shoes, i. e. on isolating mats.
- * Never touch the tips of the test leads or probe.
- * Comply with the warning labels and other info on the equipment.
- * The measurement instrument is not to be operated unattended.
- * Always start with the highest measuring range when measuring unknown values.
- * Do not subject the equipment to direct sunlight or extreme temperatures, humidity or dampness.
- * Do not subject the equipment to shocks or strong vibrations.
- * Do not operate the equipment near strong magnetic fields (motors, transformers etc.).
- * Keep hot soldering irons or guns away from the equipment.
- * Allow the equipment to stabilize at room temperature before taking up measurement (important for exact measurements).
- * Do not input values over the maximum range of each measurement to avoid damages of the meter.
- * Do not turn the rotary function switch during voltage or current measurement, otherwise the meter could be damaged.
- * Use caution when working with voltages above 35V DC or 25V AC. These Voltages pose shock hazard.
- * Replace the battery as soon as the battery indicator "BAT" appears. With a low battery, the meter might produce false reading that can lead to electric shock and personal injury.
- * Fetch out the battery when the meter will not be used for long period.
- * Periodically wipe the cabinet with a damp cloth and mild detergent. Do not use abrasives or solvents.
- * The meter is suitable for indoor use only
- * Do not operate the meter before the cabinet has been closed and screwed safely as terminal can carry voltage.
- * Do not store the meter in a place of explosive, inflammable substances.
- * Do not modify the equipment in any way
- * Do not place the equipment face-down on any table or work bench to prevent damaging the controls at the front.
- * Opening the equipment and service- and repair work must only be performed by qualified service personnel.
- * Always connect the power adapter first to the AC outlet before connecting it to the Oscilloscope & Multimeter.
- * Do not insert metal objects into connectors.
- * Always use the Oscilloscope & Multimeter only in the manner specified.
- * Only qualified technical personnel are permitted to perform maintenance.
- * Pay attention to the nominal values of all terminals: To avoid fire or electric shock, please keep a watchful eye on all nominal values and marks specified for this product. Before any connection performed on this product, carefully read the user's manual of the product for further information of nominal values.
- * **-Measuring instruments don't belong to children hands-**

In order to ensure the correct using and the best efficient service, please carefully read this user's manual.

2. Safety Symbols and Terms

2.1. Safety Symbols

These symbols may appear in this manual or on the instrument.

WARNING!

“Warning” identifies conditions and actions that pose hazards to the users.

CAUTION!

“Caution” identifies conditions and actions that may damage the product or other properties.

DANGER:
Hight Voltage



Refer to the Manual



Protective
Conductor Terminal



Chassis Ground



Earth (ground)
Terminal



2.1.1. Safety Terms

The following terms may appear on the instrument:

Danger: The term “Danger” is used in this manual to indicate that when you read this mark, personal injury may be caused to you immediately.

Warning: The term “Warning” is used in this manual to indicate that when you read this mark, personal injury may not be caused to you immediately, but you need to be cautionary.

Notice: The term “Notice” is used in this manual to indicate that damages may be caused on this product or other properties.

3. Performing the General Inspection

3.1. Performing the General Inspection

When you have got a new PeakTech oscilloscope, it is suggested that you should perform a general inspection on the instrument according to the following steps.

3.2. Check whether there is any Damage on it Due to Transportation

If the packing boxes or foam cushions are found in serous damage, keep them in a proper place till the complete instrument and accessories have passed the electrical and mechanical tests.

3.3. Make a Check on Accessories

The accessory list has been described in the picture of Digital Oscilloscope Parts of this manual. You can make a check and find whether there is any accessory loss with reference to the Appendix. In case of any accessory loss or damage, consult the distributor responsible for such a business.

3.4. Make a Check on the Complete Instrument

If the instrument is damaged in its appearance or it fails in normal operation or performance test, consult the distributor responsible for such a business. If the instrument is damaged due to transportation, keep the packing in a proper place and consult the transportation department and the distributor responsible for such business for providing an instrument replacement or maintenance.

4. Input Connections

4.1. Input Connectins



Figure 2

1. The power adapter is supplied for AC power supply and battery recharging.
2. Multimeter test lead.
3. Multimeter input jacks, including four circular banana jacks.
4. Oscilloscope probes.
5. Oscilloscope channel inputs: the upper one is for Channel 1 (CH 1), while the lower one is for Channel 2 (CH 2).

4.2. Front Panel and Keys Overview



Figure 3

1. AC adapter Port
2. RS-232C Port
3. USB Port
4. USB Mass Storage Port
5. Power switch
6. F1~F5: Selects the menu item at the bottom of the display.
7. AUTO SET: Under DSO mode, Automatically selects the horizontal scales, vertical scale, and trigger level according to the input signal.
8. COPY: Press it can save the waveform data into the USB Mass Storage Device.
9. ▲ (Red): Adjust horizontal scale in Channel 1.
10. VOLTS POSITION (Red): Switch between voltage and horizontal scale in Channel 1.
11. ▼ (Red): Adjust horizontal scale in Channel 1.
12. ▲ (Blue): Adjust horizontal scale in Channel 2.
13. VOLTS POSITION (Blue): Switch between voltage and horizontal scale in Channel 2.
14. ▼ (Blue): Adjust horizontal scale in Channel 2.

15. RUN/STOP: key for running or stopping the operation
16. LIGHT: Light switch.
17. DMM/OSC: Operation mode switching key between oscilloscope and multimeter.
18. MENU ▲: Choose the upper item on the menu list.
19. MENU: Show / Hide the menu
20. MENU ▼: Choose the lower item on the menu list.
21. OPTION: the key for DSO setting and combines with four arrow keys. Then to set main time base, trigger horizontal position and trigger vertical position. Furthermore the keys possible to adjust the display multiplying factors of M waveform (CHM) and display vertical position (CHM ZERO) during waveform calculation and to adjust cursor 1 (V1 or T1) and cursor 2 (V2 or T2) position during cursor measurement.
22. ▲(yellow): Oscilloscope display upward adjustment key.
23. ▼(yellow): Oscilloscope display downward adjustment key.
24. ►(yellow): Oscilloscope right-direction adjustment key.
25. ◀(yellow): Oscilloscope left-direction adjustment key.
26. A: Selects DMM current measurement
27. V: Selects DMM voltage measurement
28. R: Selects DMM impedance, diode, continuity and capacitance measurement
29. SET: convert AC and DC during measure current or voltage in Multi-meter; convert resistance, diode, on-off and capacitance measure during resistance measuring.

5. Using the Oscilloscope

5.1. Powering Up the Oscilloscope

- * Connect oscilloscope to AC power via AC-DC adapter as shown in Figure 1. (The oscilloscope may still work with built-in Li-ion battery even without AC power supply)
- * Turn the oscilloscope on by pressing down the power on/off key POW.
- * The instrument then performs Selfchecking after power on. a greeting window and a sentence “press any key to continue……” will display on the screen when the system finishes selfchecking.
- * The users can press any key to enter the measuring function.
- * The oscilloscope is powered up in its last setup configuration.

5.2. Oscilloscope Operation Window

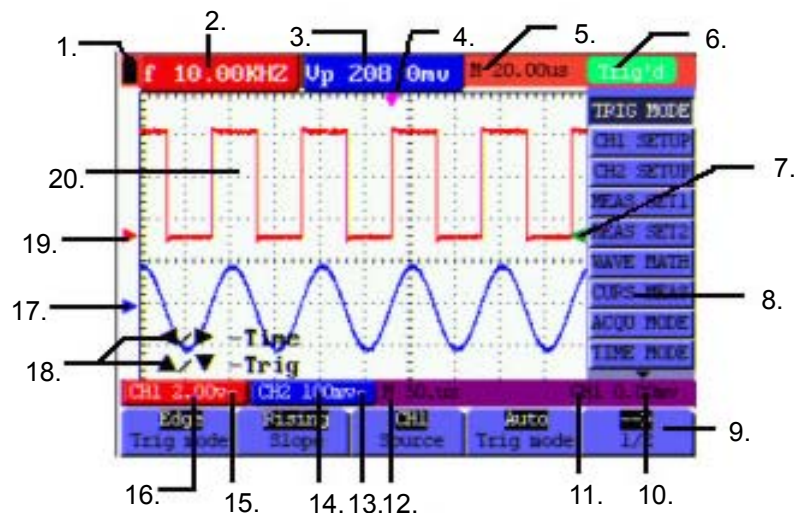


Figure 4: Oscilloscope Operation Window

1. Battery electric quantity indicating symbols, including , , and .
2. Auto measurement window 1, in which “f” means frequency, “T” means cycle, “V” means the average value, “Vp” the peak-peak value and “Vk” the root-mean-square value.
3. Auto measurement window 2.
4. The pointer indicates the horizontal triggering position.
5. This reading gives the Time Difference between the horizontal triggering position and the screen centerline. It reads zero when the pointer is in the center of the screen.
6. The trigger state indicates the following information.
 - Auto:** The oscilloscope is working in the automatic mode and displaying the waveform under the non-trigger state.
 - Trig’d:** The oscilloscope has detected a trigger and collecting the information generated after the trigger.
 - Ready:** All pre-triggered data have been captured and the oscilloscope has been ready to receive trigger signals.
 - Scan:** The oscilloscope can gather and display the waveform data continuously in scanning mode.
 - Stop:** The oscilloscope has stopped collecting the waveform data.
7. Red and blue index display triggers vertical position during alternate trigger and triggers index become green when it reaches edge trigger or video trigger.
8. A hidden-style menu: With the **MENU** key pressed, you can view or hide the menu.
9. Menu setting options: There are different setting options for different menus.
10. It reads the value of trigger voltage level.
11. The display shows the trigger signal source.
12. The reading gives the value of primary time base.
13. These graphics present the coupling modes of channel 2(CH2). The graphic “~” indicates AC, the graphic “—” indicates DC.
14. This reading shows the vertical Voltage Unit Scale of CH2.
15. These graphics show the coupling mode of CH1, among which the graphic “~” express indicates AC, the graphic “—” indicates DC.

16. This reading shows the vertical Voltage Unit Scale of CH1.
17. The blue pointer gives the grounding datum point of the waveform on CH2, which is the zero position of CH2. No display of this pointer indicates that the channel has not been opened.
18. OPTION operation prompt: There are different prompts for different OPTION operations.
19. The red pointer gives the grounding datum point of the waveform on CH1, which is the zero position of CH1. No display of this pointer indicates that the channel has not been opened.
20. Waveform display area. Red waveform represent CH1, blue waveform represent CH2.

5.3. Menu Description

The following example shows how to use the tool's menus to select a function, as shown in the following figure.

1. Press the **MENU** key to display the Function Menu on the right of the screen and the corresponding optional settings on the bottom. Press MENU again will hide the Function Menu.
2. Press the **MENU ▲** or **MENU ▼** key to select different function menus.
3. Choose one key from **F1** to **F5** and press it to change function setting.

See the following Figure:

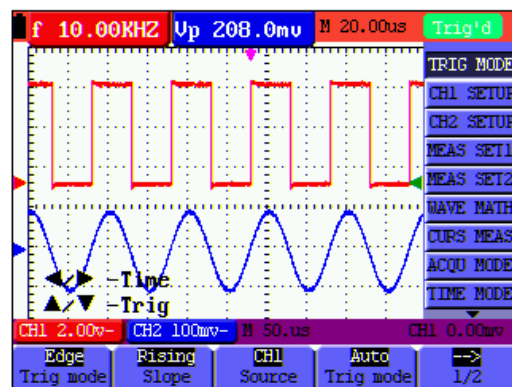


Figure 5: the Tool's Menus

5.4. Manually Setting the Vertical System, Horizontal System and Trigger Position

OPTION key for multiple setting key and to set trigger vertical position, main time base and horizontal position (trigger horizontal position) during edge trigger and video trigger or trigger vertical position for Horizontal time base and trigger vertical position and horizontal level position during alternate trigger

The following example shows how to use OPTION key to make a setting.

When trigger mode during edge trigger and video trigger:

1. Press once the **OPTION** key; the following is displayed at the bottom left side of the screen, as shown in the figure below.

◀/▶ – Time Base
 ▲/▼ – Trig

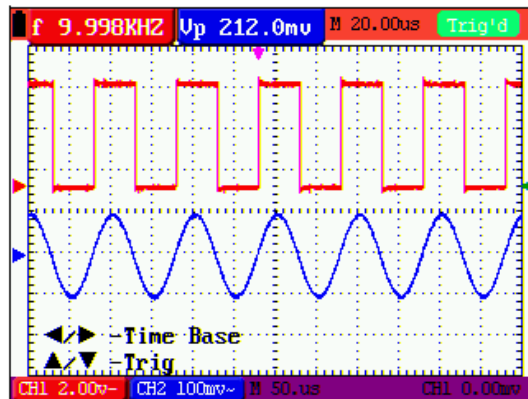


Figure 6

2. Press ◀(yellow) or ▶(yellow) to adjust the main time base and press ▲(yellow) or ▼(yellow) to adjust trigger horizontal position.
3. Press **OPTION** again and left bottom side display as

◀/▶ – Time
 ▲/▼ – Trig

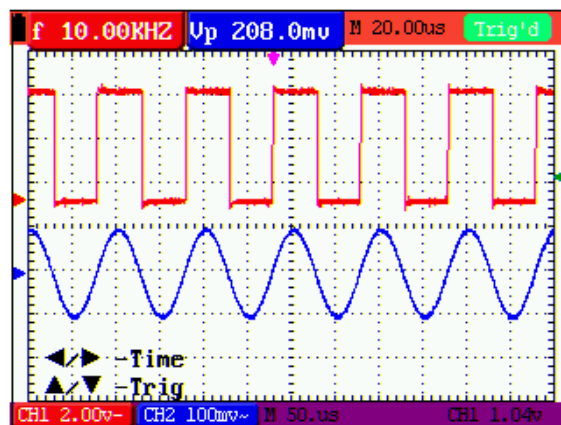


Figure 7

4. Press ◀(yellow) or ▶(yellow) to adjust time base horizontal position, press ▲(yellow) or ▼(yellow) to adjust trigger position.
5. Press **OPTION** again to back operation 1
 When trigger mode during alternate trigger:

6. Press **OPTION** and left bottom display as:

◀/▶ —Time

▲/▼—Trig 1

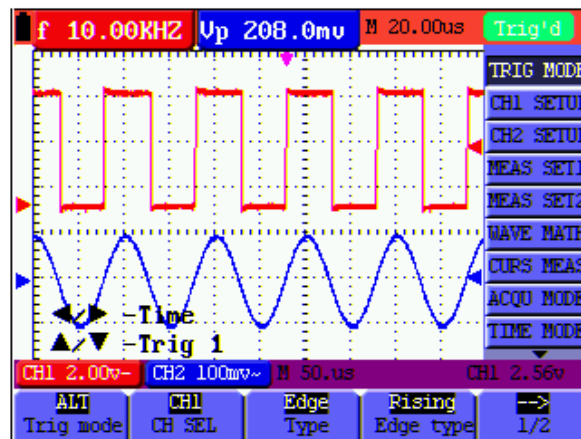


Figure 8

7. Press ◀ (yellow) or ▶ (yellow) to adjust time base horizontal position and press ▲(yellow) or ▼(yellow) to adjust trigger horizontal position in Channel 1.

8. Press **OPTION** again and left bottom display as:

◀/▶ — Time Base

▲/▼ — Trig 2

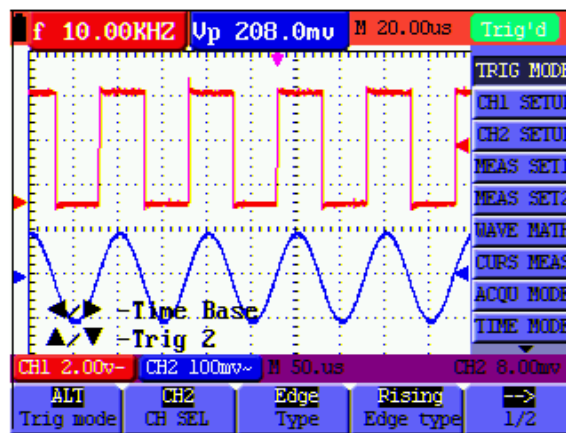


Figure 9:

9. Press ◀(yellow) or ▶ (yellow) to adjust main time base and press ▲(yellow) or ▼(yellow) to adjust trigger horizontal position in Channel 2.
10. Press **OPTION** again to back operation 6.

Term interpretation

- * **Vertical scale factor:** It stands for the voltage amplitude represented by a division in the vertical direction of the display area, through the adjustment of which you can amplify or attenuate the signal and thus regulate the signal amplitude into the expected measurement range.

- * **Vertical zero position:** It is referred to as the grounding datum point, through the adjustment of which you can regulate the display position of the waveform on the screen.
- * **Main time base:** It means the time values represented by a division in the horizontal direction of the display area.
- * **Trigger horizontal position:** It means the time deviation between the actual trigger point and the screen central line, which will be displayed as 0 at the center point of the screen.
- * **Trigger level position:** It represents the voltage deviation between the actual trigger level and the zero position of the triggering signal source channel.

5.5. Recall factory settings

If you want to reset the Oscilloscope to the factory settings, do the following:

1. Press **MENU** key and the function menu appears on the right side of the screen
2. Press the **MENU ▲** or **MENU ▼** key to select function setting and three options are visible at the bottom of the screen.
3. Press **F1** key to select “Recall Factory” to recall the factory settings.
4. Press **F2** key to select “Auto calibration”. If the ambient temperature variation is up to or larger than 5 Celsius degree, the Auto calibration function should be performed. But will not affect the using and capability by the heat from LCD and electronic component.

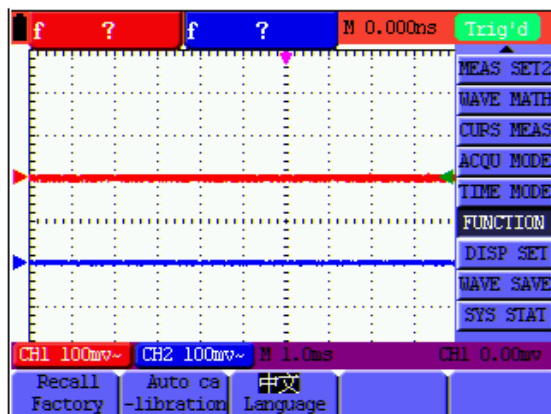


Figure 10: Reset the Oscilloscope

5.6. Input Connections

(See Figure 2)

Look at the bottom and the right of the Oscilloscope. The Oscilloscope has seven signal inputs: two safety BNC jack inputs (CH1 and CH2) for scope measurements, four safety 4-mm banana jack inputs for Multimeter R, V and A measurements,

Isolated input allows independent floating measurements between Multimeters and Scopes.

5.7. Displaying an Unknown Signal with Auto Set

The Auto-Set feature lets the Oscilloscope display and measure unknown signals automatically. This function optimizes the position, range, time base, and triggering and assures a stable display of virtually any waveform. . This feature is especially useful for quickly checking several signals.

To enable the Auto-Set feature, do the following:

1. Connect the test probe to the tested signals.
2. Press the **AUTO SET** key and the Oscilloscope is under the automatic measurement condition. The tested signals appear on the screen.

5.8. Automatic Zero-returning of Trigger Horizontal Position and Trigger Level Position

When we adjust the trigger horizontal position and trigger level position to be maximal to make it off the screen center remotely, then we perform the following steps to make trigger horizontal position and trigger level position return to zero automatically.

1. Press **V** key, the trigger horizontal position automatically returns to zero.
2. Press **R** key, the trigger level position automatically returns to zero.

5.9. Automatic Measurements

The Oscilloscope offers 5 ranges of automatic scope measurements. You can display two numeric readings: measurement 1 and measurement 2. These readings are selectable independently, and the measurements can be done on the input CH1 or input CH2 waveform.

To choose a frequency for CH1, do the following:

1. Press **MENU** key and the function menu appears on the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select measurement 1. Five items selectable are visible at the bottom of the screen.
3. Press **F1** key and select Freq **CH1** from the mean square root value item. The measurement 1 window turns its color into red and shows the frequency for input CH1.

To choose a Peak-Peak measurement for Input CH2, do the following:

1. Press **MENU** key and the function menu are displayed on the right side of the screen.

2. Press **MENU ▲** or **MENU ▼** key and select measurement 2, with 5 items selectable displayed at the bottom of the screen.
3. Press **F4** key to select PK-PK CH2 from Peak-Peak item. The measurement 2 window turns its color to be blue and shows the peak-peak value for input CH2.

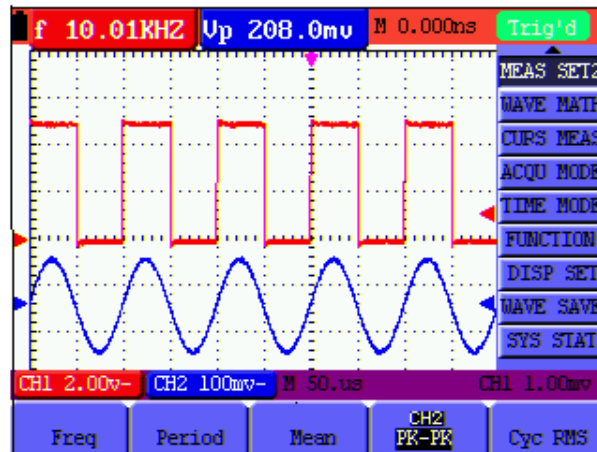


Figure 11: Automatic Scope Measurements

5.10. Freezing the Screen

You can freeze the screen (all readings and waveforms)

1. Press the **RUN/STOP** key to freeze the screen and **STOP** appears at top right side of the screen.
2. Press the **RUN/STOP** key once more to resume your measurement.

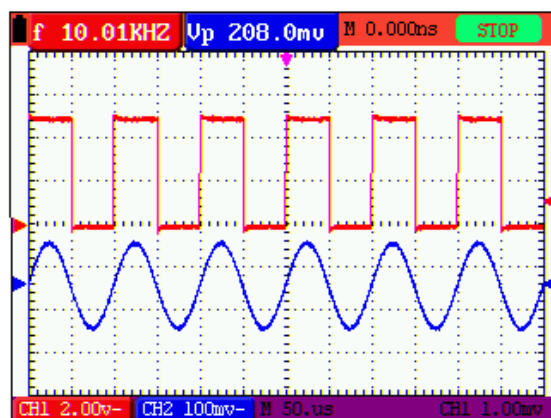


Figure 12: Freezing the Screen

5.11. Viewing noisy signals

Using the Average acquisition mode, you can smooth out the displayed waveform by averaging multiple data samples. The number of averaging is selectable from 4, 16, 64, and 128.

NOTE:

In order for average mode to work in the best way, the waveform must be repetitive; As the number of averaging increases, the slower the waveform update becomes.

1. Press the **MENU** key and the function menu appears on the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select **ACQU** mode, with four items selectable displayed at the bottom of the screen.
3. Press the **F3** key to select Average Factors, then, press **F4** key to jump to Averaging 16 item. This averages the outcomes of 16 acquisitions and shows the final averaging result on the screen, shown as the following Figures.

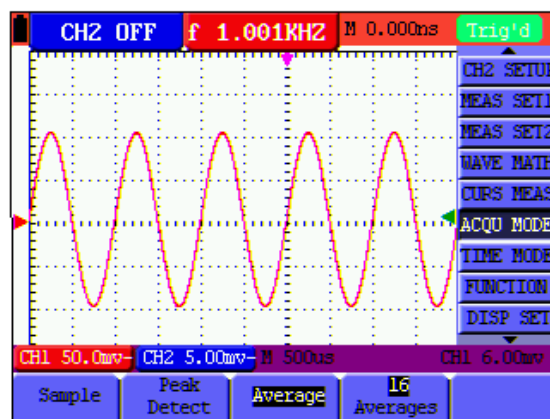


Figure 13: Average Factor Sampling Mode

5.11. Viewing variations in a signal

You can use Persistence to observe dynamic signals.

1. Press **MENU** key and the function menu appears on the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select **DISP SET**. Four items selectable are displayed at the bottom of the screen.
3. Press **F2** key to select Persist 1 sec, 2 sec, and 5 sec, infinite or close. In this case, jump to Infinite and the observed dynamic is kept on the screen continuously. When the item close is selected, the Persistence function is closed.

Look at the display, a screen like the following Figure can be shown.

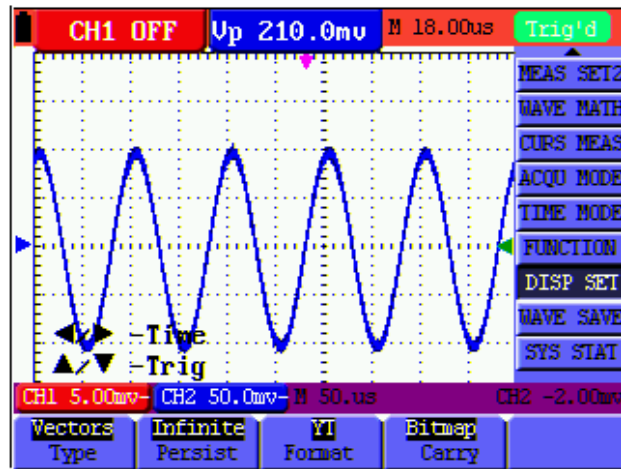


Figure 14: Persistence to Observe Dynamic Signals

5.12. Using Peak Detection to Display Glitches

You can use this function to display events (glitches or other asynchronous waveforms) of 50 ns or wider.

1. Press **MENU** key and the function menu appear at the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select the **ACQU MODE**. Four items selectable are displayed at the bottom of the screen.
3. Press **F2** key and jump to Glitch Detect. In this case, you can test the glitch.

Now, you can see a screen that looks like the following Figure.

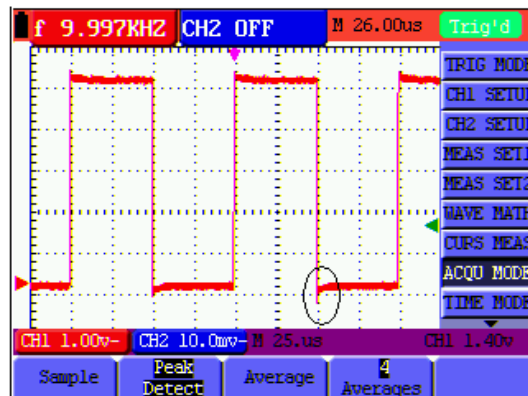


Figure 15: PeakDetection

Term interpretation

- * **Collecting mode:** The oscilloscope transforms the collected analog data into a digital form after they are gathered in the following three different modes, that is, sampling, peak value detection and averaging values.
- * **Sampling:** The oscilloscope takes samples from the signal at a equal time interval to reconstruct the waveform in this mode, by which the analog signal can be expressed correctly in most cases, yet, the rapid changes can not be collected between two sampling time intervals, causing the confusion and loss the narrow pulse in the signal probably.
- * **Peak value detection:** The oscilloscope takes samples from the maximum and minimum of signals in each sampling interval and shows the waveform with the sampled data in this mode, thus, by which the oscilloscope may collect the possibly lost narrow pulse in the sampling mode but the noise is obvious.
- * **Averaging values:** the oscilloscope collects several waveforms and average over them, and displays the averaged waveform in this mode, by which the random noise can be reduced.
- * **Duration time:** When a new waveform is displayed, the previous waveform shown on the screen does not disappear immediately only to be displayed for a period of time, that is, the duration time, by setting which, the waveform can be displayed more continuously and thus a display similar to that shown by the analog oscilloscope can be achieved.
- * **Roll scan mode:** The oscilloscope updates the waveform sampling points by scrolling display through a screen from left to right in this mode, which is only applicable to the primary time base setting of above 50ms.

5.13. Selecting AC-coupling

After a reset, the Oscilloscope is dc-coupled so that ac and dc voltages appear on the screen, Use ac-coupling when you wish to observe a small ac signal that rides on a dc signal. To select ac-coupling, do the following:

1. Press **MENU** key and the function menu appear at the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select the CH1 Setting. Four items selectable are visible at the bottom of the screen.
3. Press the F1 key and jump to AC. The bottom left side of the screen displays the ac-coupling icon.

Now, you can see a screen that looks like the following Figure.

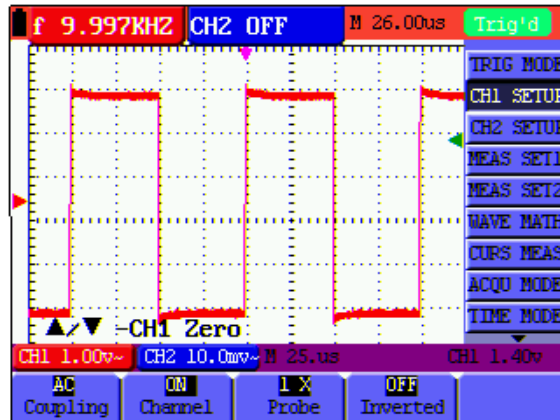


Figure 16: AC-Coupling

5.14. Reversing the Polarity of the Displayed Waveform

To invert the input CH1 waveform, do the following:

1. Press the **MENU** key and the function menu appears at the right side of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select **CH1** setting. Four items selectable are displayed at the bottom of the screen.
3. Press **F4** key to jump to Inverted. The inverted waveform of **CH1** is displayed on the screen.

Now, you can see a screen that looks like the following Figure.

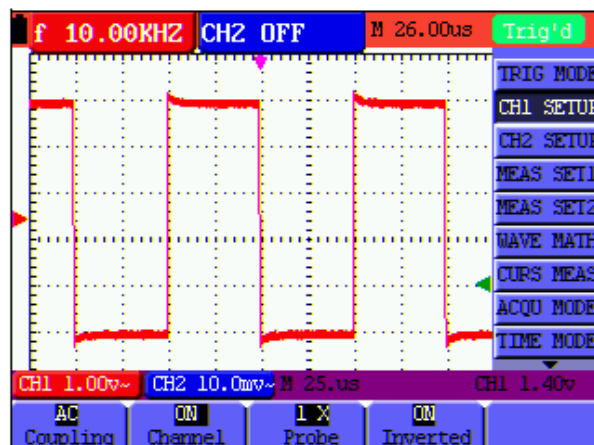


Figure 17: Inverted

5.15. Using Waveform Mathematics Functions

When adding ($CH1 + CH2$), subtracting ($CH1 - CH2$, $CH2 - CH1$), multiplying ($CH1 * CH2$) or dividing ($CH1 / CH2$) the input waveforms of CH1 and CH2, the Oscilloscope will display the mathematical result waveform M and the input waveforms of CH1 and CH2 on the screen. The Mathematics functions perform a point-to-point calculation on the waveforms CH1 and CH2.

To use a Mathematics function, do the following:

1. Press the **MENU** key and the function menu is displayed at the right side of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select the Waveform Calculation. Five items selectable appears at the bottom of the screen.
3. Press **F3** key to select **CH1+CH2** and the calculated waveform M (green) appears on the screen. Again, press the **F3** key to close Waveform Calculation.

4. Press **OPTION** and left bottom display as

◀/▶ —CHMath Volts/Div

▲/▼ —CHM Zero

5. Then, press ▲(yellow) or ▼(yellow) to adjust vertical display position of waveform M. Press ◀(yellow) or ▶(yellow) to adjust display times factor of waveform M.

Now, you can see a screen that looks like the following Figure.

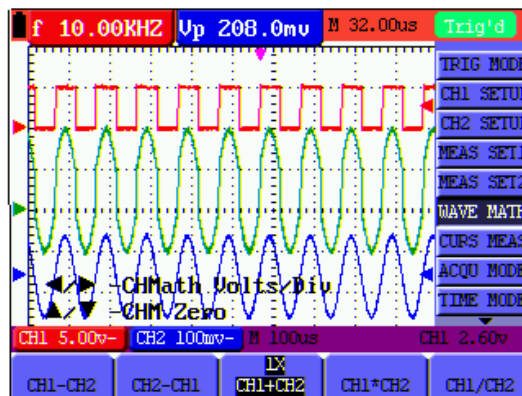


Figure 18: Waveform Mathematics

5.16. Use USB mass storage device to save waveform data

Insert the USB mass storage device into the USB port and press copy key, then the current waveform data will be saved inside and the file name in sequence will be WAVE1.BIN、WAVE2.BIN、WAVE3.BIN....., when it is finished, the screen display “Data have been written!” Then connect the USB mass storage device with the computer and open the data with OWON software.

Now, you can see a screen that looks like the following Figure.

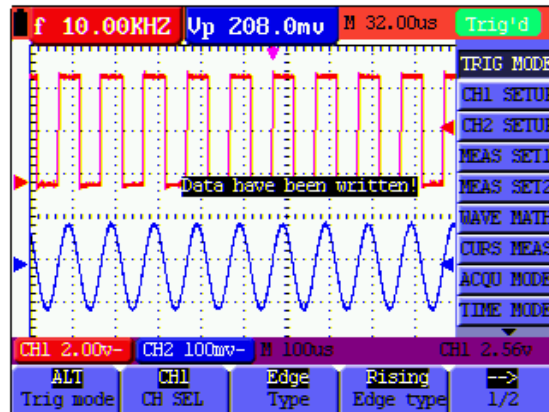


Figure 19

11.Using the Multimeter

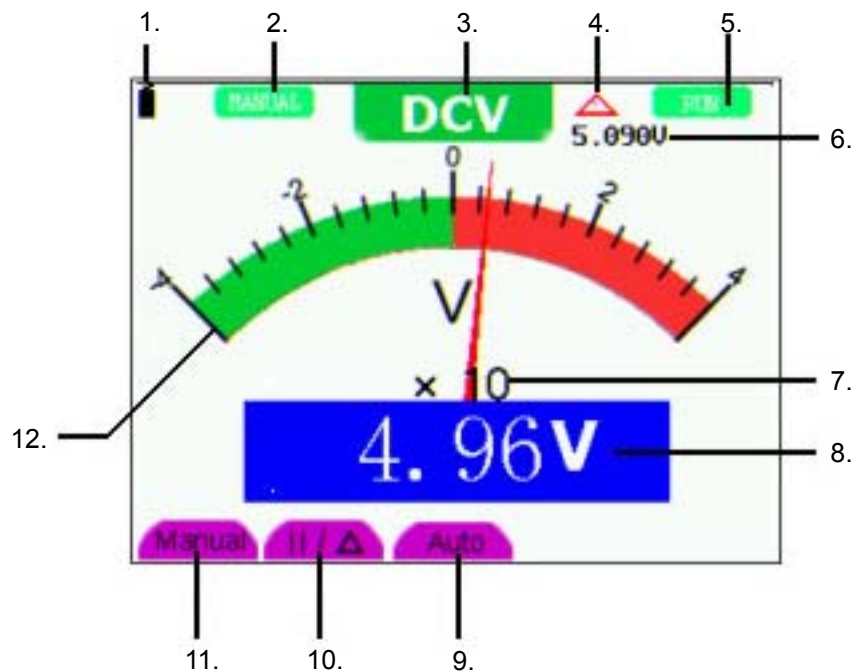


Figure 20: Multimeter Operation Window

1. Battery electric quantity indicator.
2. Manual/Auto range indicators, among which the MANAL means measuring range in manual operation mode and Auto refers to the measuring range in automatic operation mode.
3. Measurement mode indicators (DCV, ACV, DCA, ACA, R, Diode, ·)), Capacitance)
4. The relative magnitude measurement indicator.
5. Running state indicators, among which RUN expresses continuous update and STOP represents the screen locking.
6. The reference value of the relative magnitude measurement.
7. The multiplying power of the dial indication. To multiply the reading of dial pointer by multiplying power will get the measurement result.
8. The main reading of measurement
9. Automatic control measuring range.
10. Absolute/ relative magnitude measuring control: The sign “||” expresses the absolute magnitude measuring control and “△” represents the relative magnitude measuring control.
Manually measuring range control.
Manual measurement control.
11. Test lead indicated the scale of test reading; different test modes display different colors.

6.1. Activating the Multimeter

Press DMM/OSC key, the oscilloscope will switch to the multimeter measure, the screen will display the multimeter windows, at the same time, prompt to correctly insert testing pen of the multimeter, at this time, then press any key to enter into multimeter measure.

6.1.1. Measuring Resistance Values

To measure a resistance, do the following:

1. Press the **R** key and R appears at the top of the screen.
2. Insert the black lead into the COM banana jack input and the red lead into the V/Ω banana jack input.
3. Connect the red and black test leads to the resistor. The resistor value readings are shown on the screen in Ohm.

Now, you can see a screen that looks like the following Figure.

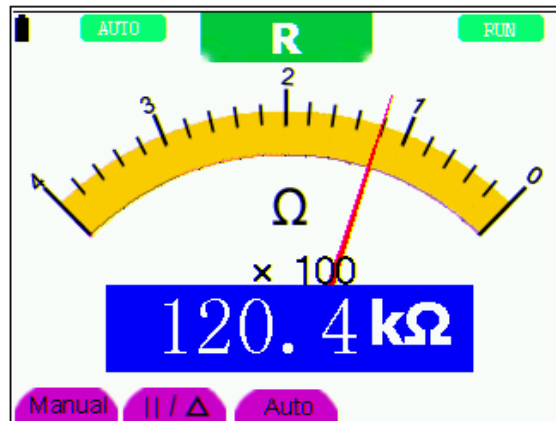
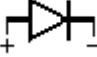


Figure 21: Resistance Measurement

6.1.2. Measuring Diode

To make a measurement on the diode, do the following:

1. Press the **R** key and R appears at the top of the screen.
2. Press **AUTO SET** key till the following is displayed on the screen  .
3. Insert the black lead into the COM banana jack input and the red lead into the V/Ω banana jack input.
4. Connect the red and black leads to the resistor and the diode resistor readings are displayed on the screen in V.

Now, you can see a screen that looks like the following Figure.

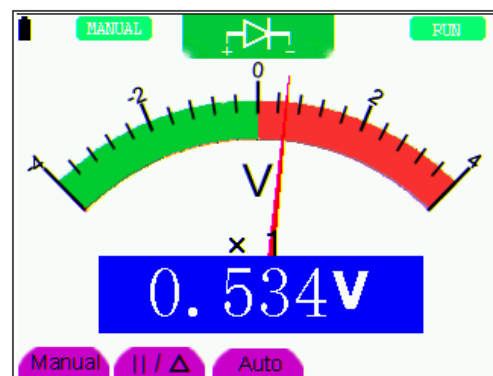
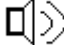


Figure 22: Diode Measurement

6.1.3. Continuity Test

To perform the continuity-test, do the following:

1. Press the **R** key and R appears on the top of the screen.
2. Press the **SET** key till the following is shown on the screen. 
3. Insert the black lead into the COM banana jack input and the red lead into the V/ Ω banana jack input.
4. Connect the red and black leads to the test point. If the resistance value of the tested point is less than 50 Ω , you will hear beep sound from the test tool.

Now, you can see a screen that looks like the following Figure.

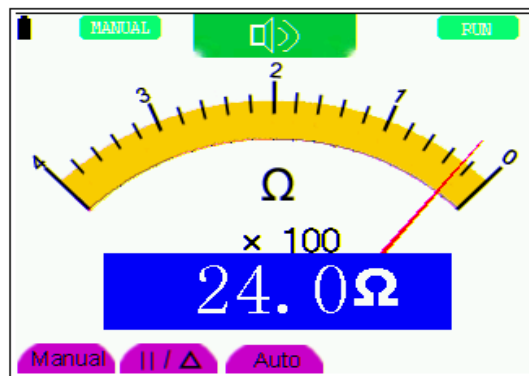


Figure 23: Continuity-Test

6.1.4. Measuring Capacitance

To measure a capacitance, do the following:

1. Press the **R** key and R appears on the top of the screen
2. Press the **SET** key till C appears at the top of the screen.
3. Insert the black leads to COM jack, and red leads to V/ Ω jack.
4. Connected the black and red leads with capacitance, then screen shows the capacitance reading.

NOTICE:

When measured value is less than 5 nF capacitance, please use small capacitance measurer of this multimeter and use relative value measuring mode to improve measuring precision. It will take about 30seconds if capacitance measurement is large than 40 μ F.

Now, you can see a screen that looks like the following Figure.

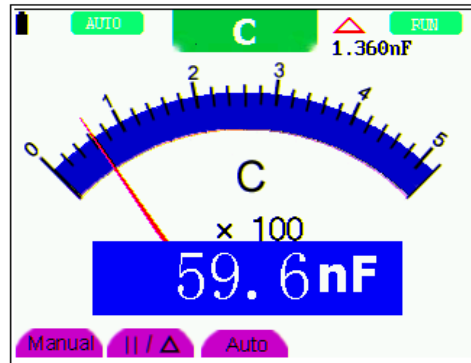


Figure 24: Capacitance Measurement

6.1.5 Measuring DC Voltage

To measure a DC voltage, do the following:

1. Press the **V** key and DCV appears at the top of the screen.
2. Insert the black lead into the COM banana jack input and the red lead into the V/Ω banana jack input.
3. Connect the red and black leads to the measured point and the measured point voltage value is displayed on the screen.

Now, you can see a screen that looks like the following Figure.

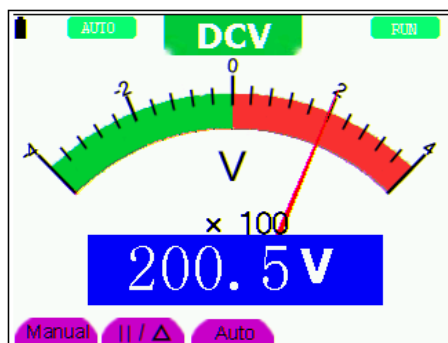


Figure 25: DC Voltage Measurement

6.1.6. Measuring AC Voltage

To measure the AC voltage, do the following:

1. Press the **V** key and DCV appears at the top of the screen.
2. Press the **SET** key and ACV appears at the top of the screen.
3. Insert the black lead into the COM banana jack input and the red lead into the V/Ω banana jack input.

4. Connect the red and black leads to the measured points and the AC voltage values of measured points will be displayed on the screen.

Look at the display; you can see a screen that looks like the following Figure.

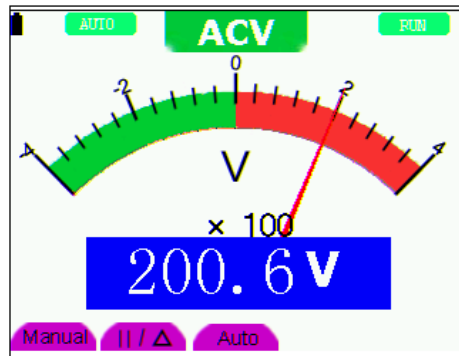


Figure 26: AC Voltage

6.1.7. Measuring DC Current

To measure a DC current which is less than 400 mA , do the following:

1. Press the A key and DCA appears at the top of the screen. The unit on the main reading screen is mA. mA and 10A will display on the right bottom of screen, press F4 or F5 to switch the measurement between mA and 10A. 400mA is acquiescently.
2. Insert the black lead into the COM banana jack input and the red lead into the mA banana jack input.
3. Connect the red and black leads to the measured points and the DC current values of measured points will be displayed on the screen.

Look at the display; you can see a screen that looks like the following Figure.

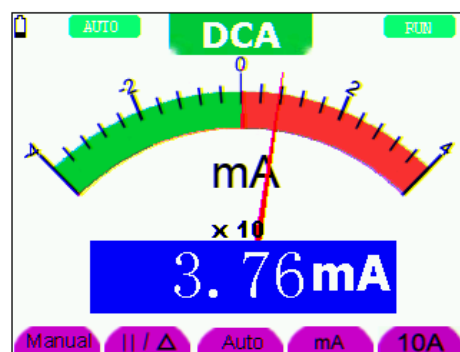


Figure 27: DC Current Measurement for <400 mA

To measure a DC current which is larger than 400 mA, do the following:

1. Press the **A** key and DCA appears at the top of the screen. The unit on the main reading screen is mA.
2. Press **F5** key change to 10A measurement, the unit on the main reading screen is A.
3. Press **SET** key and ACA appears at the top of the screen.
4. Insert the black lead to **COM** jack and red lead to 10 A jack.
5. Connected the red and black leads to the measured point and the DC current value of the measured point will be displayed on the screen.
6. Press F4 return to 400 mA measure.

Look at the display; you can see a screen that looks like the following Figure .



Figure 28: DC Current Measurement for <10A

6.1.8. Measuring AC Current

To measure an AC current which is less than 400 mA, do the following:

1. Press the **A** key and DCA appears at the top of the screen. The unit on the main reading screen is mA. mA and 10A will display on the right bottom of screen, press **F4** or **F5** to switch the measurement between mA and 10A. 400mA is acquiescently.
2. Press the **AUTO SET** key once and ACA is visible at the top of the screen.
3. Insert the black lead into the COM banana jack input and the red lead into the mA banana jack input.
4. Connect the red and black leads to the measured point and the AC current value of the measured point will be displayed on the screen.

Look at the display; you can see a screen that looks like the following Figure.

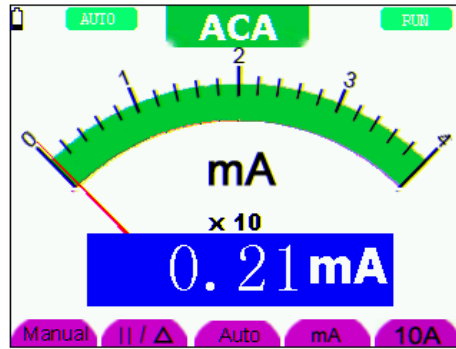


Figure 29: AC Current Measurement for <400 mA

To measure an AC current which is larger than 400 mA, do the following:

1. Press the **SET** key once and ACA is visible at the top of the screen.
2. Press **F5** to select 10A measure, the unit of main reading window is A.
3. Press the **SET** key once and ACA is visible at the top of the screen.
4. Plug current extended module in current measure jack, then plug the probe in the module.
5. Connect the red and black leads to the measured point and the AC current value of the measured point will be displayed on the screen.
6. Press **F4** return to 400mA measure.

Look at the display; you can see a screen that looks like the following Figure.

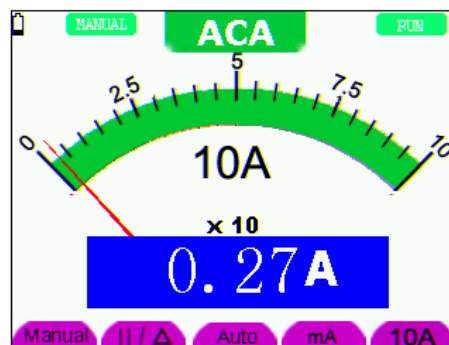


Figure 30: AC Current Measurement for <10 A

6.2. Freezing the Readings

You can freeze the displayed readings at any time.

1. Press the **RUN /STOP** key to freeze the screen and **STOP** will be displayed at the top right of the screen.

2. Again, press the **RUN /STOP** key, you can resume your measurement.

Look at the display; you can see a screen that looks like the following Figure.



Figure 31: Freezing the Readings

6.3. Taking a Relative Measurement

A currently measured result relative to the defined reference value is displayed in a relative measurement. The following example shows how to take a relative measurement. At first, it is required to acquire a reference value.

1. Press **R** key and **R** is displayed on the top side of the screen.
2. Press the **AUTO SET** key till **C** appears at the top of the screen.
3. Plug capacitance extended module in capacitance measure jack.
4. When the reading leveling off, press **F2** key and **▲** is displayed on the top side of the screen. The saved reference value is displayed below **▲**.
5. Plug capacitance, the displayed major reading on the screen is actual the capacitance value.

Look at the display; you can see a screen that looks like the following Figure.

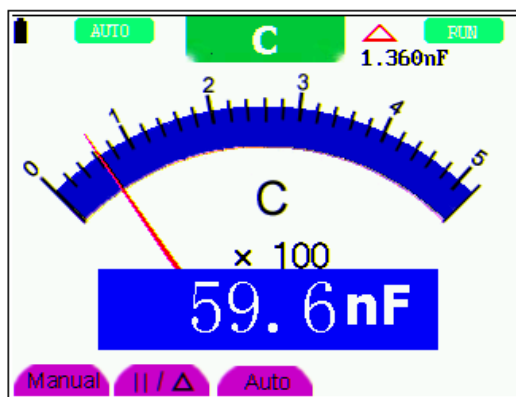


Figure 32: Relative Measurement

6.4. Selecting Automatic/Manual Range Adjustment

The defaulted range mode of the instrument is automatic range. To switch to the manual range, perform the following steps:

1. Press **F1** key and **MANUAL** is displayed on the top left side of the screen to enter the manual range mode.
2. Under the manual range mode, the measuring range is increased by a stage when pressing F1 key each time, and when reaching the highest stage, it jumps to the lowest stage by pressing F1 key once again. To multiply the reading of dial pointer by multiplying power and the unit of main reading on the screen will get the measurement result.
3. Press **F3** key and **AUTO** is displayed on the top left side of the screen to switch back to the automatic range mode.

Look at the display; you can see a screen that looks like the following Figure .

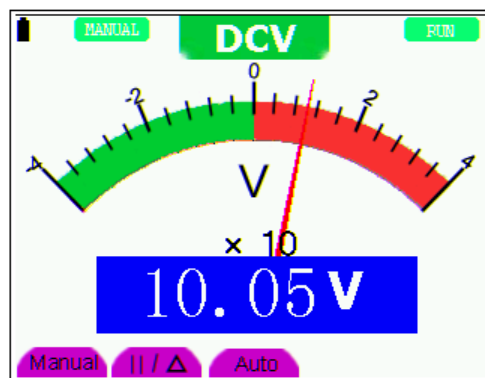


Figure 33: Automatic/Manual Range Adjustment

ATTENTION:

Capacitance measurement without manual range mode.

7. Advanced Function of Oscilloscope

This chapter will detail the oscilloscope function of the test tool.

7.1. Setting the Vertical CH1 and CH2

Each channel has its own independent vertical menu and each item can be set respectively based on the specific channel.

To make vertical CH1 and CH2 settings, do the following:

1. Press the **MENU** key and the function menu appears at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to jump to **CH1** Setting and 4 options appears at the bottom of the screen.
3. Select key from **F1** to **F4** to make different settings.

Now, you can find a screen that looks like the following Figure .

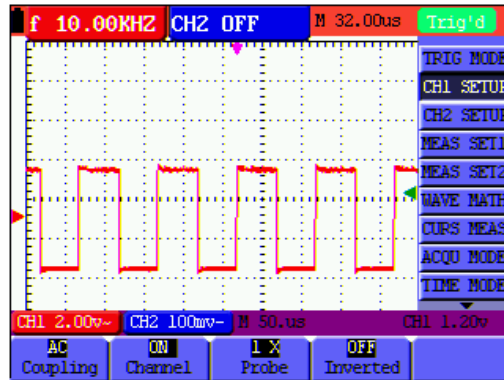


Figure 34: Setting the Vertical

The following Table describes the **Vertical Channel** menu:

Function menu	Setting	Description
Coupling	AC	Triggers only on the AC portion of the waveform
	DC	Triggers on the whole waveform (AC+DC)
Channel	OFF	Close the channel.
	ON	Open the channel.
Probe	1X	Select one according to the probe attenuation level to ensure a correct vertical scale reading.
	10X	
	100X	
	1000X	
Invert	OFF	Waveform is displayed normally.
	ON	Open the Invert function.

7.1.1 Setting the Channel Coupling

With CH1 taken for example.

- * Press **F1** Coupling first and then AC to make an AC coupling setting. The DC component contained in the tested signal is blocked.
- * Press **F1** Coupling first and then DC to make a DC coupling setting. Both DC and AC components contained in the tested signal are permitted.

The waveform is displayed as the following Figure.

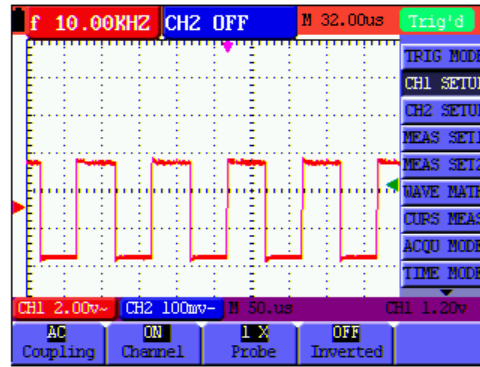


Figure 35: AC Coupling

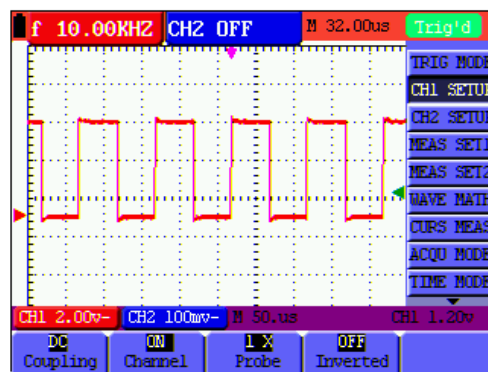


Figure 36: DC Coupling

7.1.2 Open and Close Settings on Channel

With CH1 taken for example.

- * Press **F2** Channel key first, and then **OFF** to make a Close setting on **CH1**.
- * Press **F2** Channel key first, and then **ON** to make an Open setting on **CH1**.

7.1.3 Setting the probe attenuation

To prevent excessive input voltage, we recommend you to set the probe attenuation level to the 10X position to prevent excessive voltage. After attenuating the probe level by 10X, you also need to magnify the display level by 10X to match the displayed amplitude with the real amplitude.

Press **F3** Probe to adjust the probe attenuation level.

Table: Probe attenuation level and the corresponding menu setting

Probe attenuation level	Corresponding Menu Setting
1:1	1X
10:1	10X
100:1	100X
1000:1	1000X

7.1.4 Setting of Inverted Waveform

Inverted waveform: The displayed signal reverses 180°.

Press F4 Invert to start Invert; press F4 Invert again to close Invert.

7.2. Make the Math Function Menu Setting

The **WAVE MATH** functions in showing the result of adding, subtracting, multiplying or dividing calculation on CH1 and CH2 channel waveforms. Also, the result of arithmetic operation can be measured with grid or cursor. The amplitude of the calculated waveform can be adjusted with CHM VOL, which is displayed in the scale factor form. The amplitude ranges from 0.001 through 10 and steps in the 1-2-5 form, that is, it can be expressed as 0.001X, 0.002X, 0.005X...10X. The position of the calculated waveform can be adjusted up and down with the **CHM ZERO** key used.

The corresponding operation function table

Setting	Description
CH1-CH2	Subtract CH2 from CH1
CH2-CH1	Subtract CH1 from CH2
CH1+CH2	Add CH2 to CH1
CH1*CH2	Multiply CH2 with CH1
CH1/CH2	Divide CH1 by CH2

To perform the **CH1+CH2** waveform calculation, do the following:

1. Press the **MENU** key and the function menu appears at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select **MATH** and 5 options are displayed at the bottom of the screen.
3. Press the **F3 CH1+CH2** key and the obtained waveform M appears on the screen. Again, press the **F3** key and Close the waveform M.

- Press **OPTION** and left bottom display as

◀/▶ — CHMath Volts/Div

▲/▼ — CHM Zero

Press ◀(yellow) or ▶(yellow) to adjust the range of M waveform

Press ▲(yellow) or ▼(yellow) to adjust the position of M waveform

Now, look at the display and you will find a screen that looks like the following Figure.

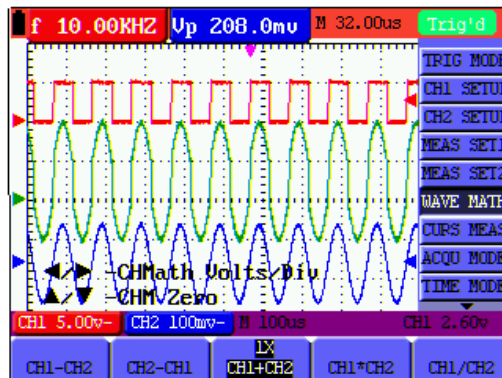


Figure 37: Waveform Mathematics

7.3. Setting the Trigger System

The Trigger defines the time when the acquisition of data and display of waveform. If it is set correctly, the trigger can turn an unstable display into a significant waveform.

When starting the acquisition of data, the oscilloscope collects sufficient data to draw the waveform at the left side of the triggering point. With waiting for the triggering condition, the oscilloscope is gathering data continuously. After a trigger is detected, the oscilloscope gathers enough data continuously to draw the waveform at the right side of the triggering point.

To make a trigger mode setting, do the following:

- Press the **MENU** key and the function menu appears at the right of the screen.
- Press the **MENU ▲** or **MENU ▼** key to select **TRIG MODE** and five options are displayed at the bottom of the screen.
- Select from **F1** to **F5** key to make a different setting.
- Press **OPTION** and left bottom display as below during edge trigger and video trigger:

◀/▶ — Time	◀/▶ — Time base
▲/▼ — Trig	▲/▼ — Trig

Left bottom display as below during alternate trigger:

◀/▶ — Time ◀/▶ — Time base
 ▲/▼ — Trig1 ▲/▼ — Trig2

5. Press ▲(yellow) or ▼(yellow) to adjust trigger vertical position, Press ◀(yellow) or ▶(yellow) to adjust time base horizontal position or adjust horizontal position.

7.4. Triggering Control

There are three triggering modes including Edge triggering, Video triggering and alternating triggering. Each trigger mode is set by different function menu.

- * **Edge triggering:** The edge trigger type triggers on the incoming signal edge. Use the edge trigger for all signals except for video related ones.
- * **Video triggering:** Perform video field trigger or line trigger on the standard video signals.
- * **Alternate trigger:** When the signal frequency different in Channel 1 and 2, it can also guarantee the stability approaching in two channels.

The following describes the Edge triggering, Video triggering and Alternating triggering menus respectively.

7.4.1 Edge Triggering

The Edge triggering is a mode by which trigger occurs at the triggering threshold value of the input signal edge. With the **Edge triggering** selected, the trigger happens on the rise or fall edge of the input signal, shown as the Figure 38.

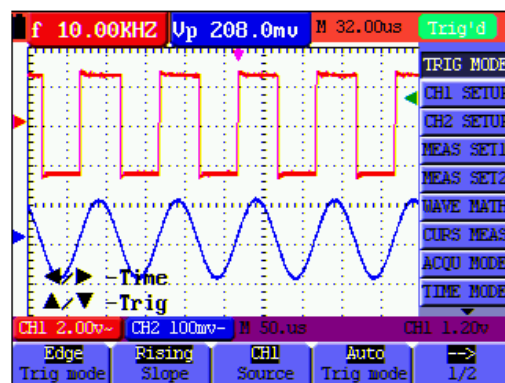


Figure 38: Edge Trigger

The **Edge triggering** menu is described in the following table.

Function menu	Settings	Description
Slope	Rising	Triggering on the rise edge of the signal.
	Falling	Triggering on the fall edge of the signal.
Source	CH1	CH1 is used as the trigger source.
	CH2	CH2 is used as the trigger source.
Trig mode	Auto	Input signals are constantly acquired and shown in the display regardless of trigger condition.
	Normal	Input signals are shown in the display only if the trigger condition is met.
	Single	You manually trigger the oscilloscope by pressing the RUN/STOP key each time you need to observe the waveform. Once the waveform is captured, the oscilloscope stops triggering and waits for the next trigger command.
Coupling	AC	Triggers only on the AC portion of the waveform.
	DC	Triggers on the whole waveform (AC+DC)
	HF Rjc	Filters out the higher frequency when triggering.
	LF Rjc	Filters out the lower frequency when triggering.
SENS		Set trigger sensitivity

Term interpretation

Sensitivity: Trigger circuit including sluggish in order to exclude the influences from signal noise and get the stable trigger. The sluggish is adjustable among 0.2div~1.0div. It means when set on 1.0 div trigger circuit don't have any response to any signal of PK-PK range $\leq 1.0\text{div}$ which to exclude the influences from signal noise.

7.4.2. Video Triggering

The video trigger type is designed to capture the video signal format, **NTSC**, **PAL** or **SECAM**. For any other signal type, use the edge trigger.

Now, you can see a screen that looks like the following Figure 39, 40 and 41.

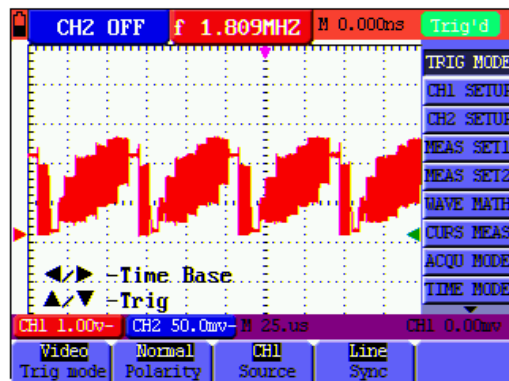


Figure 39: Video Field Trigger

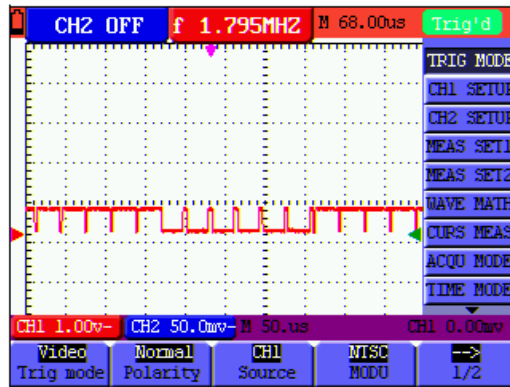


Figure 40: Video Line trigger

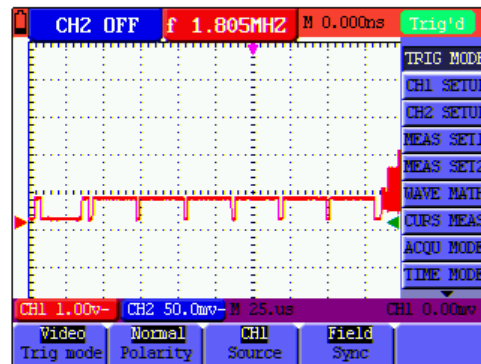


Figure 41: Video Modulation Trigger

The Video triggering menu is described in the following table.

Function menu	Settings	Description
Polarity	Normal Inverted	Applicable to the video signal of which the black level is low. Applicable to the video signal of which the black level is high.
Source	CH1 CH2	Select CH1 as the trigger source. Select CH2 as the trigger source.
Sync (Synchronization)	Line Field Odd field Even field	Set synchronous trigger in video line Set synchronous trigger in video field Set synchronous trigger in video odd line Set synchronous trigger in video even line
MODU (Modulation)	NTSC PAL/SECAM	Set synchronization and account choose video standard Set synchronization and account choose video standard
Line	Increase Decrease	Press F2,the Line value will increase Press F2,the Line value will decrease
Line NO.		Show the Line value

7.4.3. Alternate trigger

During alternate trigger, the trigger signal mainly comes from two vertical channels and it can use to observe two irrelevant signals. You can set different trigger type for two vertical channels in this menu (optional for edge trigger and video trigger).

Now, you can see a screen that looks like the Figure.

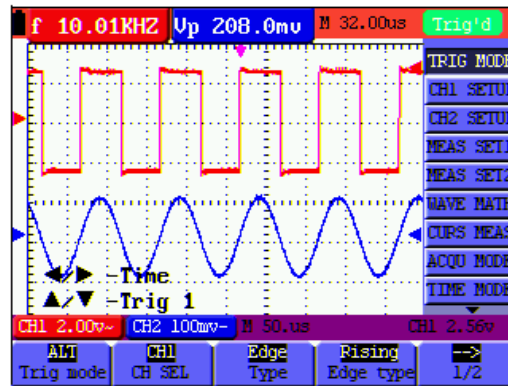


Figure 42 Alternate Trigger

The Alternate triggering menu is described in the following table.

Function menu	Settings	Description
CH SEL	CH1 CH2	Setting trigger type and others info for Channel 1 Setting trigger type and others info for Channel 2
Type	Edge Video	Set vertical channel trigger as edge trigger Set vertical channel trigger as video trigger
Edge type	Rising Falling	Triggering on the rise edge of the signal. Triggering on the fall edge of the signal.
Coupling	AC DC HF Rjc LF Rjc	Triggers only on the AC portion of the waveform. Triggers on the whole waveform (AC+DC) Filters out the higher frequency when triggering. Filters out the lower frequency when triggering.
SENS		Set trigger sensitivity

Function menu	Settings	Description
CH SEL	CH1 CH2	Setting trigger type and others info for Channel 1 Setting trigger type and others info for Channel 2
Type	Edge Video	Set vertical channel trigger as edge trigger Set vertical channel trigger as video trigger
Video type	Normal Inverted	Applicable to the video signal of which the black level is low. Applicable to the video signal of which the black level is high.
Sync (Synchronization)	Line Field Odd field Even field	Set synchronous trigger in video line Set synchronous trigger in video field Set synchronous trigger in video odd line Set synchronous trigger in video even line
MODU (Modulation)	NTSC PAL/SECAM	Set synchronization and account choose video standard Set synchronization and account choose video standard
Line	Increase Decrease	Press F3,the Line value will increase Press F3,the Line value will decrease
Line NO.		Show the Line value

Term interpretation

- * **Trigger modes:** There are three kinds of trigger modes available for this oscilloscope, they are, Auto (acquires signal continuously), Normal (acquires signal when trigger conditions are met) and Single (manually triggers the signal).
- * **Automatic trigger mode:** The oscilloscope can acquire the waveform without any triggering condition detected in this mode, in which it will be triggered compulsively when waiting for a specified period of time without any triggering condition ignited. When an invalid trigger is enforced, the oscilloscope can not keep the waveform in phase.
- * **Normal trigger mode:** In this mode, the oscilloscope cannot acquire the waveform till it is triggered. When there is not any trigger, the oscilloscope will display the original waveform without new waveforms captured.
- * **Single mode:** In this mode, the oscilloscope will detect a trigger and capture a waveform at each time when the customer presses the RUN/STOP key.

7.5. Selecting the acquisition mode

The Acquiring Mode menu is described in the list shown as below.

Function menu	Settings	Description
Sample		The waveform data is sampled at an equal time interval. The sample mode accurately reconstructs the waveform, but cannot respond to rapid changes and sudden peaks.
Peak Detect		The maximum and minimum data in the sampling interval are picked up. The peak detect mode captures rapid changes and sudden peaks, but the waveform becomes noisy.
Average		Multiple samples are averaged together. The average mode reduces the noise level, but the waveform must be repetitive.
Averages	4, 16, 64 or 128	Select the average number.

7.6. Display Setting

The Display Setting menu is described in the following table.

Function menu	Settings	Description
Type	Vectors	The vector drawing mode shows the waveform as a smooth line, connecting each data point.
	Dots	The dot drawing mode shows the waveform as a collection of independent data points.
Persist	Close 1s 2s 5s Infinite	The persistence setting sets how long the old waveforms remain in the display, useful for observing the waveform variations.
Format	YT	Display the relative relationship between vertical voltage and horizontal time.
	XY	Display CH1 on the horizontal axis and CH2 on the vertical axis.
Carry	Bitmap	The data transmitted in communication are bitmaps.
	Vector	The data transmitted in communication are vectors.

7.6.1. Display Style

The display style includes Vector and Dot displays, shown as the following Figure 43, Figure 44.

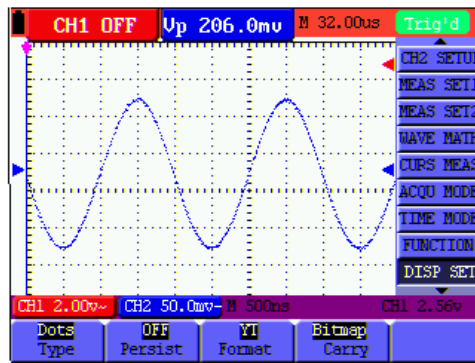


Figure 43: Dot Style

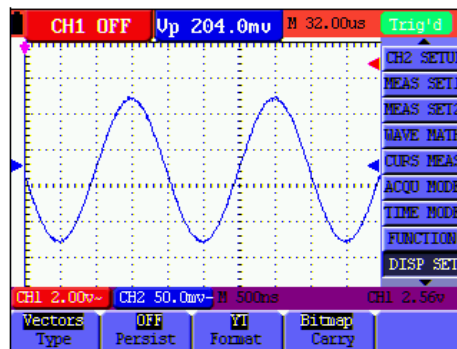


Figure 44: Vector Style

7.6.2.Persistence

With **Persistence** function selected, the displayed saved original data gradually decay in color and the new data are bright in color; with infinite persistence mode selected, the oscilloscope keeps all past traces of the displayed waveform.

7.6.3. XY Mode

This mode is only applicable to CH1 and CH2. The X-Y format plots the CH1 input as X-axis and CH2 input as Y-axis. This display mode is convenient for viewing the phase relationship between CH1 and CH2; when the oscilloscope is under the sampling mode in which no trigger is found, the data appear in light spots.

Operations for various control keys are shown as below:

- * The **CH1 VOL** and **CH1 ZERO** for CH1 are used to set the horizontal scale and position.
- * The **CH2 VOL** and **CH2 ZERO** for CH2 are used to set the vertical scale and position continuously.

The following functions do not work in the XY display mode:

- * Reference or digital value waveform
- * Cursor
- * Auto Setting
- * Time base control
- * Trigger control

7.7. Waveform Saving Setups

The oscilloscope can save 4 waveforms, which can be displayed on the screen with the present waveform. The recalled waveform saved in the memory cannot be adjusted.

The waveform saving /recalling menu is described in the following list.

Function menu	Setups	Description
Source	CH1 CH2 MATH	Make sure the waveform you want to save appears in the display. Select the displayed waveform which you want to save.
WAVE	A, B, C and D	Select the address for saving or recalling a waveform.
Save		Store the waveform of a selected signal source into the selected address.
Show	ON OFF	Close or start displaying the waveforms stored in address A, B, C or D.

To save a waveform on CH1 in address A, do the following:

1. Press the **MENU** key and the function menu appears at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select the Waveform Saving. Four options are displayed at the bottom of the screen.
3. Press the **F1** key to select the signal source CH1.
4. Press the **F2** key to select the address A.
5. Press the **F3** key to save the waveform on CH1 in address A.

To display the saved waveform on the screen, do the following:

6. Press the **F4** key to select Start for the address A. The waveform saved in address A will be displayed on the screen in green color.

The display color is green, and the zero point of waveform, voltage and time is purple

Now, you can see a screen that looks like the following Figure.

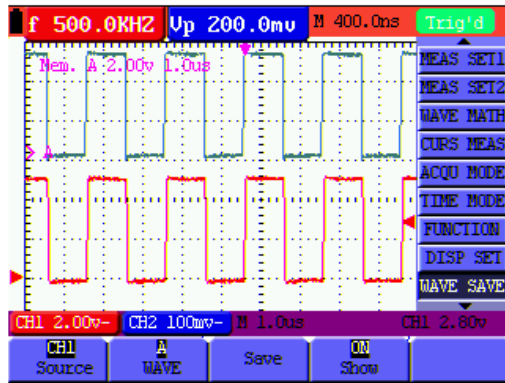


Figure 45: Waveform Saving

7.8. Function Setting Menu

The **function setting** menu is described in the following list.

Function menu	Setting	Description
Recall Factory		Resume the instrument to its factory settings.
Auto Calibration		Perform the Auto-calibration procedure.
Language	Chinese English	Select the display language.

Auto-calibration

The Auto-calibration function automatically configures internal parameters to maintain the sensitivity and accuracy. Run the Auto-calibration in the following cases:

When the temperature fluctuates more than 5 degrees Celsius during operations.

When operating the oscilloscope in a new bench top or field environment.

1. Press the MENU key and select the FUNCTION menu using the Up/Down key.
2. Press F2 (Auto calibration). A message appears on the display, asking you to remove all cables and probes from oscilloscope.
3. After removing all cables, press F2 (Auto calibration) again. The Auto-calibration automatically starts and a message appears, showing that the calibration is ongoing.

To interrupt calibration, press any key during the calibration.

7.9. Making Automatic Measurements

The oscilloscope can perform 5 types automatic measurements such as Frequency, Period, Mean voltage, Peak-to-peak voltage and Cycle voltage (true RMS). And gives two kinds of measurement results simultaneously on the screen.


The function menu for automatic measurements is described in the following list.

Function menu	Settings	Description
Freq	CH1	Measure the frequency of CH1.
	CH2	Measure the frequency of CH2.
Period	CH1	Measure the period of CH1.
	CH2	Measure the period of CH2.
Mean	CH1	Measure the average value of CH1.
	CH2	Measure the average value of CH2.
Peak-Peak	CH1	Measure the peak-to-peak value of CH1.
	CH2	Measure the peak-to-peak value of CH2.
Cyc RMS	CH1	Measure Root Mean Square (RMS) value of CH1.
	CH2	Measure Root Mean Square (RMS) value of CH2.

To measure the frequency of CH1 with **Measurement 1** and the frequency of CH2 with **Measurement 2**, do the following:

1. Press the **MENU** key and the function menu is shown at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select **Measurement 1**. Five options appear at the bottom of the screen.
3. Press the **F1** key to select the frequency measurement as **CH1**. The measurement window on the screen turns into one red in color and shows the frequency of **CH1**.
4. Press the **MENU ▲** or **MENU ▼** key to select **Measurement 2**. Five options appear at the bottom of the screen.
5. Press the **F4** key to jump to the peak-to-peak measurement as **CH2**. The measurement window on the screen turns into one blue in color and shows the peak-to-peak value of **CH2**.

Now, you can see a screen that looks like the following figure 46.

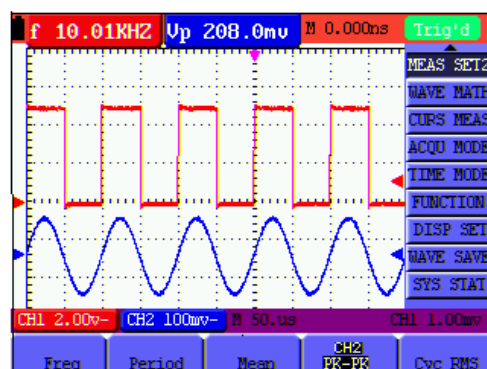

46: Automatic Measurements

7.10. Setting the Cursor Measurements

This oscilloscope allows you to make manual cursor measurements on time and voltage. The signal sources include Channel 1 (CH1), Channel 2 (CH2).

The cursor measurement menus are listed and described in the following table.

Function menus	Settings	Description
Type	OFF Voltage Time	Close the cursor measurement. Display the voltage measurement cursor and menu. Display the time measurement cursor and menu.
Source	CH1, CH2.	Select the waveform channel on which the cursor measurement will be performed.

To make a voltage measurement on CH1, doing the following:

1. Press the **MENU** key and the function menus are displayed at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select Cursor Measurement. Two options are shown at the bottom of the screen.
3. Press **F1** key to select the measurement type Voltage. Two purple crossing dashed lines V1 and V2 are shown on the screen.
4. Press the **F2** key to select the measured channel **CH1**.

5. Press **OPTION** and display as

◀/▶—Cursor 2

▲/▼—Cursor 1

Press ▲(yellow) or ▼(yellow) to see V1 move up and down and the panel will display the voltage value match V1 and Channel 1 Zero; Press ◀(yellow) or ▶(yellow) to see V2 move up and down and panel will display the voltage value match V2 to Channel 1 Zero. LCD panel also display the absolute value of V1-V2

Now, you can see a screen that looks like the following figure 47.

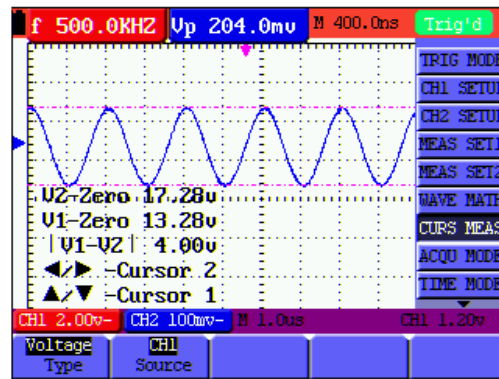


Figure 47: Use the Cursor for a Voltage Measurement

To use the cursor for a time measurement on CH1, do the following:

1. Press the **MENU** key and the function menus are displayed at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select **Cursor measurement** key. Two options are shown at the bottom of the screen.
3. Press the **F1** key to the measurement type Time. Two vertical dashed lines T1 and T2 appear on the screen.
4. Press the **F2** key and jump to the measured channel **CH1**.
5. Press **OPTION** and display as
 ◀/▶—Cursor 2
 ▲/▼—Cursor 1

Press ▲(yellow) or ▼(yellow) and see T1 move left and right and LCD display the time value match T1 to point position in panel; press ◀(yellow) or ▶(yellow) and see T2 move left and right and LCD display the time value match T2 to point position in panel.

Now, you can see a screen that looks like the following figure 48.

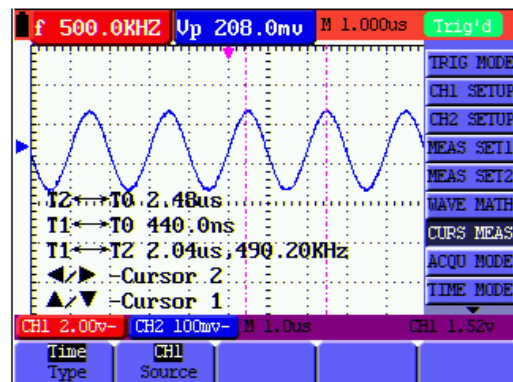


Figure 48: Use the Cursor for a Time Measurement

7.11. System State Menu

The system state menu is used to display information about the present horizontal system, vertical system, trigger system and others. The operation steps are shown as below.

1. Press the **MENU** key and the function menu is displayed at the right of the screen.
2. Press the **MENU ▲** or **MENU ▼** key to select the **System State**. Four options appear at the bottom of the screen.
3. Sequentially press **F1** to **F4** key and the corresponding state information will be shown on the screen.

The screen that looks like the following figure 49 will be displayed.

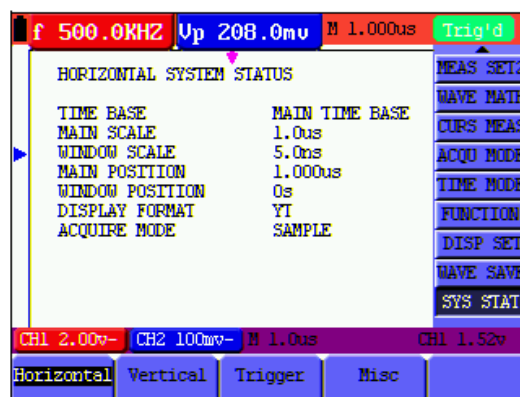


Figure 49: System State

7.12. Setting of Time Base Mode

The time base mode menu is explained as the following table.

Function menu	Setting	Explanation
Main Time Base		Horizontal main time base is used to wave display
Set Window		Use two cursors to define a window area
Zone Window		Expand the defined window to full-screen display

For the operation of window extension, please execute the following steps:

1. Press **MENU** key, display the function menu on the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select time base mode, display three options at the bottom.
3. Press **F2** key to select window setting.
4. Press **OPTION** key, pop up **TIME BASE**, at this time, then press ◀(yellow) and ▶(yellow) key to adjust the time base window area defined by two cursors, the window size will vary.

5. Press **OPTION** key and call **TIME**, at this time, press ◀(yellow) and ▶(yellow) to adjust the window position defined by two cursors, the window position is the time difference of the window center to main time base's horizontal pointer.
6. Press **F3** key, select window extension, the defined window extends into the full-screen display.

The screen that looks like the following Figure 50, 51 will be displayed.

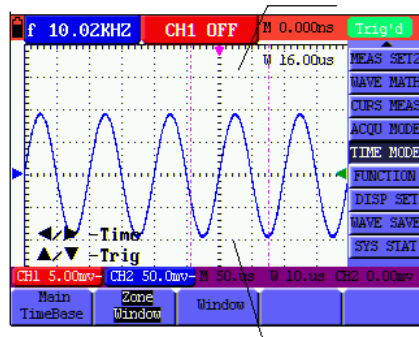


Figure 50: Window Setting

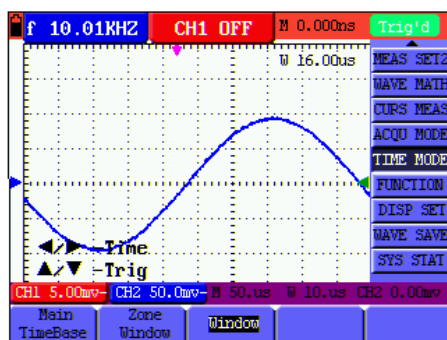


Figure 51: Window Extension

7.13. Data Transmission

For the operation of data transmission, please execute the following steps:

1. Press **MENU** key, display the function menu on the right side of the screen.
2. Press **MENU ▲** or **MENU ▼** key to select display setting mode, display four options at the bottom.
3. Press **F4** key; select the **Bitmap** or **Vectors** for data transmission.
4. Use a data line to connect the oscilloscope and the PC.
5. Open the OWON software that had been installed completely.
6. Setting the parameter under the use's manual, and then starts data transmission.

8. Appendix

8.1. Oscilloscope

Only if other instructions are provided, are all technical specifications applicable to the probe with the 10X

attenuation switch setting and the digital type oscilloscope. In order to be up to these specifications, the oscilloscope should meet the following requirement.

- * The instrument should operate continuously for more than 30 minutes under the specified operating temperature.
- * If the operating temperature is up to or larger than 5 Celsius degrees, the system function menu must be opened to make the system perform a “Auto- calibration” procedure.

Except those specifications marked with the word **Typical**, all specifications can be up to.

Sampling

Sampling modes	Normal sampling Peak detection Average value
Sampling rate	100 MSa/s

Input

Input coupling	DC, AC
Input impedance	1M Ω ±2% connected in parallel with 20pF±5pF
Probe attenuation coefficient	1X, 10X, 100X, 1000X
Max. Input voltage	400V (peak)
Channel delay time (typical)	150ps

Horizontal

Sampling rate range	10S/s~100MS/s
Waveform interpolation	(sin x) /x
Record length	6K points on each channel
Scanning speed range (S/div)	5ns/div~5s/div, stepping in the “1-2.5-5” mode.
Sampling rate and relay time accuracy	±100ppm(any time interval which is equal to or larger than 1ms)
Time interval (ΔT)measurement accuracy (full bandwidth)	Single: ±(1 sampling interval time+100ppm×reading+0.6ns) >average 16 : ±(1 sampling interval time +100ppm × reading+0.4ns)

Vertical

Analog digital converter (A/D)	With the resolution of 8 bits, make sampling on both channels synchronously.
Sensitivity range (V/div)	5mV/div~5V/div (at the input BNC)
Displacement range	±50V(500mV~5V), ±1V(5mV~200mV)
Analog bandwidth	20M
Single bandwidth	Full bandwidth

Low frequency response (AD coupling, -3dB)	$\geq 5\text{Hz}$ (at the BNC)
Rise time (typical one at the BNC)	$\leq 17.5\text{ns}$
DC gain accuracy	$\pm 3\%$
DC measurement accuracy (average value sampling mode)	The voltage difference (ΔV) between any two points on the waveform after averaging the captured waveforms more than 16: $\pm (5\% \text{ reading} + 0.05 \text{ divisions})$.

Trigger

Trigger sensitivity (Edge triggering)	DC coupling	CH1 and CH2: 1div(DC~full bandwidth)
	AC coupling	Same as the DC coupling when it is equal to or larger than 50Hz.
Triggering level range		± 6 divisions from the screen center
Triggering level accuracy (typical) which is applicable to the signal with rise and fall time equal to or longer than 20ns		± 0.3 divisions
Trigger displacement		655 divisions for pre-triggering and 4 divisions for post-triggering
Make a 50% level setting (Typical).		Operation with the input signal frequency equal to or larger than 50Hz.
Trigger sensitivity (Video triggering and typical mode)		2 divisions of peak-to-peak value
Signal system and line/field frequency (Video triggering mode)		Support the NTSC, PAL and SECAM broadcasting systems of any field or line frequency.

Measurement

Cursor measurement	Voltage difference (ΔV) and time difference (ΔT) between cursors
Auto measurement	Peak-to-Peak voltage, mean voltage, root mean square value, frequency and period.

Probe

	1X position	10X position
Bandwidth	Up to 4 MHz (DC)	Up to full bandwidth (DC)
Attenuation rate	1: 1	10: 1
Compensation range	10pf~35pf	
Input resistance	1M Ω $\pm 2\%$	10M Ω $\pm 2\%$
Input impedance	85pf~115pf	14.5pf~17.5pf
Input voltage	150 V DC	300 V DC

8.1.1. Meter

Voltage (VDC)

Input Impedance: 10M Ω .

Max. Input Voltage: 1000V (DC or AC peak-to-peak value)

Range	Accuracy	Resolution
400 mV	+/- 1.5% +/-2 digit	100 μ V
4 V	+/- 1% +/-1 digit	1 mV
40 V		10 mV
400 V		100 mV

Voltage (VAC)

Input Impedance: 10M Ω

Max. Input Voltage: 750V (AC, virtual value)

Frequency range: from 40Hz to 400Hz.

Display: Virtual value of the sine wave

Range	Accuracy	Resolution
4 V	+/- 1% +/-3 digits	1 mV
40 V		10 mV
400 V		100 mV

Direct Current (DC)

Range	Accuracy	Resolution
40 mA	+/- 1.5% +/- 1 digit	10 μ A
400 mA	+/- 1.5% +/- 1 digit	100 μ A
20 A	+/- 3% +/- 3 digit	10 mA

Alternating Current (AC)

Range	Accuracy	Resolution
40 mA	+/- 1.5% +/- 3 digit	10 μ A
400 mA	+/- 2% +/- 1 digit	100 μ A
20 A	+/- 5% +/- 3 digit	10 mA

Resistance

Range	Accuracy	Resolution
400 Ω	+/- 1% +/-3 digit	0,1 Ω
4 K Ω	+/- 1% +/-1 digit	1 Ω
40 K Ω		10 Ω
400 K Ω		100 Ω
4 M Ω		1 K Ω
40 M Ω	+/- 1,5% +/-3 digit	10 K Ω

Capacitance

Range	Accuracy	Resolution
51,2 nF	+/- 3% +/-3 digit	10 pF
512 nF		100 pF
5,12 μ F		1 nF
51,20 μ F		10 nF
100 μ F		100 nF

Diode

Voltage reading: 0 V \sim 1.5 V.

On-off Test

There is a beep sound when the on-resistance is less than 30 Ω .

8.1.2. General Specifications

Basic parameter

Mechanical dimension	18 cm \times 11.5cm \times 4cm
Weight	645 g
Power consumption	< 6 W
Display type	3.8" color liquid crystal display
Display resolution	320 (horizontal) \times 240 (vertical) pixels
Display color	4096 colors

Power Adapter

Power supply	100-240 V AC 50/60Hz
Power output	8.5 VDC
Current output	1500 mA

Operation




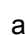
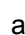
Used battery	0 to 50 °C (32 to 122 °F)
Power adapter	0 to 40 °C (32 to 104 °F)
Storage	-20 to +60 °C (-4 to 140 °F)

8.2. Storage of Oscilloscope

If the test tool is to be stored for a long time, it is required to charge the lithium battery before storage.

Charging the oscilloscope

The lithium battery is possibly not charged when delivery. To make the battery with enough electric quantity, it must be charged for 4 hours (the test tool must be turned off during charging). The battery can supply power for 4 hours after being charged completely.

When supplying power by using the battery, a battery indicator is displayed on the top of the screen to show the consumption condition of electric quantity. The symbols that are possibly appear include , ,  and , where  shows that the battery can only be used for about 5 minutes. To charge the battery and power the instrument, connect the oscilloscope using a power adapter according to Figure 1 to charge the battery. The charging speed can be increased by turning off the test tool.

NOTICE:

To avoid superheat of battery during charging, the environment temperature is not allowed to exceed the permissible value given in technical specification.

NOTE:

No hazard will occur even connecting the charger for a long time, e.g. during a whole weekend. The instrument can automatically switch to slowly charging status.

8.2.1. Replacing the Lithium Battery Unit

It is usually not required to replace the battery unit. But when it is required to replace it, only qualified personnel can carry out this operation, and only use the same specification lithium battery.

All rights, also for translation, reprinting and copy of this manual or parts are reserved.

Reproduction of all kinds (photocopy, microfilm or other) only by written permission of the publisher.

This manual considers the latest technical knowing. Technical changings which are in the interest of progress reserved.

We herewith confirm, that the units are calibrated by the factory according to the specifications as per the technical specifications.

We recommend to calibrate the unit again, after one year.