


METRA HIT 27M/I, H+E CAR

Sicherheitshinweise – Safety Instructions – Instructions de sécurité




Siehe ausführliche Bedienungsanleitung 3-349-207-02 !
See Standard Operating Instructions 3-349-207-02 !
Voir mode d'emploi standard 3-349-207-02 !


Ein-/Ausschalten – Switching on/off – Allumage/Arrêt

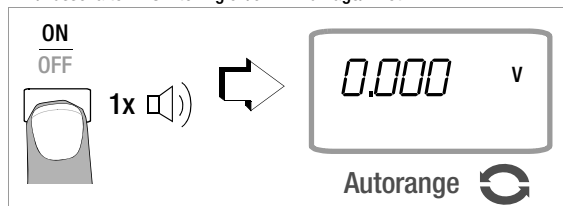

Batterietest – Battery Test – Test de la pile

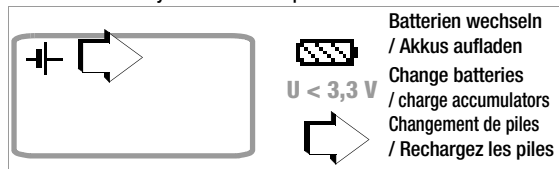

Wahl der Messfunktion – Select Measuring Function – Sélection de la fonction de mesure

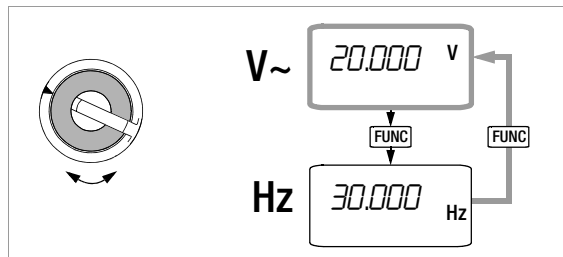

Messbereichswahl / Measuring Range Selection / Sélection de la gamme de mesure:


automatisch → manuell – automatic → manual – automatique → manuelle
! MAN ! = schnelle Messung / fast measurement / mesures vites



MAN
AUTO




kurz
short
bref

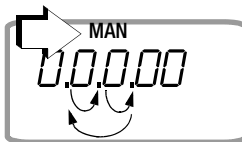


mΩ@1A

manuell → automatisch – manual → automatic – manuelle → automatique

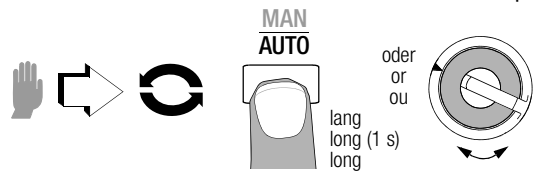


Messeingänge – Measuring Inputs – Entrées de mesure


- ⊥ Masse-Eingang Sense nur für 4-Leiter-Messung bei mΩ/Ω@1A
- ⊥ Mass Input Sense for 4-wire connection only with mΩ/Ω@1A
- (Common Terminal) Détection uniquement pour mesure à 4 fils sur mΩ/Ω@1A
- ⊥ Entrée de masse

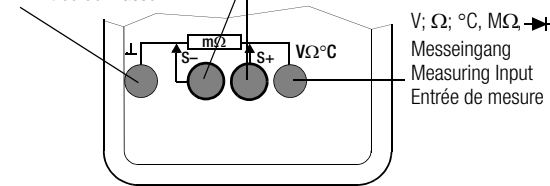


Messwertspeicherung – Storage of Measured Values (DATA-Hold/-Compare)
 – Mémorisation des valeurs de mesure

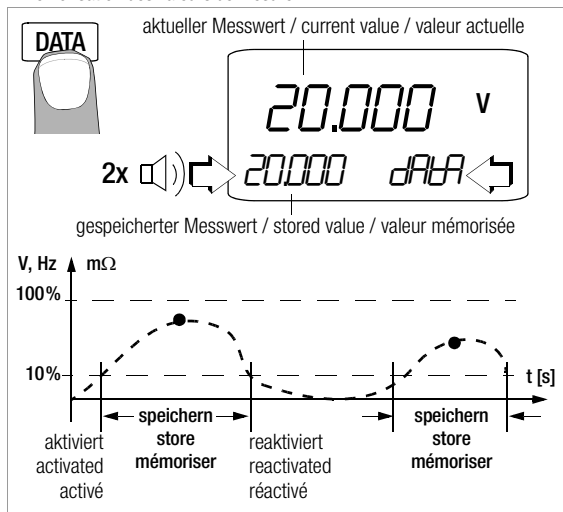


NullpunktEinstellung – Zero balancing – Réglage du zéro

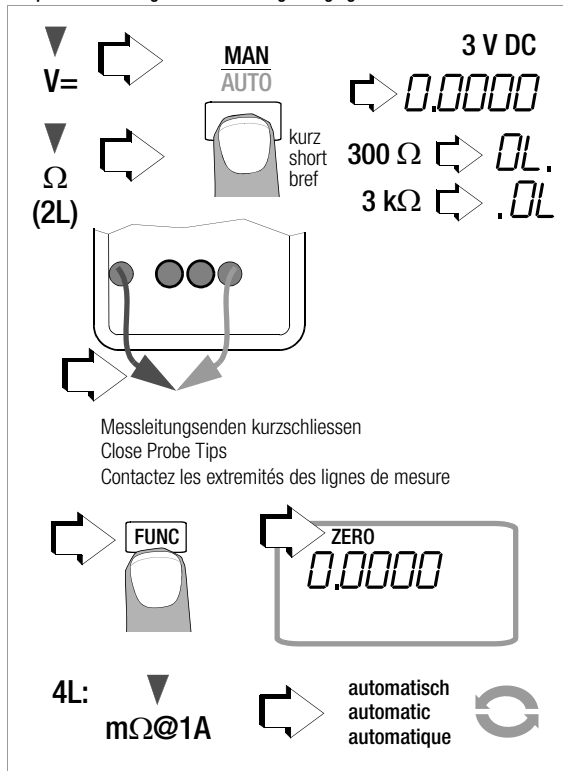

Spannungsmessung – Voltage Measurement – Mesure de la tension
 Frequenzmessung – Frequency Measurement – Mesure de la fréquence

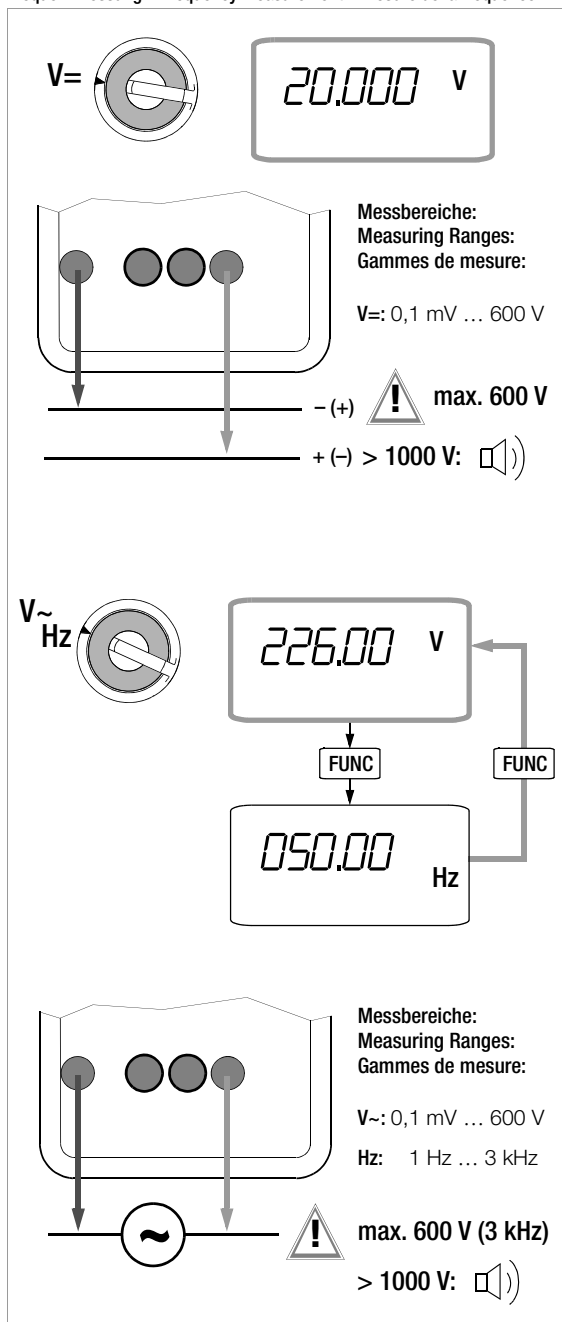

Widerstandsmessung – Resistance Measurement – Mesure de la résistance
Diodentest – Diode Testing – Test de diodes
Durchgangsprüfung – Continuity Testing – Test de continuité

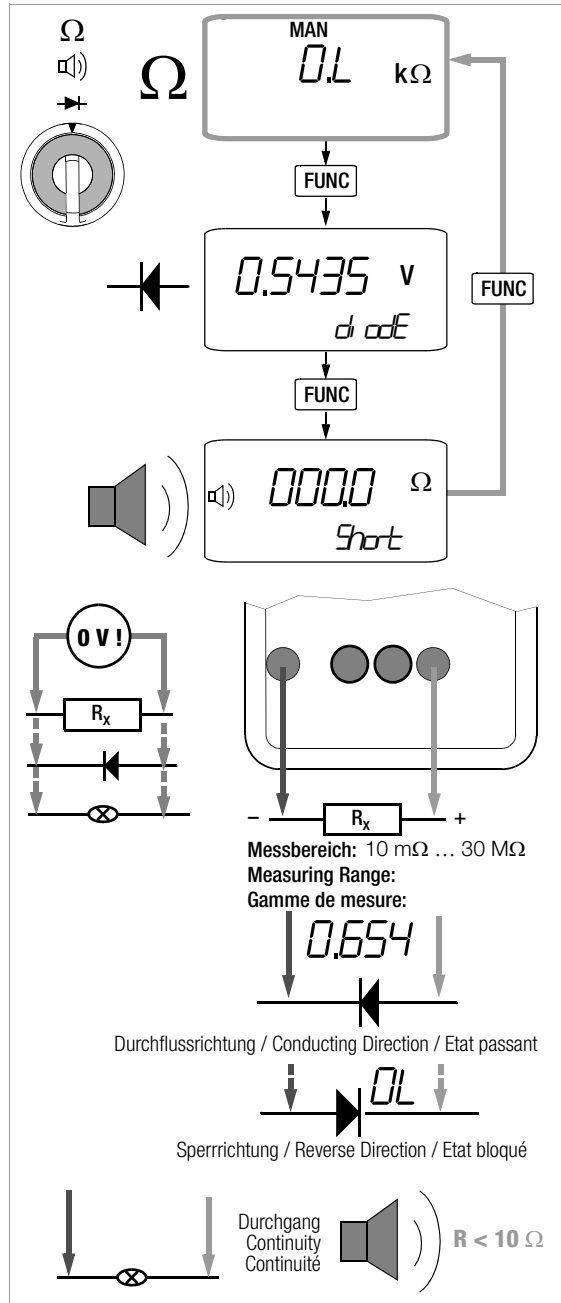

Milliohm-messung – Milliohm Measurement – Mesure de résistance en milliohms

