



MicroLab Lite Installation Guide

February 2007

This document contains instructions for downloading and installing the MicroLab Lite software, supporting Fourier Systems' **MicroLite** USB data logger.

System Requirements

To work with MicroLab Lite your system should be configured with the following:

Software


- Windows 98, Windows 2000, Windows ME, Windows XP
- Internet Explorer 5.0 or higher

Hardware

- Pentium 200 MHz or higher
- 32 MB RAM (64 MB recommended)
- 10 MB available disk space for the MicroLab Lite application

Installation Procedure


1. Download the (free) MicroLab Lite software from the Fourier Systems website.
 - a. Copy the following link to your Web browser:
http://www.fouriersystems.com/files/download_center/MicroLab_Lite_3.6.2_English_11.02.2007.zip
 - b. Save the zip file to your desktop. Once downloaded extract the contents of the zip file, using any standard compression software, to a folder on your desktop.
2. Run the **Setup.exe** file to begin the software installation. The Silicon Laboratories USB driver is first installed.
3. USB driver installation will begin automatically. Simply follow the on-screen instructions to continue the installation process.

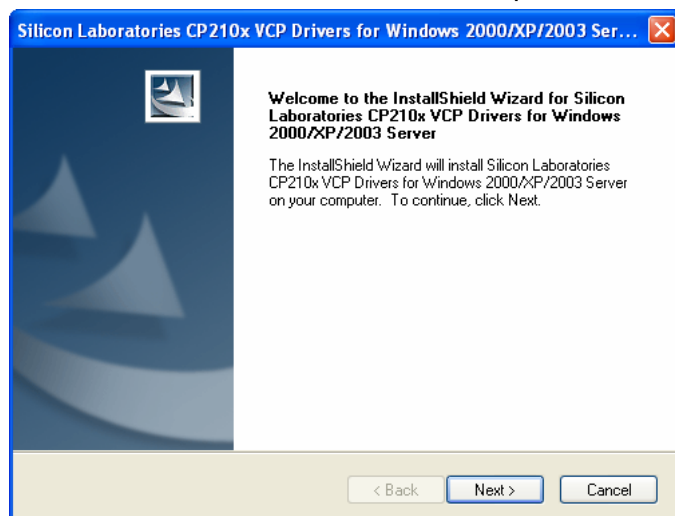

4. Click **Finish** when installation of the USB driver is complete.




5. The MicroLab Lite software installation wizard will now begin. Follow the on-screen instructions to continue the installation process.

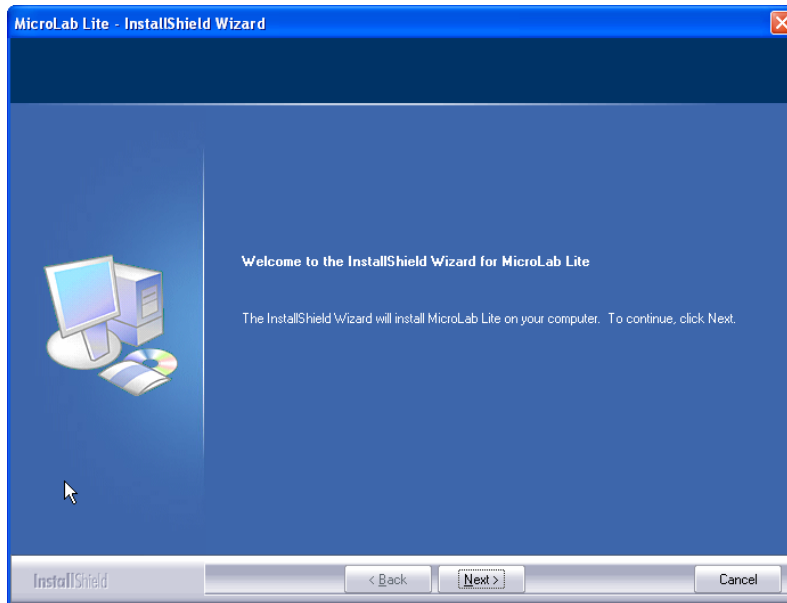

6. Click **Finish** to close the InstallShield Wizard dialog.
7. Now connect the MicroLite to a USB port on your PC. The PC will automatically detect the MicroLite as new hardware and open the **Found New Hardware Wizard**.

Note: These instructions are written for Windows XP users.

 8. Select the **No, not this time** to prevent Windows from searching for drivers on the Internet, and then click **Next**.
9. In the next dialog, select **Install from a list or specific location (Advanced)**.
10. Select the **Include this location in the search:** checkbox and browse to the following path: `C:\SiLabs\MCU\CP210x\Windows_2K_XP_S2K3`. Click **Next**. Windows will automatically detect and copy the necessary files to your system.
11. Click **Finish**. Windows will open the **Found New Hardware Wizard** for the second time. Repeat steps 8 to 10 above.
12. Click **Finish** to complete the installation.

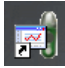13. Double click the MicroLab Lite shortcut on your desktop  to launch the software. If the MicroLite is connected to the PC the software will automatically detect it.

Note: Please refer to the MicroLite manual for further operating instructions.