


## Dismantling the vessel

1. Loosen both white locking screws.
2. Hold each electrode in turn, and unscrew, and remove the sliding arm from each electrode.
3. Remove both electrodes from the vessel.
4. Wash hands, and clean and dry the vessel as specified in ASTM D.877.

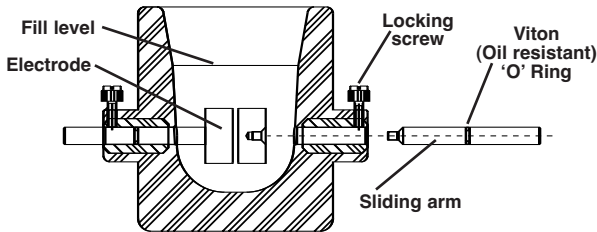

## Re-assembling the vessel

1. With clean, uncontaminated hands, place the cleaned electrodes in the vessel.
2. Position each electrode in turn with the fingers, and screw in a sliding arm through the vessel into the each electrode in turn.
3. Centre the electrodes, and set the gap, using the appropriate gauge.
4. Ensuring that the Viton 'O' rings are not fouled, hand tighten both locking screws.